

Installation Instructions for 41480

Voltmeter Gauge

LED Bar Graph

*** Always disconnect the battery before attempting any electrical work on your vehicle.***

DESCRIPTION AND FEATURES

JEGS LED voltmeter is compatible with any vehicle. The microprocessor provides accurate readings from 12v-16v.

WIRING INSTRUCTIONS

Note: Automotive circuit connectors are the preferred method of connecting wires. However, you may solder if you prefer.

Ground - **Black** Connect directly to the engine block.

Power - **Red** Connect to a switched +12V source, such as the ignition.

Dimmer - **Purple** Connect to the parking lights to dim the LEDs 50% when the headlights are on. However, **do not** connect to the headlight rheostat control wire; the dimming feature will not work properly. If you don't want your display to dim with the headlights, connect the wire to an engine ground.



1-800-345-4545 jeps.com