

## ***Installation Instructions for 60168***

### ***EZ Oil Drain Valve***

***1/2"-20 UNF***

#### **How to Install:**

1. Remove drain plug and drain oil
2. Hand install the valve until tight, and give 1/8 turn with a small crescent wrench on the body. **(DO NOT OVER-TIGHTEN!)**
3. Close the lever and refill with engine oil

#### **How to Drain Oil:**

1. Lift up the lever and turn counter-clockwise.
2. Turn back the lever to close.
3. Make sure the lever is fully-closed and secured in its locked position.

#### **Note:**

1. Adapter 555-60169 may be required for recessed oil pans.
2. For users under extreme conditions such as, off-road vehicles, agricultural tractors, and logging equipment (i.e. corn fields, brush areas), it is advised that a hose clip be applied for additional safety and security. Hose clips will securely keep the lever closed in the locked position at all times.



**1-800-345-4545 [jeps.com](http://jeps.com)**