

Installation Instructions for 79024


Cross Beam Adapter

2-Ton Capacity

- 1) Cross beam adapter is for use with floor jacks only.
- 2) When unpacking be sure all parts are included and in good working condition.
- 3) Do not dismantle, use chains (8) to move beams (5).
- 4) Loosen the bolt (7) then remove washer (9).
- 5) Fix the cross beam adapter to the floor jack, and fasten with bolt (7) and washer (9).
- 6) Movable beams (5) should be extended equal distance for proper balance.

WARNING! Misuse may lead to injury and/or an accident.

- 7) **WARNING! Do Not Overload!** Maximum capacity is 2 tons.

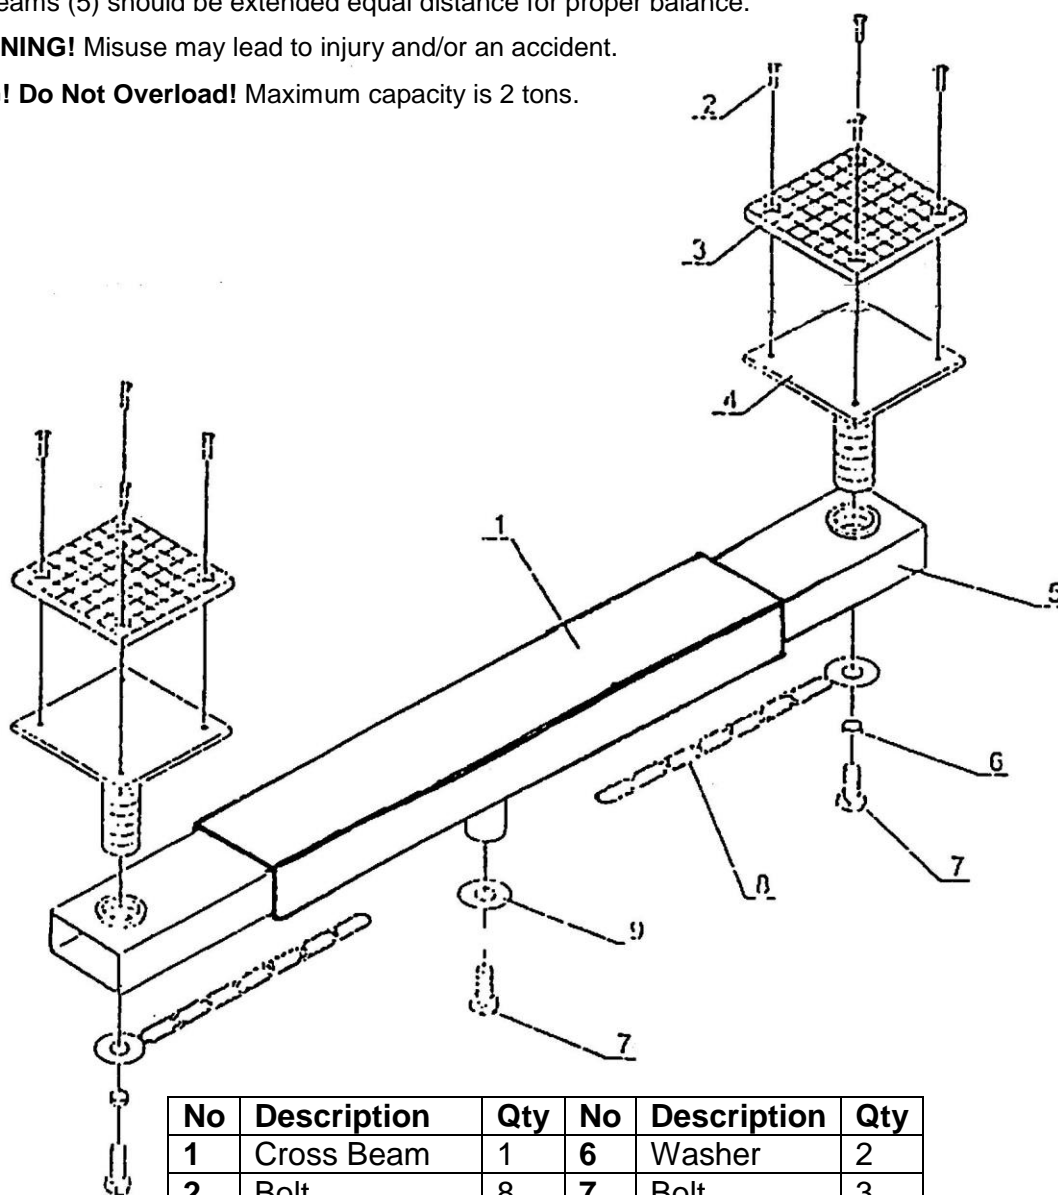

No	Description	Qty	No	Description	Qty
1	Cross Beam	1	6	Washer	2
2	Bolt	8	7	Bolt	3
3	Rubber	2	8	Chain	2
4	Support Panel	2	9	Washer	1
5	Movable Beam	2			