

Installation Instructions for 80271

Oil Drain Tank

8 Gallon

Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

GENERAL SAFETY

WARNING! Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.

Familiarize yourself with the application, limitations and hazards of the oil drainer.

- Maintain the drainer in good condition (use an authorized service agent).
- Replace or repair damaged parts. Use genuine parts only. Unauthorized parts may be dangerous and will invalidate the warranty.
- Keep the work area clean, uncluttered and ensure there is adequate lighting.
- Keep the drainer clean for best and safest performance.
- Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- Keep children and unauthorized persons away from the work area.
- DO NOT use the drainer for any purpose other than that for which it is designed.
- DO NOT operate the drainer if any parts are damaged or missing as this may cause failure and/or personal injury.
- DO NOT stand on the drainer.
- DO NOT allow untrained persons to operate the drainer.
- DO NOT operate the drainer when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- When not in use, store in a safe, dry, childproof area.
- Dispose of waste oil in accordance with local authority regulations.

WARNING! DO NOT pollute the environment by allowing uncontrolled discharge of waste oil.

SPECIFICATIONS

Polyethylene reservoir, 8 gallon capacity, mounted on four castors for mobility.

Funnel, with filter, on height adjustable tube.

Hand grips for manual emptying.

Capacity:.....8 Gallon

Min. Height to Funnel:.....29.92 in.

Gravity Feed:.....Yes

Max. Height to Funnel:.....62.99 in.

ASSEMBLY

1. Connect Funnel (1) to the height adjustable upper tube (2).
2. Insert lower tube (3) into the polyethylene reservoir (6) and secure with the tightening screw (4).



1-800-345-4545 jeps.com

OPERATION

1. Place mobile oil drainer under the equipment to be drained. Raise the funnel (1) beneath the equipment's drain valve or vent.
2. When draining is complete, lower the drain pan before removing the drainer.

EMPTYING OIL DRAINER

1. Disconnect the funnel (1), the upper tube (2), and the lower tube (3) from the reservoir (6).
2. Using the hand grips, dispose of the waste oil.


WARNING! DO NOT pollute the environment by allowing uncontrolled discharges of waste oil.

IMPORTANT! Dispose of waste oil in accordance with local authority regulations.

MAINTENANCE

1. Clean the drain pan filter as necessary.
2. Clean the inside of the reservoir at regular intervals.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.
No liability is accepted for incorrect use of this product.

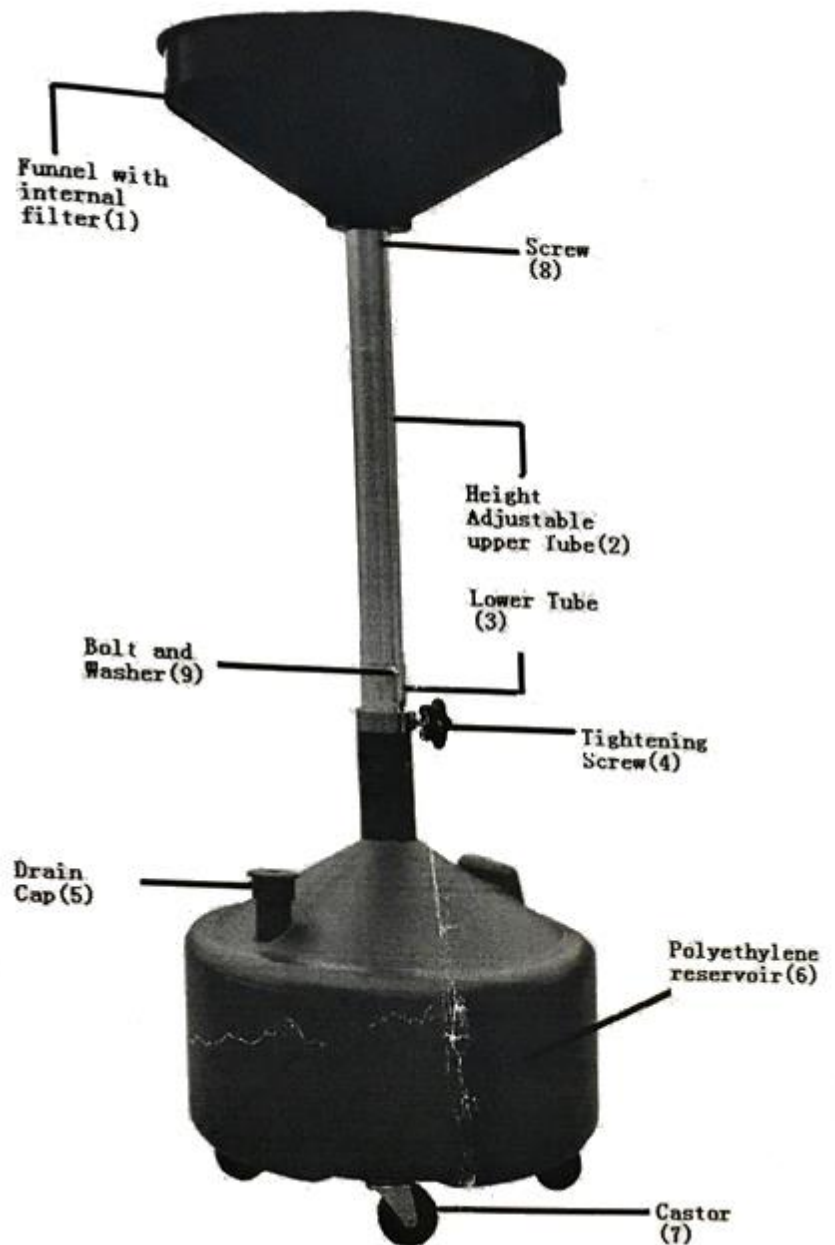

Part	Description	QTY
1	Funnel	1
2	Upper Tube	1
3	Lower Tube	1
4	Tightening Screw	1
5	Drain Cap	1
6	Polyethylene Reservoir	1
7	Castor	4
8	Screw	2
9	Bolt and Washer	1