

Installation Instructions for 80604 Plastic Razor Blades

General Guidelines for Use:

Plastic razor blades are designed with two sharp edges for scraping, cleaning and peeling. Quickly and easily removes undesired materials such as bird droppings, crusted dirt, dead bugs, decals, emblems, paint overspray, tape, tree sap and vinyl letters or graphics from delicate surfaces such as fiberglass or steel painted surfaces, plastics and window tint without damage. Not designed for cutting. Fits into most standard handheld razor blade holders. We recommend JEGS ergonomic scraper with storage cap #555-80603 for both leverage and comfort with either plastic or standard steel type blades.

Caution: Use with care as injury/damage can occur to you or the surface with improper use.

Instructions for Use:

1. Add an appropriate solvent to the surface being cleaned and wipe the blade clean after each pass to reduce the amount of contaminants and possibility of damage to the surface. Warm soapy water is an excellent softener for most materials being removed and it works as a lubricant for the blade further minimizing any potential damage to the surface area.
2. Test in the most inconspicuous area to achieve the proper blade angle while using mild pressure so as to not damage the surface area.
3. Remove material slowly. Lubricate the surface and blade liberally and continuously to ease removal and minimize damage to the surface area.
4. Plastic blades can also be used to remove adhesive residue with chemicals or organic based removers such as GooGone® or other orange type removers.
5. Be sure to thoroughly clean all surfaces once all material has been removed and use an appropriate cleaner/polish/wax to restore the surface to its original luster.



1-800-345-4545 jegs.com