

# **Installation Instructions for 81430**

## **Bench Top Powder Coating Oven**

**1600 Watt, 120 Volt**

When using electrical appliances, basic precautions should always be followed, which include the following:


1. Read all instructions.
2. Do not touch hot surfaces.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the appliance in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, or adjustment.
7. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
8. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
10. To disconnect, turn the control to OFF, before removing the plug. Always hold the plug, but never pull the cord.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Do not clean the appliance with metal scouring pads.
15. Never leave the appliance unattended while broiling or toasting.
16. Oversized foods or metal utensils must not be inserted into the appliance as they may create a fire or risk of electric shock.
17. Do not place any item onto the oven or cover the oven with inflammable material during operation as it may cause fire.
18. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
20. Do not store any materials, other than manufacturer recommended accessories, in this oven when not in use.
21. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. Do not use appliance for other than its intended use.
23. This appliance is for HOUSEHOLD USE only.



**1-800-345-4545 [jeps.com](http://jeps.com)**


## LIST OF COMPONENTS

1. Thermostat dial
2. Selector dial
3. Indicate light
4. Timer dial
5. Glass door
6. Bake tray
7. Wire rack
8. Bake tray handle

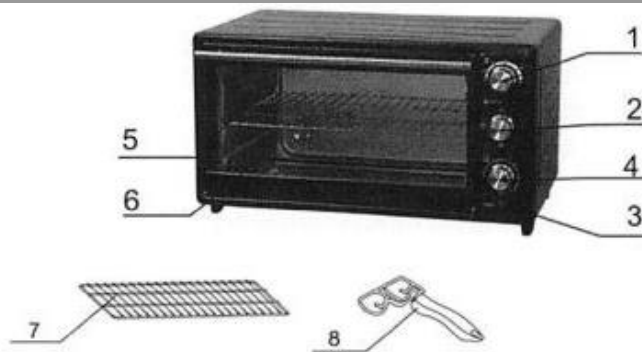

## SELECTOR DIAL

1. OFF
2. Upper heating tube
3. Lower heating tube
4. Upper & lower heating tube

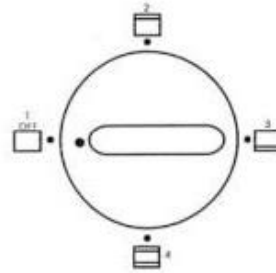

## BEFORE USE

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
- Be aware that the feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

## USE

- Turn the thermostat dial clockwise to the desired temperature.
- Turn the selector dial to the desired position.
- Turn the timer dial clockwise to the desired cooking time.
- The indicate light will light up until the desired temperature is reached.
- When the cooking procedure is done, turn the timer back to turn off the oven.

## OVEN USE

- Press the oven/hotplate switch to the middle position.
- Turn the thermostat dial clockwise to the desired temperature.
- Turn the selector dial to the desired position.
- Turn the timer clockwise to the desired cooking time. The oven indicator will light until the desired temperature is reached.
- When the cooking time is over, the timer will auto shut off and the bell will ring.
- If the cooking is finished earlier than the set cooking time, please turn the timer back to turn off the oven.

## AFTER USE

- Turn off the oven to allow it to cool off.
- Set the selector dial to OFF position.
- Unplug the appliance from the outlet.

## MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool before cleaning.
- If stains still appear, it is recommended to use soap.
- Clean Appliance interior with a clean damp cloth.

- The crumb tray can be removed for easier cleaning by pulling out from the front under the door.
- To clean the appliance, wipe with soft cloth or sponge dipped in neutral cleaning solution. Do not use hard brush, it may scratch surfaces. Wash baking and grill tray in hot water with sponge after each use.
- Do not use abrasive cleaner like thinner or solvent to clean the appliance.
- 

**SAFETY PRECAUTION:**

- Children should be supervised to ensure that they do not play with the appliance
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- Remove the electric wire (power cord) from the main electric if have any damage, don't use the product if the wire (power cord) has damage and should take to service center to replace or repair.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system

Due to the constant development of our product functionality and design, we reserve the right to make changes to the product without prior notice.



**1-800-345-4545 [jegs.com](http://jegs.com)**