

900W STEAM CLEANER

Stock Number W50079

OWNERS MANUAL



⚠ WARNING!

It is the owner and/or operators' responsibility to study all WARNINGS, operating, and maintenance instructions contained on the product label and instruction manual prior to operation of this steam cleaner. The owner/operator shall retain product instructions for future reference.

The owner and/or operator are responsible for maintenance, maintaining all decals or warning labels and while in use, maintaining the unit in good working order. If the owner and/or operator are not fluent in English, the product warnings and instructions shall be read and discussed in the operators' native language by the purchaser/owner or his designee. Make sure that the operator comprehends its contents. Safety information shall be emphasized and understood prior to usage. The tool shall be inspected per the operating instructions.

Protect yourself and others by observing all safety information.

Failure to comply with instructions could result in personal injury and/or property damage!

If you encounter any problems or difficulties, please contact our customer service department at: 1-800-426-1262 between 6:30 a.m. and 4:30 p.m. Pacific time.

PT

Performance Tool

Please read these instructions carefully and retain them for future use.

On occasion, after printing of our literature is completed, our manufacturers may make changes and/or modifications to merchandise which will not be reflected in this manual. Although we strive to maintain complete and accurate information, it is possible in some instances, that the product may differ slightly from printed specifications. Illustrations are intended for reference only. Actual merchandise may vary. Wilmar is not responsible for typographical errors.

Performance Tool®

SPECIFICATIONS

Rated Voltage/Frequency:..... 120V/60Hz
Rated Power: 900W
Power Cord: 10ft/3M SVT/3, grounded
Input Power: 120V AC, 60Hz
Working pressure: 45PSI
Max. Volume: 10oz. (300ml)
Heating time: 3-4 min
Continuous use: 8-10 min

Specifications are subject to change without notice

IMPORTANT SAFETY INFORMATION

▲ WARNING! READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS, AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

▲ WARNING! Danger of burns and/or scalding.

▲ CAUTION!

1. Keep out of reach of children and do not use near anyone or anything not equipped with proper safety gear; safety glasses, heat resistant gloves, protective outer clothing, etc.
 2. To prevent electrical shock, do not immerse power cord or power plug in water or other liquids.
 3. The power cord and plug should be in good condition and must not be damaged. Damaged or defective power cords and plugs must not be used and should only be repaired by a qualified electrician.
 4. This product is for use only in households and must not be used for industrial applications.
 5. Do not turn on power supply until the tank is full of water.
 6. During operation, ensure the safety cap is on as securely as possible.
 7. In use, the machine body must not be inclined at more than 45 degrees, or boiling water will be sprayed out together with steam.
 8. Never direct the steam towards persons, animals or electrical products.
 9. Before refilling with water, always unplug the machine. As soon as you have finished using the machine it must be unplugged, it should only ever be plugged in when in use.
 10. Only use water in the tank, do not add any rust remover, odor counteracting agent, alcohol or detergent into the tank, this will cause damage to the tank.
 11. Never open the supply tank during operation.
- **IMPORTANT:** never overfill the tank, otherwise the steam will not be generated properly

APPLICATIONS

- Disinfection and sterilization: Recommended accessory: long nozzle, or long nozzle with extension. The high-temperature steam will kill bacteria.
- Cleaning clothes: Recommended accessory: wide nozzle with towel attachment. Hang clothing up in a safe area. Press the steam button and move the brush up and down and left and right until stains should come out of clothes.
- Cleaning doors and windows: Recommended accessory: wide nozzle with squeegee attachment. Aim the spray nozzle at the door/window, and press the steam button moving the brush over area to be cleaned.
- Cleaning the floor boards: Recommended accessory: extension with angled nozzle. Use the angled nozzle to target specific areas that need cleaning. Aim using the extension in one hand and the steam cleaner in the other.

CONTENTS

1. Steam Cleaner Unit
2. 6 in. Long, 5 in. Wide Nozzle
3. 6.5 in. Straight nozzle
4. 20 in. Flexible Nozzle Extension
5. Measuring Cup
6. Cloth towel Attachment
7. Funnel
8. 1 in. Brush Nozzle
9. 90° Angle Nozzle
10. 8 in. Squeegee Attachment



OPERATION

Set Up

1. Unpack the product, check the accessories and manual supplied with the product and ensure that there are no damaged or missing parts.
2. Before use, please read the User Manual carefully. The steam cleaner is not designed for use in industrial environments. Consult a professional.
3. Place the steam cleaner on a level platform, push down the safety cap, unscrew cap counterclockwise, and then install the funnel.
4. Fill measuring cup with 6 oz. (175ml) of clean water and add the water into the tank.
NOTE: (Tank capacity is 10 oz. (300ml). Leave some excess space in the tank. Do not overfill.
5. Re-install the safety cap and tighten.
6. Please install suitable accessories before plugging in steamer.
7. Check the power supply and socket, and confirm they comply with the requirements given in the User Manual. Turn on the power supply.
8. Allow approximately 4 minutes after power supply is turned on, then lightly press the trigger to check for sufficient steam. (Do not aim the spray nozzle at other persons or objects).
9. If there is steam sprayed out it is ready to use. Press trigger as needed to release steam.

OPERATION CONT.

INSTALLING ACCESSORIES

- For larger accessories (flexible extension, long spray nozzle, squeegee), each has a locking tab connection to ensure a proper seal and secure attachment. To install an attachment:
 1. Place the desired accessory onto the steam cleaner.
 2. Turn slowly while pressing lightly until the tab aligns with the accessory.
 3. Press and turn clockwise. There should be a tight fit after a slight clockwise turn.
- For the smaller brush and angle accessories press the open end onto the steam cleaner nozzle firmly, until accessory is secure. NOTE this will only engage the outer clear o-ring, not the inner red o-ring.
- To use the flexible extension hose, follow directions 1-3 above, and the repeat accordingly depending on which accessory you intend to use.
- The squeegee and towel accessories are designed for use the 6 in. x 5 in. wide brush attachment.
 1. Towel – pull the towel over the outer edges of the wide brush. It is designed to be a snug fit
 2. Squeegee – place the two small tabs on the back end of the squeegee into the loops on the back end of the wide nozzle, then press the front of the wide nozzle so it snaps into the clip at the front of the squeegee.
- Reverse directions to remove any accessory

REFILL WATER DURING OPERATION

1. Unplug the power cord and disconnect the power supply.
2. Press down the trigger to release the pressure until no more steam is dispensed.
3. Slowly unscrew the safety cap but do not remove it, any residual steam will be discharged slowly until no steam comes out. Then place the steam cleaner in a cool place to cool it down for about five minutes.
4. Finally, completely remove the safety cap.
5. Use the funnel and measuring cup to refill a suitable quantity of cold or hot water into the tank.
6. Re-install the safety cap onto the steam cleaner body and tighten it in position.

CLEANING/STORAGE

1. Repeats steps 1-4 above.
2. Empty the residual water in the tank and clean the external surface with a piece of dry cloth.
3. Re-install the safety cap onto the steam cleaner body and tighten it in position.
4. Notes: Re-install the safety cap onto the steam cleaner body and tighten it in position.

WARNING: NEVER REMOVE THE CAP OR ANY ACCESSORIES WHILE STEAM CLEANER IS IN USE.

1 YEAR LIMITED WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part (s) being returned. For part (s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products. Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above. The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.