



Throttle Body Spacer Installation Instructions

Toyota

Part #62170

- 1. Remove the plastic engine cover, pull up on the front and pull towards front of truck. Remove air intake assembly and intake box from throttle body.**
- 2. Remove the air intake tube from the throttle body and air box.**
- 3. Remove the coolant hose going to the throttle body.**
- 4. Remove the bolts that mount the throttle body to the intake.**
- 5. Install the JET Power-Flo spacer placing the gasket between the throttle body and the spacer with the supplied longer bolts and washers.**
- 6. Reinstall the Air Intake assembly.**

JET Performance Products – 17491 Apex Circle – Huntington Beach, CA 92647

Phone 714-848-5515 Fax 714-847-6290