




Crank Trigger Transducer Instructions

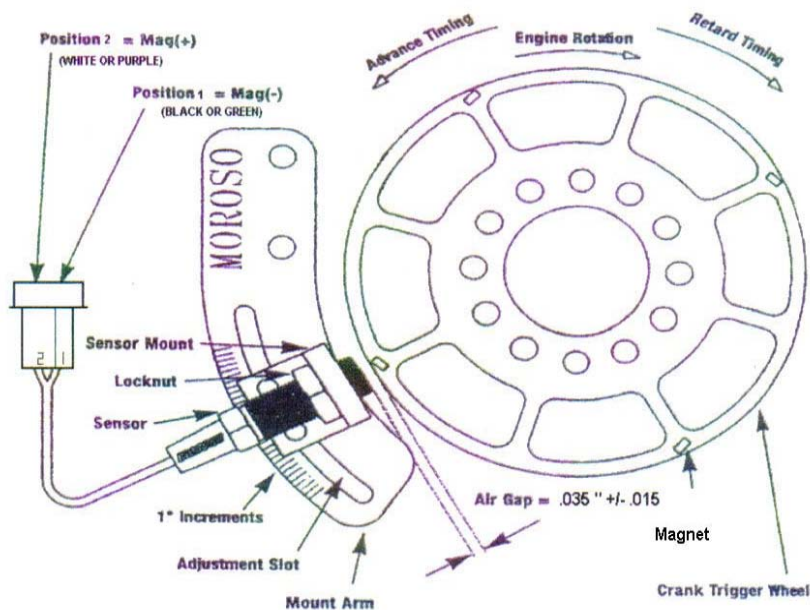

Before connecting any wires, please check the manufacturers wiring diagram of your ignition control amplifier. Check the wiring on the transducer connection carefully as described above.

The white or purple wire is the position #2 and is magnetic pickup positive (+). The black or green wire is position #1 and is the negative (-).

Air gap setting is .035" (+ / - .015").

Whenever a transducer is replaced or rewired, Moroso recommends that you check your ignition timing with a timing light.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906


Visit Us At www.moroso.com

REV.F
072911

60055INST



Crank Trigger Transducer Instructions

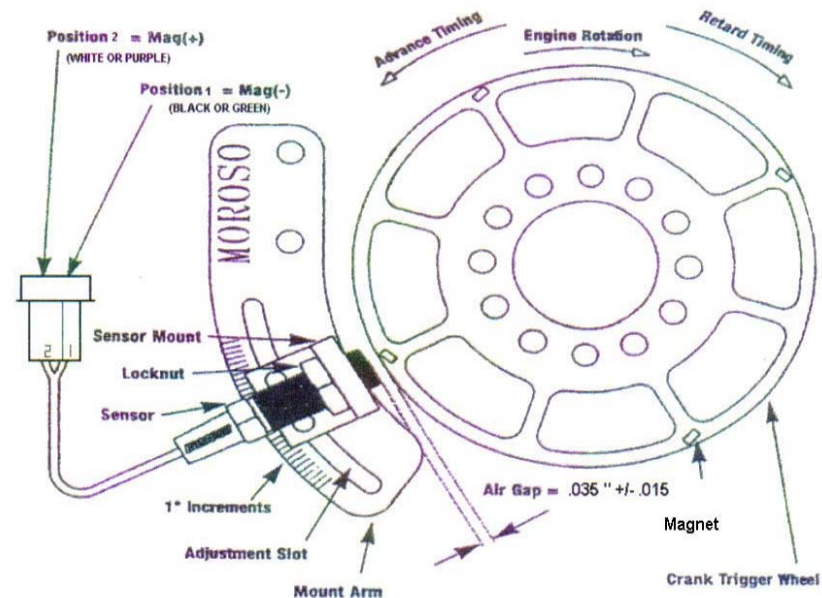

Before connecting any wires, please check the manufacturers wiring diagram of your ignition control amplifier. Check the wiring on the transducer connection carefully as described above.

The white or purple wire is the position #2 and is magnetic pickup positive (+). The black or green wire is position #1 and is the negative (-).

Air gap setting is .035" (+ / - .015").

Whenever a transducer is replaced or rewired, Moroso recommends that you check your ignition timing with a timing light.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

REV. F
072911

60055INST