

# INSTRUCTION SHEET

BERT/BRINN TRANSMISSION *XStorque* STARTERS (PART #9514)

## ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal. NOTE: Be sure to use at least a 12 AWG wire for this jumper.  
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



1833 Downs Drive, West Chicago IL 60185

Tech: (630) 849-7754

Sales: (630) 957-4019

Tech Email: [tech@powermasterperformance.com](mailto:tech@powermasterperformance.com)

# INSTRUCTION SHEET

BERT/BRINN TRANSMISSION *XStorque* STARTERS (PART #9514)

## ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal. NOTE: Be sure to use at least a 12 AWG wire for this jumper.  
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



1833 Downs Drive, West Chicago IL 60185

Tech: (630) 849-7754

Sales: (630) 957-4019

Tech Email: [tech@powermasterperformance.com](mailto:tech@powermasterperformance.com)