## Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND

#86 SWITCH #30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) closes circuit allowing current to pass through such as vehicle lighting, horns, or

fan motors #87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411

# Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON)
- interrupts current for short time such as radio when engine starts.



199R11411

#### Change-Over Relay #40100G - 2" x 3.5

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads.
WIRING DIAGRAM:

#85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) –

closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411

## Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM: #85 GROUND

199R11411

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411

## Change-Over Relay #40100G - 2" x 3.5

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND

#86 SWITCH #30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or

fan motors #87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411

# Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or

fan motors
#87a NORMALLY CLOSED CIRCUIT (ON)
- interrupts current for short time such as radio when engine starts.



199R11411

#### Change-Over Relay #40100G - 2" x 3.5

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads.
WIRING DIAGRAM:

#86 SWITCH

#30 BATTERY (+) #37 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON) interrupts current for short time such as radio when engine starts.



199R11411

## Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM: #85 GROUND

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411

## Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND

#86 SWITCH #30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or fan motors #87a NORMALLY CLOSED CIRCUIT (ON)

- interrupts current for short time such as radio when engine starts.



199R11411

# Change-Over Relay #40100G - 2" x 3.5

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or fan motors

#87a NORMALLY CLOSED CIRCUIT (ON)

— interrupts current for short time such as radio when engine starts.



199R11411

#### Change-Over Relay #40100G - 2" x 3.5

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads WIRING DIAGRAM:

#85 GROUND #86 SWITCH

#30 BATTERY (+) #37 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or fan motors #87a NORMALLY CLOSED CIRCUIT (ON)

- interrupts current for short time such as radio when engine starts.



199R11411

## Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM: #85 GROUND

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) –

closes circuit allowing current to pass through such as vehicle lighting, horns, or fan motors

#87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

Change-Over Relay

#40100G - 2" x 3.5"

#85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or fan motors
#87a NORMALLY CLOSED CIRCUIT (ON)

- interrupts current for short time such as radio when engine starts.



199R11411

# **Change-Over Relay** #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads. WIRING DIAGRAM:

#85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) —

closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON)

interrupts current for short time such as radio when engine starts.



199R11411

#### Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads.
WIRING DIAGRAM:

#85 GROUND

#86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) closes circuit allowing current to pass through such as vehicle lighting, horns, or

#87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411

## Change-Over Relay #40100G - 2" x 3.5"

Switches current from one user to another (opening to closing power window). Use wire gauge & fuse listed by component's mfg. Connector has 12 & 18 gauge leads.

WIRING DIAGRAM: #85 GROUND #86 SWITCH

#30 BATTERY (+) #87 NORMALLY OPEN CIRCUIT (OFF) – closes circuit allowing current to pass through such as vehicle lighting, horns, or fan motors

#87a NORMALLY CLOSED CIRCUIT (ON) - interrupts current for short time such as radio when engine starts.



199R11411