

Universal Light Bar Cradle Bracket Instructions

Universal Light Bar Cradle Bracket Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261 Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:		
Description	Qty.	
Universal Cradle Bracket	1	
Hardware Kit		
5/16"-18 x 1" Bolt	2	
5/16" Washer	2	
5/16"-18 Lock Nut	2	

Tools Needed:

- 3/16" Hex Wrench
- 9/16" Wrench
- 3/8" Drill Bit
- Drill

HARDWARE KIT QUANTITIES:		
Description (Cradle Bracket Kit Number)	Qty.	
2235, 2240, 2245	1	
2250, 2255, 2260, 2265, 2185, 2195, 2225, 2230	2	
2270	3	

Universal Cradle Bracket Installation

- 1. Remove cradle bracket from packaging. Check to see if all parts from above table are included. Also, verify light bar (purchased separately) fits into the universal cradle bracket.
- 2. Place cradle bracket in desired location (Verify location is structurally stable for the light bar and bracket). Mark holes evenly spaced along light bar through the slots. (The number of holes marked should match the number of bolts in your kit).
- 3. Drill 3/8" holes in the locations marked in step 2 and verify there are no obstructions behind hole being drilled.
- 4. Mount cradle bracket with the hardware provided. Use 3/16" hex wrench and 9/16" wrench to tighten hardware.
- 5. Mount light bar, refer to Light Bar Installation Instructions.

For light bar wiring instruction refer to Light Bar Installation Instructions

LIMITED 90 DAY WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.