


# Stealth Bar RSB

#### Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the accessory is installed in the correctly.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 30 mins


# **STEALTH**3/\R<sup>™</sup>

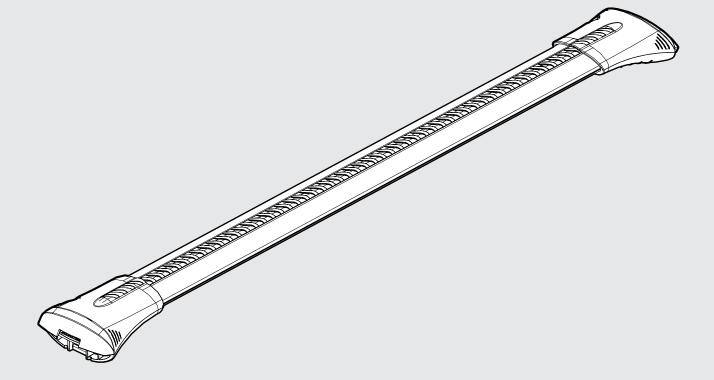


#### Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766 (02) 8846 1900 rhinorack.com.au Rhino-Rack USA Unit D, 2450 Airport Blvd, Aurora, CO, 80011 877-744-6622 rhinorack.com


Document No: R504 Issue No: 12 Issue Date: 14/07/2022

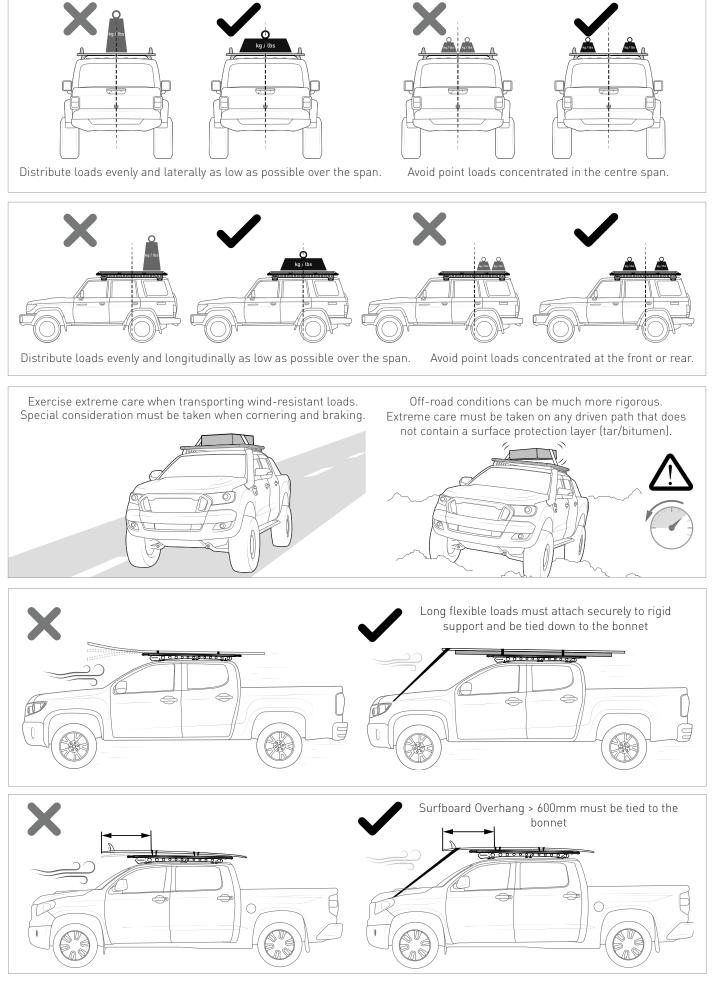

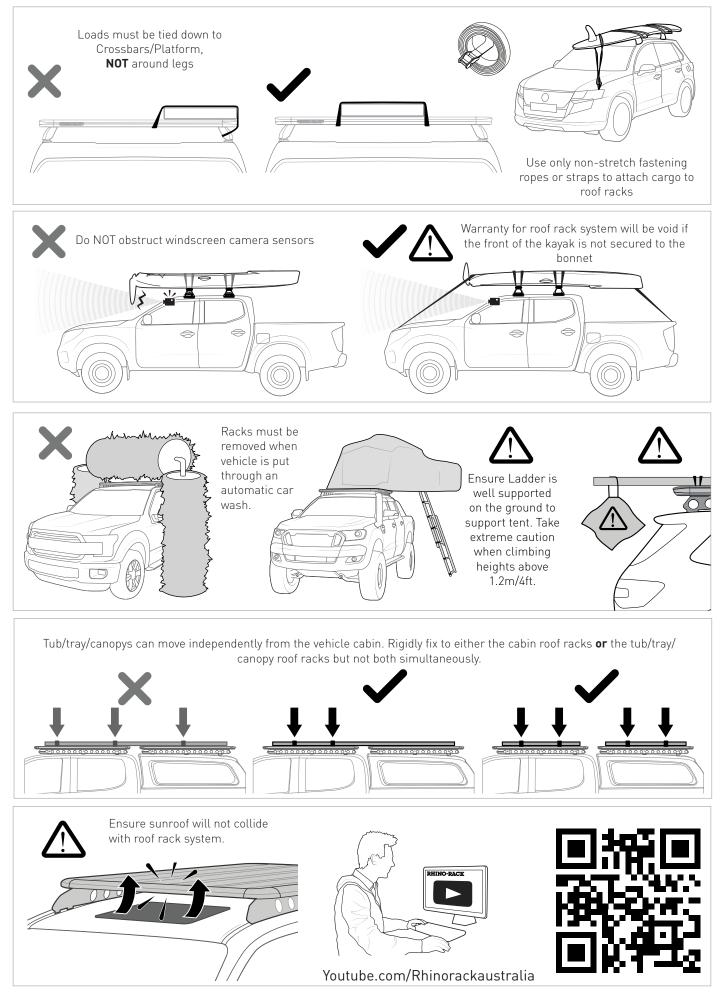

# **Carrying Capacity**

Check the website and the vehicle owners hand book for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distributed over the system.

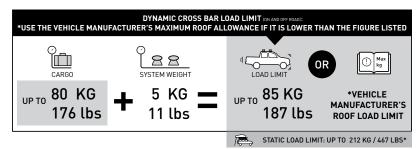

# In Service Maintenance Checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

#### **Torque Settings:**

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:




# **Note for Dealers and Fitters**

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

## **Product Width Range**

MAX.				
	STEALTHBAR	*Vortex Generating Strips QTY	MIN.	MAX.
	RSB02B - 785mm	2	905mm	986mm
<u> </u>	RSB03B - 845mm		962mm	1055mm
	RSB04B - 905mm	3	1005mm	1105mm
	RSB05B - 965mm		1075mm	1175mm

## Parts List

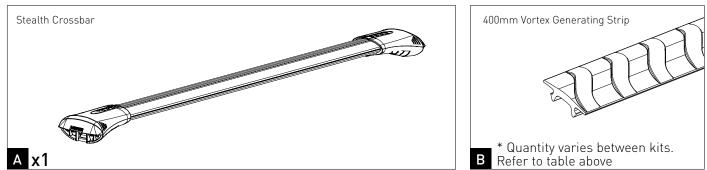


NOTES


#### **Tools Required**

T1 - Cloth T2 - Measuring Tape

**T3** - Scissors


\*\*RSK kit and a fit supplement sheet is required to complete installation

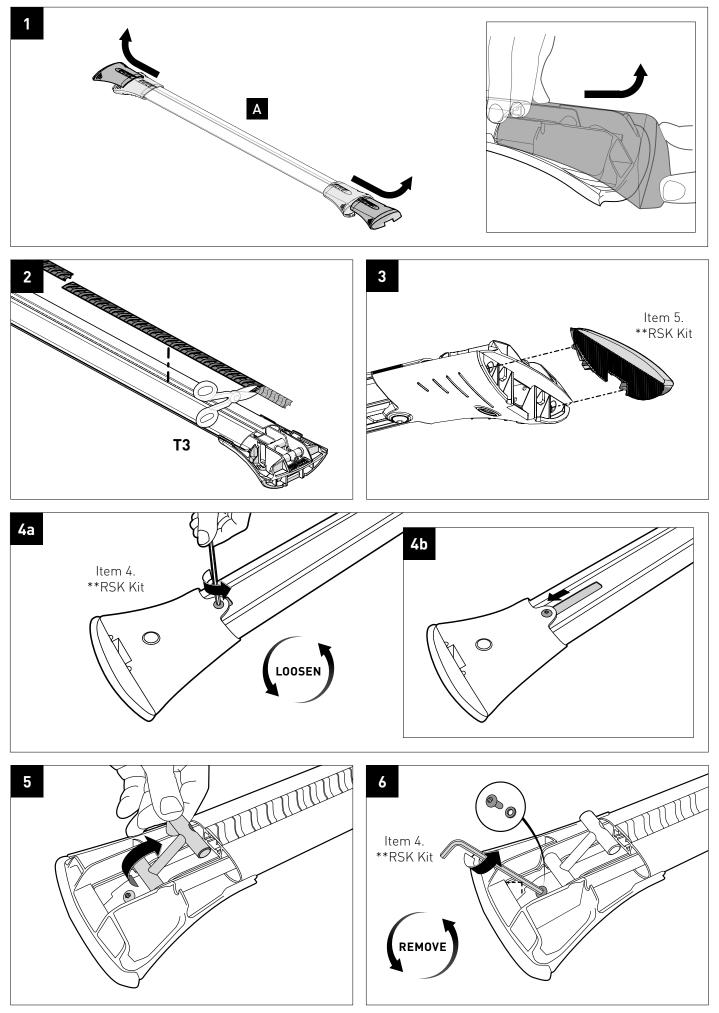


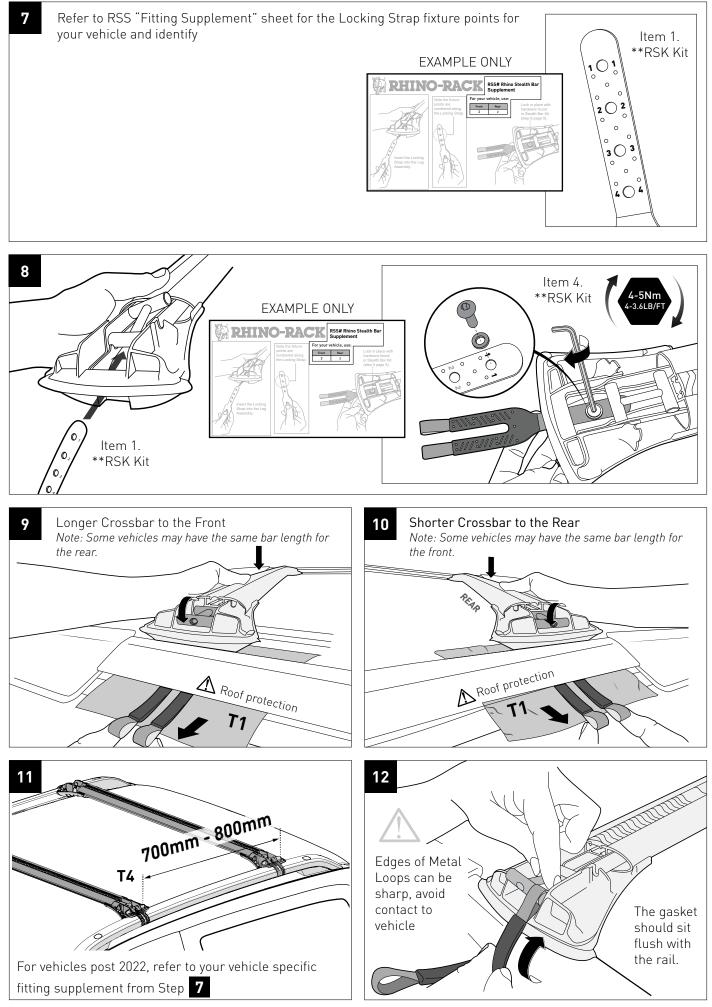






If the strap cannot reach the preassembled barrel, extend the barrel from the stud by removing and retightening.

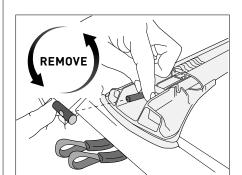


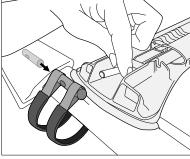


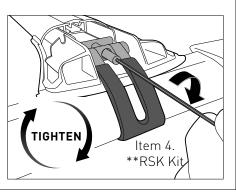


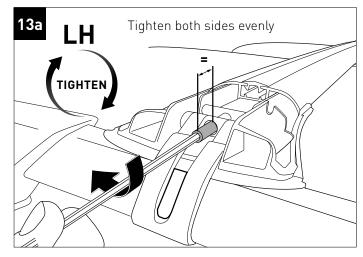

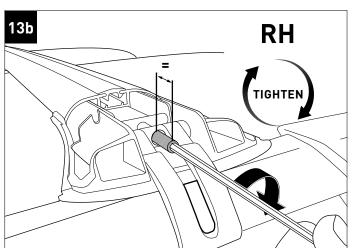

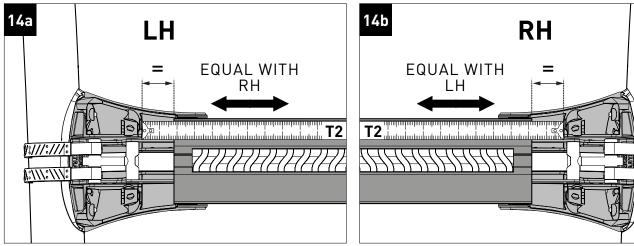

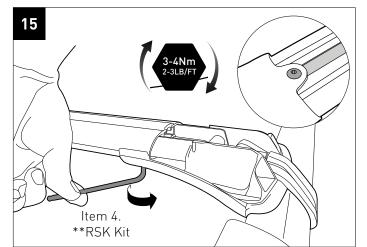

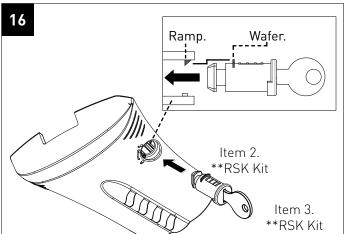

:///:///si

:///://:I

