




757-842-6497
WWW.JLOSC.COM

Installation Instructions
J&L 3.0 Oil Separator (1999-2004 Mustang GT; 2001 Bullitt, Passenger Side)
#3019P

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator with Elbow Fittings, (1) Mounting bracket, (2) Fine thread machine screws, (1) Bolt, (2) 1/2" hoses, (1) 1" section of 3/8" hose (2) Fittings 5/8"ID x 1/2"ID, (2) Fittings 1/2"ID x 3/8"ID (1) Fitting 3/8"ID
2	Gather all of the following tools needed for the installation: Phillips screwdriver, 12mm socket with extension and ratchet.
3	Remove the factory PCV hose
4	Use the supplied bolt and mount bracket 
5	Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket.
6	Use the supplied hoses and 5/8"ID x 1/2"ID fittings to connect from the PCV VALVE to the FILTER SIDE of Separator and from the other fitting to the INTAKE MANIFOLD BULLITT: Use the supplied 1/2"ID x 3/8"ID fittings and 3/8" hose to make your connections

****View image on next page****



**NON FILTER
SIDE
TO ENGINE**

**FILTER SIDE
IN FROM PCV
VALVE**

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.