
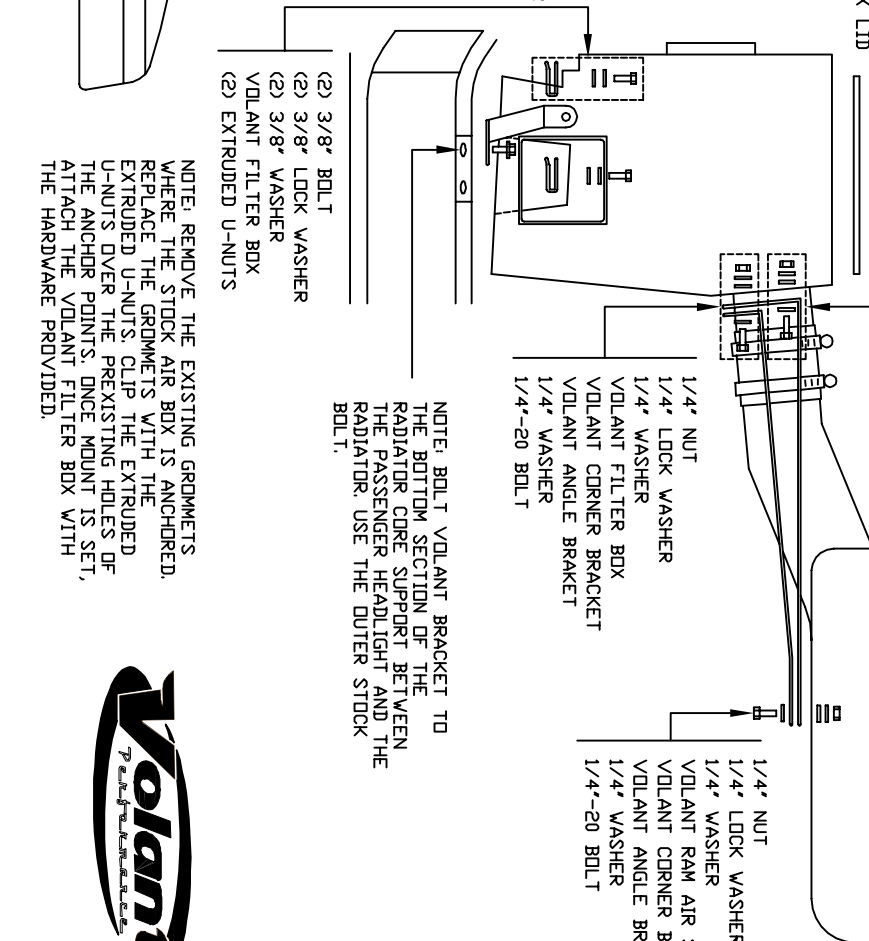


VOLANT AIR INTAKE SYSTEMS
 PART NO.: 16083
 INSTALLATION INSTRUCTIONS
 WWW.VOLANTPERFORMANCE.COM
 TECH SUPPORT: (909) 476-7225

16083 PARTS LIST				
1	VOLANT FILTER BOX	2	#072 CLAMPS	2
1	VOLANT FILTER BOX LID	4	1/4"-20 BOLTS	2
1	VOLANT AIR DUCT	2	3/8" BOLTS	2
1	VOLANT COOL AIR SCOOP	4	1/4"-20 TRUSS HEAD SCREWS	1
1	RAM FILTER W/CLAMP	4	1/4" NUTS	1
1	4 1/2" X 2 1/2" SLEEVE	8	1/4" WASHERS	1
1	3 1/2" X 3" SLEEVE	2	3/8" WASHERS	1
2	#056 CLAMPS	4	1/4" RUBBER WASHERS	1
		4	1/4" LOCK WASHERS	
				2
				3/8" LOCK WASHERS
				1/2" RUBBER GROMMETS
				EXTRUDED U-NUTS
				VOLANT BRACKET
				VOLANT BRACKET
				VOLANT BRACKET
				1/2" STRAIGHT FITTING
				5/8" X 5 BREATHER HOSE

TOP VIEW

SIDE VIEW

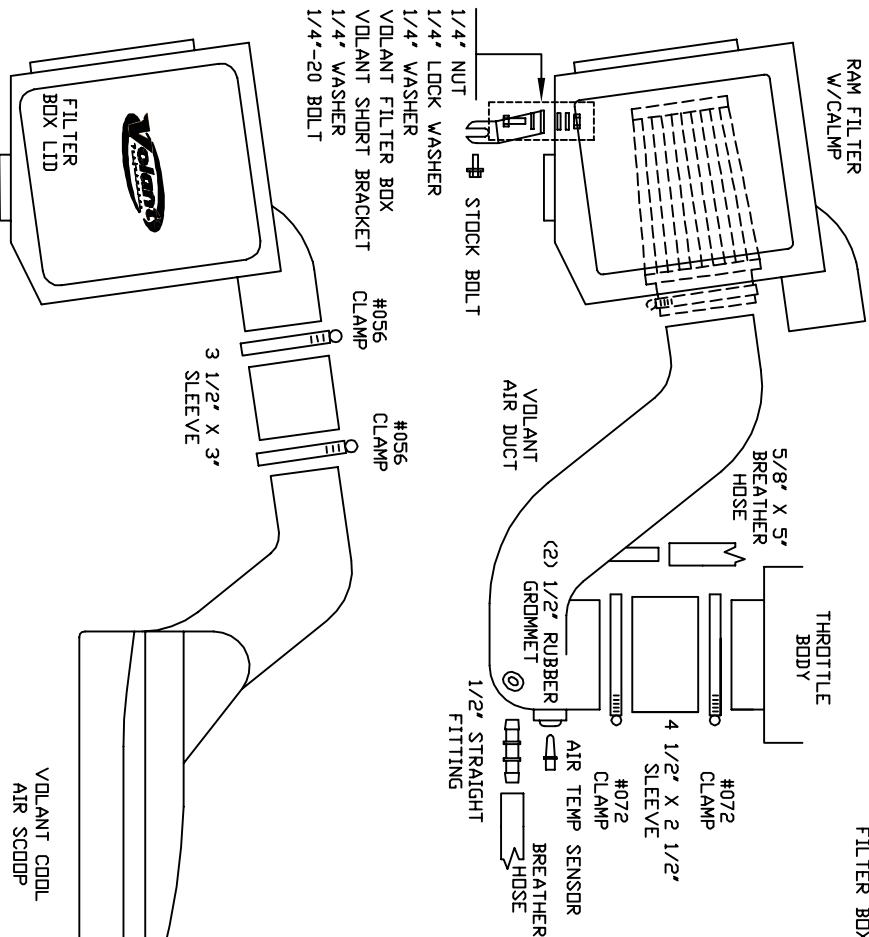

NOTE: REMOVE THE EXISTING GROMMETS WHERE THE STOCK AIR BOX IS ANCHORED. REPLACE THE GROMMETS WITH THE EXTRUDED U-NUTS. CLIP THE EXTRUDED U-NUTS OVER THE PREEXISTING HOLES OF THE ANCHOR POINTS. ONCE MOUNT IS SET, ATTACH THE VOLANT FILTER BOX WITH THE HARDWARE PROVIDED.

NOTE: BOLT VOLANT BRACKET TO THE BOTTOM SECTION OF THE RADIATOR CORE SUPPORT BETWEEN THE PASSENGER HEADLIGHT AND THE RADIATOR. USE THE OUTER STOCK BOLT.

