




HOOD LOCK SET Part # 4062

**WARNING: THIS PART DOES NOT
REPLACE STOCK HOOD LATCH!**

INSTALLATION INSTRUCTIONS

1. Locate a convenient point on the hood directly over a horizontal surface below the hood such as a radiator core support. This must be a solid surface for a secure fit. Use rubber gasket as a template and drill 3/4" hole in hood.
2. Close hood and carefully mark a center hole on the horizontal cross piece inside hood compartment directly below larger center hole. Drill 3/8" hole for striker bolt.
3. Adjust striker bolt to allow 3/4" from top of striker to outer hood panel. Align in top bolt to accept pin at base of lock.
4. Install stainless plate, gasket and lock from outer part of hood. On inside of hood, install special lock washer and tighten 3/4" nut.
5. Align indicator dog key with notch in lock spindle, depress key and rotate clockwise to lock, counter-clockwise to unlock.
6. Repeat operation on other side of hood to install second hood lock.
7. Hood locks are pin lock tumbler actuated circumferential locks, use only special lock lubricants.

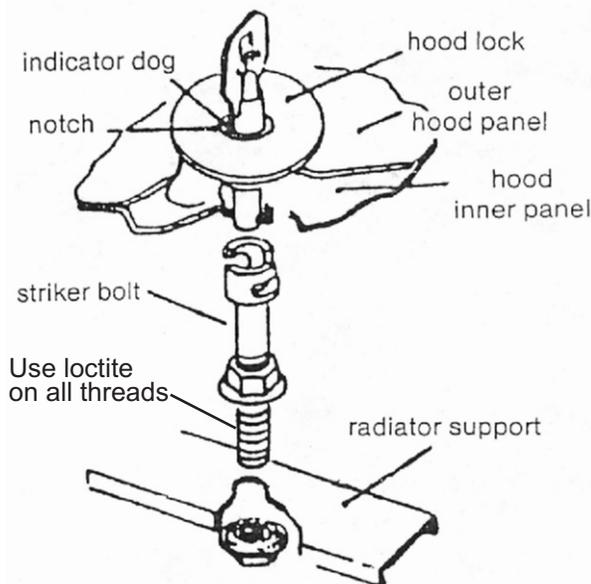

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515
website: www.tdperformance.com • email: techsupport@tdperformance.com

4062-Instruction Sheet.cdr




HOOD LOCK SET Part # 4062

**WARNING: THIS PART DOES NOT
REPLACE STOCK HOOD LATCH!**

INSTALLATION INSTRUCTIONS

1. Locate a convenient point on the hood directly over a horizontal surface below the hood such as a radiator core support. This must be a solid surface for a secure fit. Use rubber gasket as a template and drill 3/4" hole in hood.
2. Close hood and carefully mark a center hole on the horizontal cross piece inside hood compartment directly below larger center hole. Drill 3/8" hole for striker bolt.
3. Adjust striker bolt to allow 3/4" from top of striker to outer hood panel. Align in top bolt to accept pin at base of lock.
4. Install stainless plate, gasket and lock from outer part of hood. On inside of hood, install special lock washer and tighten 3/4" nut.
5. Align indicator dog key with notch in lock spindle, depress key and rotate clockwise to lock, counter-clockwise to unlock.
6. Repeat operation on other side of hood to install second hood lock.
7. Hood locks are pin lock tumbler actuated circumferential locks, use only special lock lubricants.

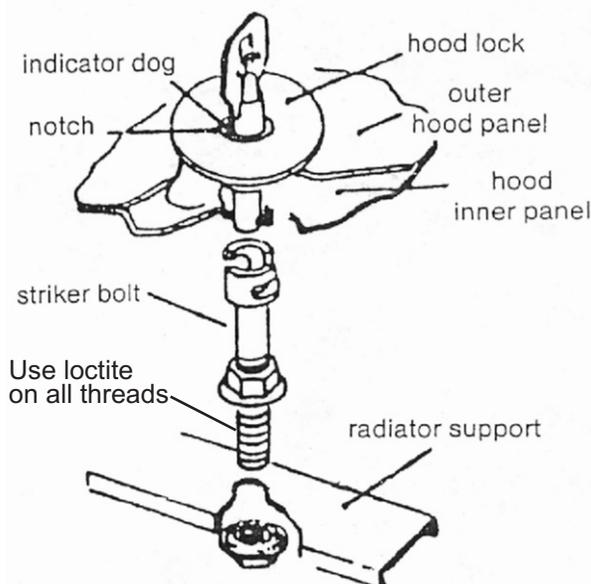

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515
website: www.tdperformance.com • email: techsupport@tdperformance.com

4062-Instruction Sheet.cdr