Installation Instructions for 20824 & 20825 Hydraulic Roller Lifters

- 1. Dip, do not soak, the lifters in the same oil to be used for the break-in of engine/camshaft.
- 2. Use assembly lube/camshaft lube on the face of the lifter and the lobe on the camshaft.
- 3. Follow cam manufacturer's break-in and adjustment procedures.

