



INSTALLATION INSTRUCTIONS

MSD Extreme HEI Coil PN 8220

Parts Included In This Kit

- 1 - Extreme HEI Coil, PN 8220
- 1 - Low Resistance Rotor Bushing, PN 8412
- 1 - Insulator

The Extreme HEI Coil is designed to be used only with the Extreme HEI Module, PN 83641. These are "race only" HEI components (Figure 1).

The Coil is larger than a factory style HEI coil and must be used with the MSD Extreme HEI Cap, PN 84111 and Coil Cover, PN 84022.

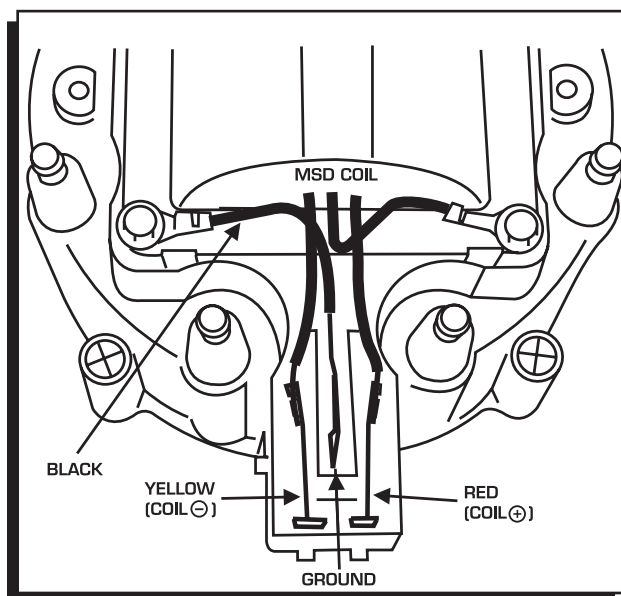


Figure 2 Wire Location.

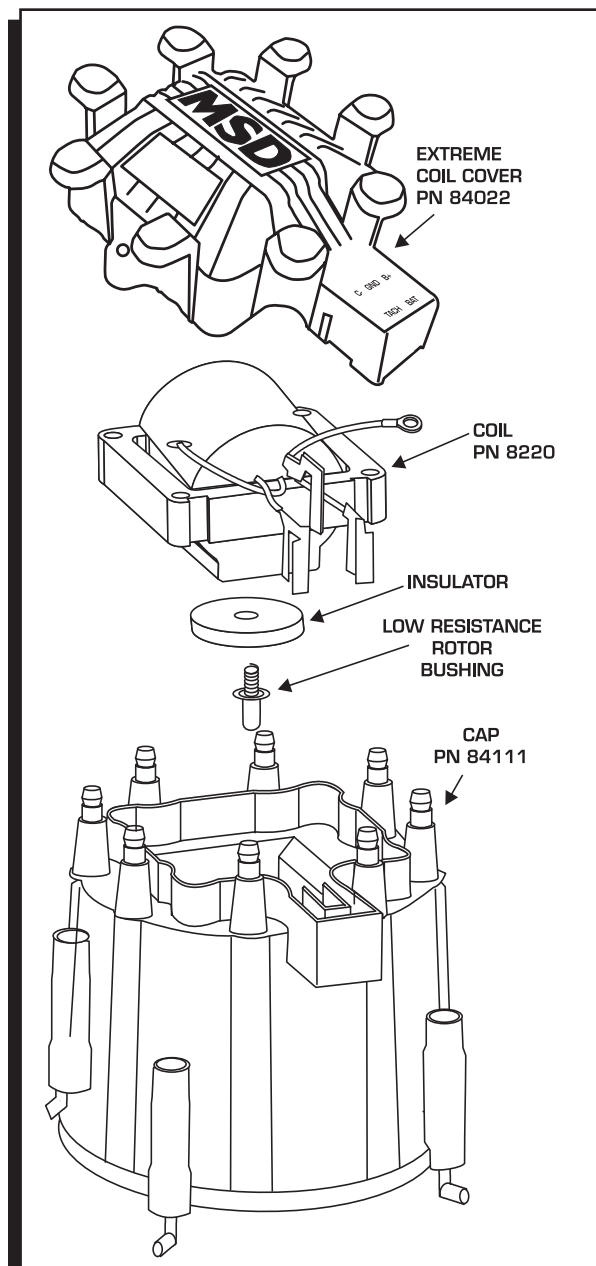


Figure 1 Coil Installation.



This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.