

MSD IGNITION INSTALLATION INSTRUCTIONS

RPM MODULE SELECTOR SWITCH

PN 8670	3,000 - 5,200 RPM
PN 8671	4,600 - 6,800 RPM
PN 8672	6,000 - 8,200 RPM
PN 8673	7,600 - 9,200 RPM
PN 8674	9,000 - 11,200 RPM
PN 8675	10,600 - 12,800 RPM

Parts Included:

- 1 – RPM Module Selector Switch
- 4 – Mounting Screws

Mount the Switch close to the MSD Ignition in a position so it is accessible and easy to read. **The wires of the Switch cannot be lengthened.** Use the supplied mounting screws or the adhesive on the back panel of the unit to mount the Switch.

The 2-pin connector of the Switch plugs into the rpm module receptacle of the MSD component. There is no polarity so its position does not make a difference.

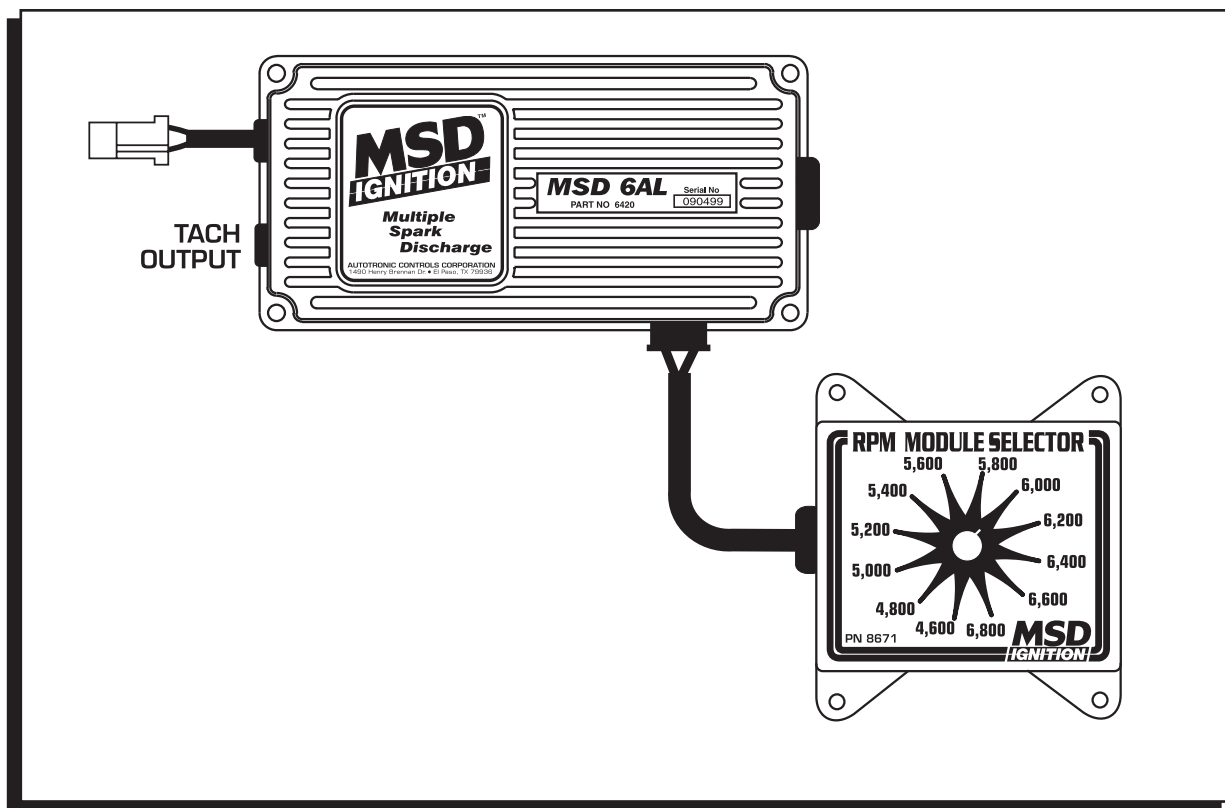


Figure 1 RPM Module Selector Installation.



This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD Ignition at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 6:00 p.m. Monday - Friday (mountain time).

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.