



INSTALLATION INSTRUCTIONS

MSD Power Tip PN 8803

Parts Included:

- 1 - 4-40x1.5, SHCS, Steel
- 1 - Nut, Brass, .250 Dia.
- 1 - Power Tip

1. Remove the small aluminum or brass insert where the factory coil tower contacts the distributor cap by drilling through the insert from the top side of the cap using a #43-.089 drill bit (Figure 1).

Note: The insert will push out of its cavity as you are drilling.

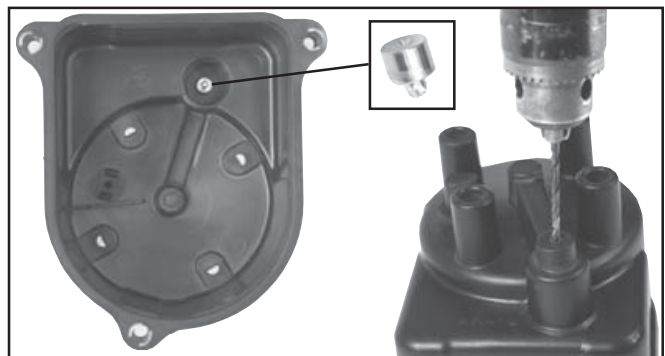


Figure 1

2. Insert the supplied Power Tip screw into the hole on the inside of the cap (Figure 2).



Screw



Power
Tip



Brass
Nut

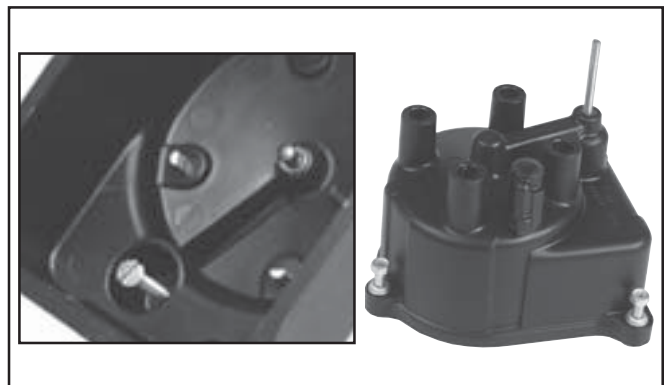


Figure 2

3. Place the Power Tip over the portion of the screw that is protruding out of top side of distributor cap. Secure the Power Tip to the cap using the brass contact terminal. Grind off any excess screw material so the screw is flush with the top of the brass nut (Figure 3).

4. Fill the cavity surrounding the screw with silicone and allow it to dry for at least 24 hours.

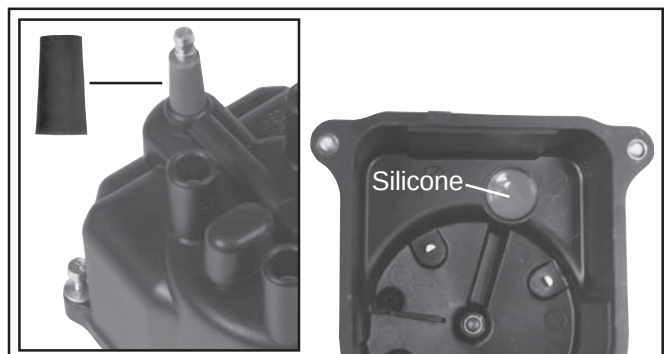


Figure 3



This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

The repaired unit will be returned as soon as possible after receipt, COD for any charges. (Ground shipping is covered by warranty). All units are returned regular UPS unless otherwise noted. For more information, call the MSD Customer Service Line (915) 855-7123. MSD technicians are available from 8:00 a.m. to 5:00 p.m. Monday - Friday (Mountain Time).

Autotronic Controls Corporation warrants MSD Ignition products to be free from defects in material and workmanship under normal use and if properly installed for a period of one year from date of purchase. If found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of date of purchase. This shall constitute the sole remedy of the purchaser and the sole liability of Autotronic Controls Corporation. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Autotronic Controls Corporation be liable for special or consequential damages.