



INSTALLATION INSTRUCTIONS

Saturn MSD DIS Coil Interface Module PN 8879

Note: This installation requires the MSD Saturn Cam Sync Adapter, PN 8914.

Parts Included:

- 1 - DIS Coil Interface Module
- 1 - 6 x 1mm x 130mm SHCS
- 2 - 6 x 1mm x 65mm SHCS
- 1 - Gasket

Special Tools Required:

Volt Meter

WARNING: During installation disconnect the battery cables. When disconnecting the battery, always remove negative cable first and install it last.

These Coil Interface Modules are designed to ease installation of an MSD DIS Ignition Control to Saturn vehicles with coil packs. The Interface Module separates the coil terminals and the ignition module terminals.

The Interface Module has four wires; two White and two Black wires, that connect to the MSD DIS Ignition. The White wires carry the MSD high voltage to the coil terminals.

The Black Wires are responsible for triggering the MSD and supplying a 12 volt ignition source (Figure 1).

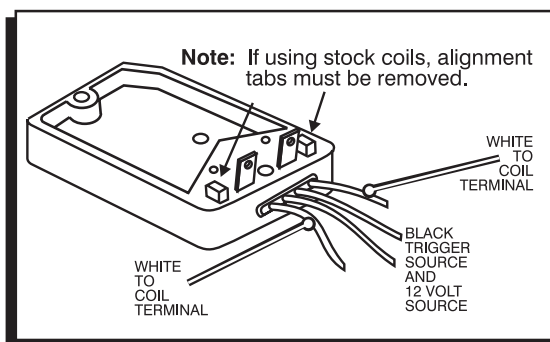


Figure 1 Interface Module Wiring.

Factory ignition modules are not consistent in which terminal of the ignition module supplies 12 volts. In order to properly install the DIS Ignition, you will need to confirm which terminal of the ignition module supplies 12 volts. To do this, a volt meter is required. Before beginning the installation, review the MSD DIS Ignition Control instructions.

1. Mark the location of each spark plug wire and its corresponding coil pack. Remove the spark plug wires from the coils.
2. Remove the two bolts that retain the coil packs and remove the coil from the factory ignition module.
3. There will be two male terminals beneath each coil pack. To ensure which terminal is the 12 volt source, use a volt meter and probe (test) each terminal, with the ignition turned On (Figure 2). A blank diagram is supplied in Figure 4 that allows you to note your vehicle's wiring.

Note: Some applications require that the engine be cranked momentarily before 12 volts are present on the terminal. Check all of the terminals with the key On. If 12 volts is not present, check the terminals while cranking the engine. Note the 12 volt terminals.

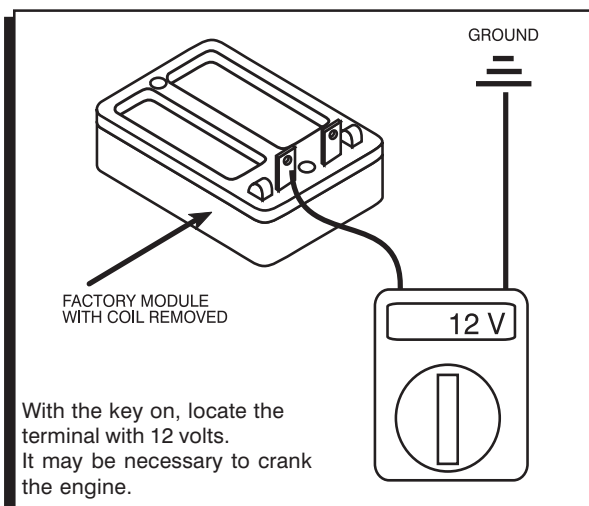


Figure 2 Identifying 12 Volts.

4. With the 12 volt terminals identified, mark the four wires of the Interface Module (Figure 3 and 4). The White wire above the 12 terminal wire will always be Coil Positive (+). The other White wire will always be the coil negative wire.
5. The Black wire above the 12 volt terminal will always be the 12 volt source to the MSD. The other Black wire is the trigger source.
6. Position the MSD Interface Modules on the ignition module and terminals.
7. Install the gasket with the adhesive side towards the interface module.
8. Install the Coil using the longer bolts supplied with the Interface Module and connect the spark plug wires. Use the 6 x 1mm x 130mm screws if using the OE Coil Boot Retainer. If not, use the two 6 x 1 x 65mm screws.
9. If using original coils, the tabs must be removed (Figure 1). If using MSD Coil PN 8224, tabs do not need to be removed.
10. Refer to the DIS Ignition Instructions to connect the wires.

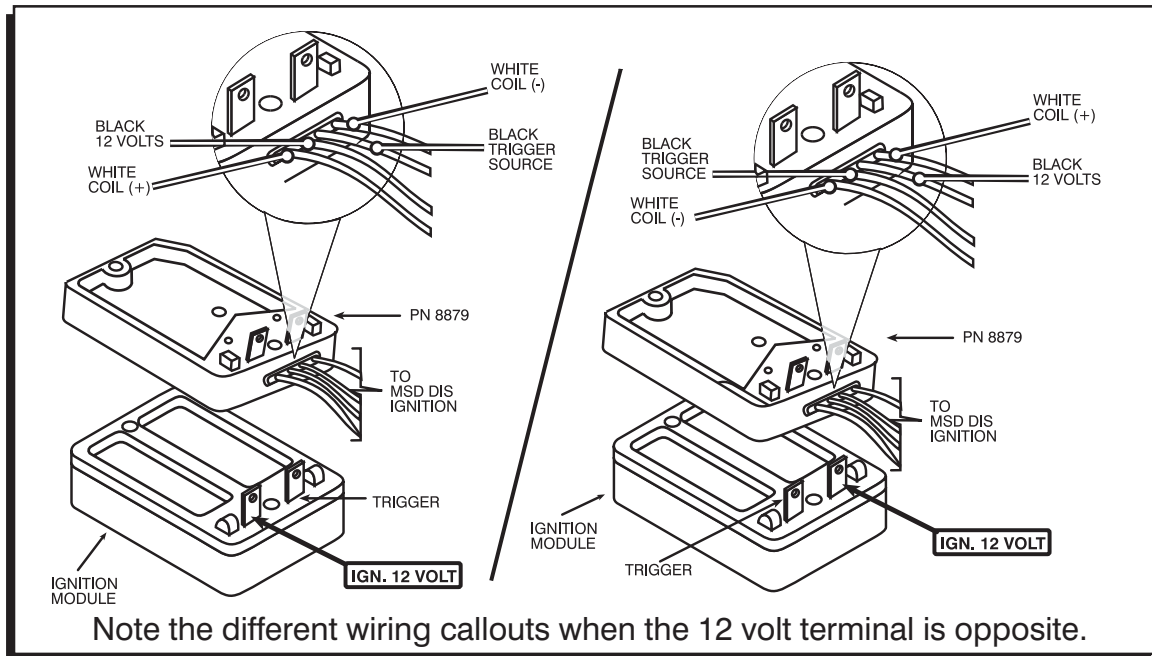


Figure 3 Wiring After Locating the 12 Volts Terminal.

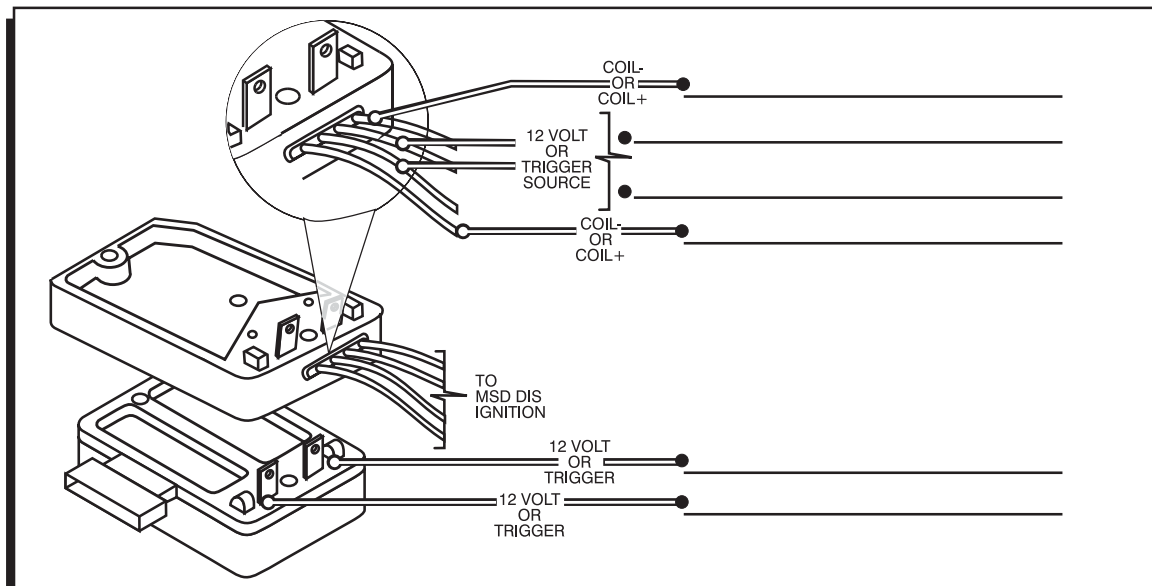


Figure 4 Write in Your 12 Volt Application.

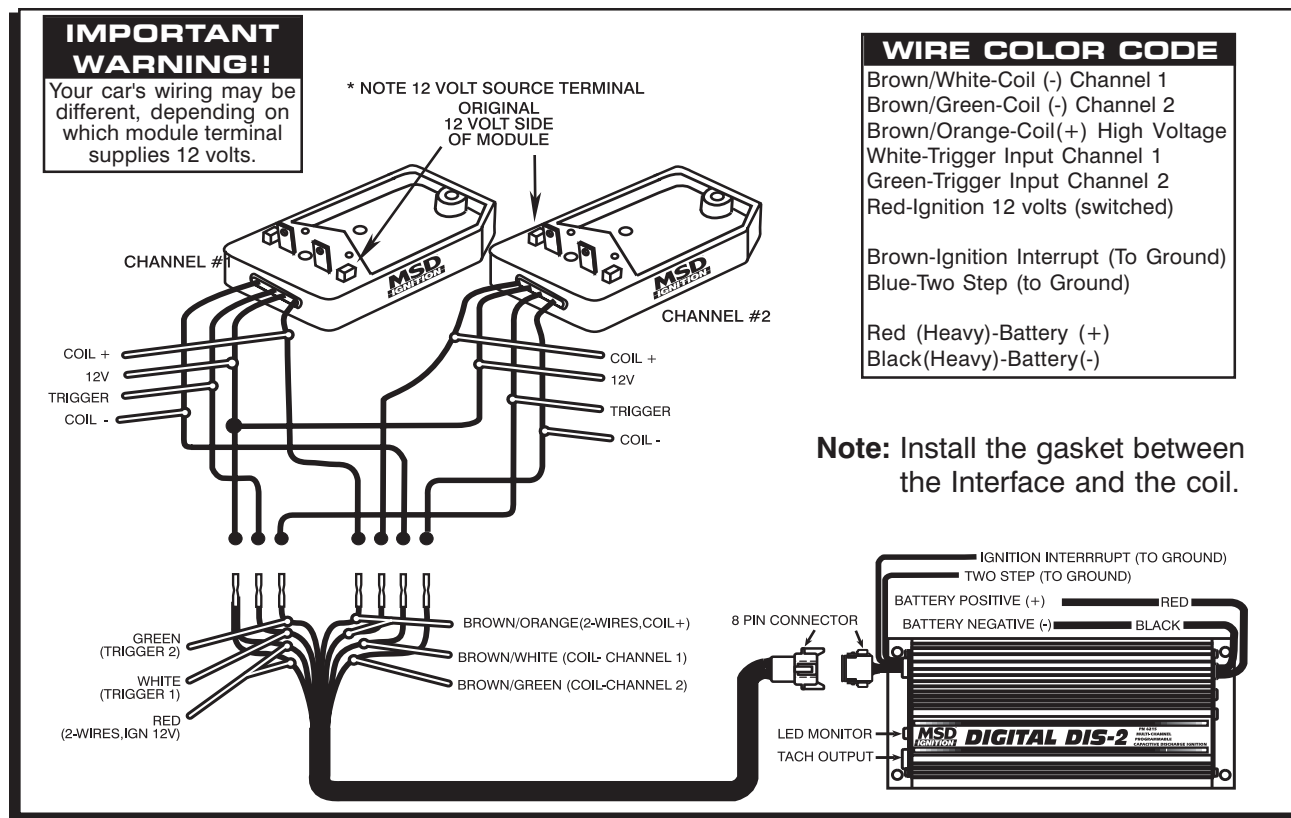


Figure 5 Typical Wiring to a DIS-2 Ignition to a Saturn.

Note: When installing an MSD DIS-2 to your Saturn, an MSD Saturn Cam Sync Adapter, PN 8914, must be used (Figure 6).

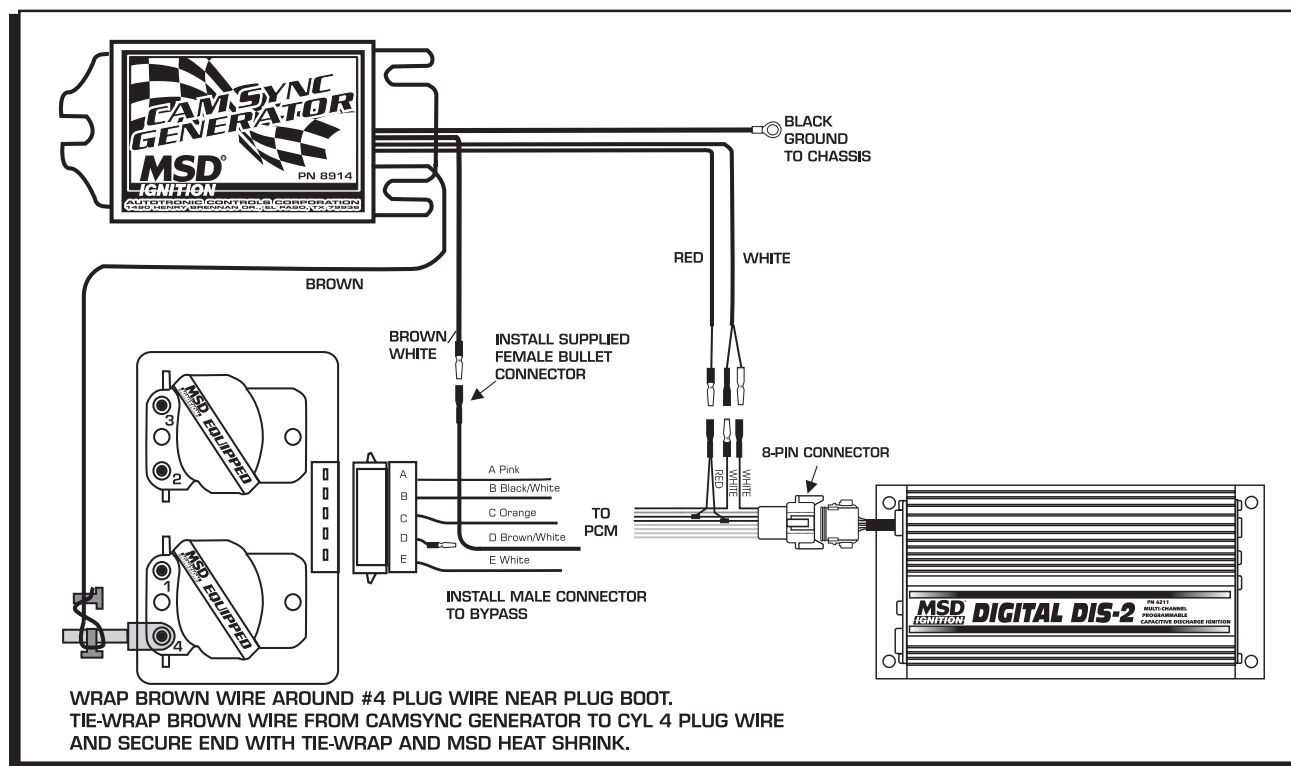
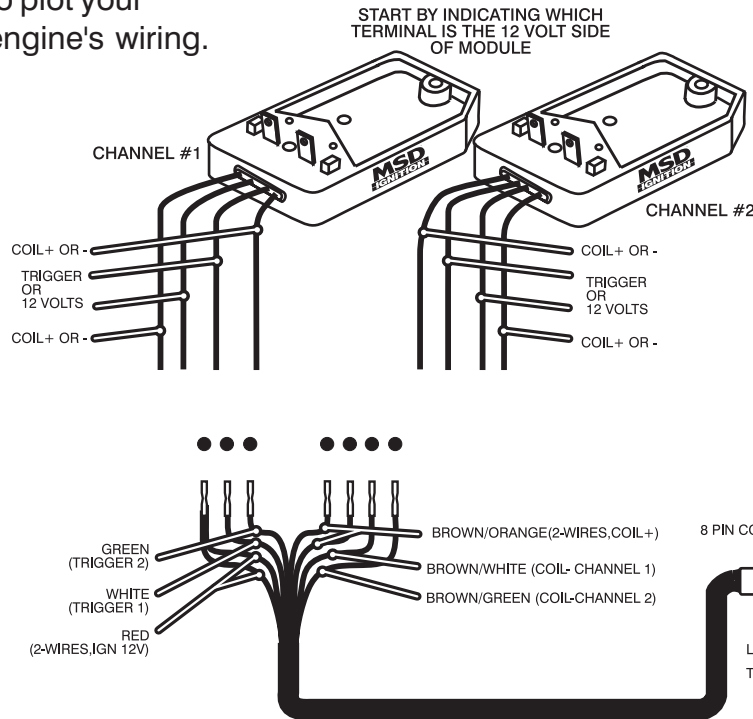


Figure 6 Wiring the Cam Sync Generator, PN 8914.

Use this diagram to plot your engine's wiring.

**WIRE COLOR CODE**

Brown/White-Coil (-) Channel 1
Brown/Green-Coil (-) Channel 2
Brown/Orange-Coil(+) High Voltage
White-Trigger Input Channel 1
Green-Trigger Input Channel 2
Red-Ignition 12 volts (switched)

Brown-Ignition Interrupt (To Ground)
Blue-Two Step (to Ground)

Red (Heavy)-Battery (+)
Black(Heavy)-Battery(-)

Note: Install the gasket between the Interface and the coil.

Figure 7 Your Wiring.

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for service, Proof of Purchase must be supplied for warranty verification. After the warranty period has expired, repair service is charged based on a minimum and maximum charge.

Send the unit prepaid with proof of purchase to the attention of: **Customer Service Department, Autotronic Controls Corporation, 12120 Esther Lama, Suite 114, El Paso, Texas 79936.**

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle.

The repaired unit will be returned as soon as possible after receipt, COD for any charges. (Ground Shipping is covered by warranty). For more information, call the MSD Customer Service Line (915) 855-7123. MSD technicians are available from 8:00 a.m. to 5:00 p.m. Monday - Friday (mountain time).

Limited Warranty

Autotronic Controls Corporation warrants MSD Ignition products to be free from defects in material and workmanship under normal use and if properly installed for a period of one year from date of purchase. If found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of date of purchase. This shall constitute the sole remedy of the purchaser and the sole liability of Autotronic Controls Corporation. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Autotronic Controls Corporation be liable for special or consequential damages.