

# **MSD<sup>®</sup> IGNITION** INSTALLATION INSTRUCTIONS

## **MSD DIS Dual Ignition Adapter PN 8912**

**IMPORTANT:** Read these instructions completely before attempting the installation.

**WARNING:** During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

### **Parts Included:**

1 - Dual Ignition Adapter, PN 8912

**Note:** The Wiring Harness that goes to the coil packs and ECU of your DIS Ignition should be equipped with several bullet connectors. This allows for easy installation of the Adapter. If the Harness does not have the bullet connectors as shown in Figure 1, contact MSD's Customer Service and they will send you a special wiring Harness.


## **MOUNTING**

1. Select a location to mount the DIS Adapter. Make sure it is away from direct engine heat sources and that all of the wiring will easily reach the MSD Ignition.
2. Using the Adapter as a template, mark the location of the mounting holes. Remove the unit and drill each location using a 1/4" drill bit. Secure the Adapter using 1/4" hardware (not supplied).


## **WIRING**

The Adapter has six wires that need to be connected. The chart shows each wire's application. Figures 1 and 2 show how to wire the Adapter to the DIS Ignitions.


|             |                                                           |
|-------------|-----------------------------------------------------------|
| Black       | Connects to Ground                                        |
| Red         | Connects to 12 volt (Ignition)                            |
|             | Input:                                                    |
| Brown/White | Connects to the White wire going to the Coils and ECU.    |
| Brown/Green | Connects to the Green wire going to the Coils and ECU.    |
|             | Output:                                                   |
| White       | Connects to the White wire going to the MSD DIS Ignition  |
| Green       | Connects to the Green wire going to the MSD DIS Ignition. |

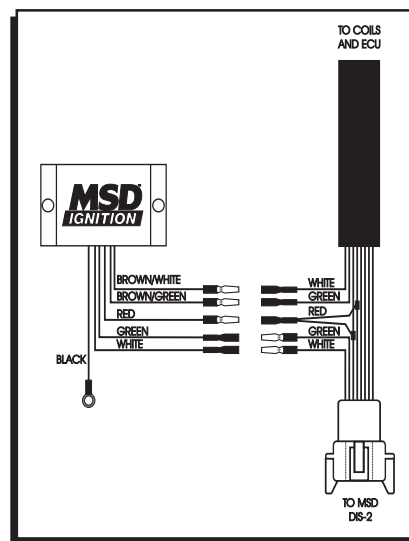

**Figure 1 Installation to an  
MSD DIS-2 Ignition.**

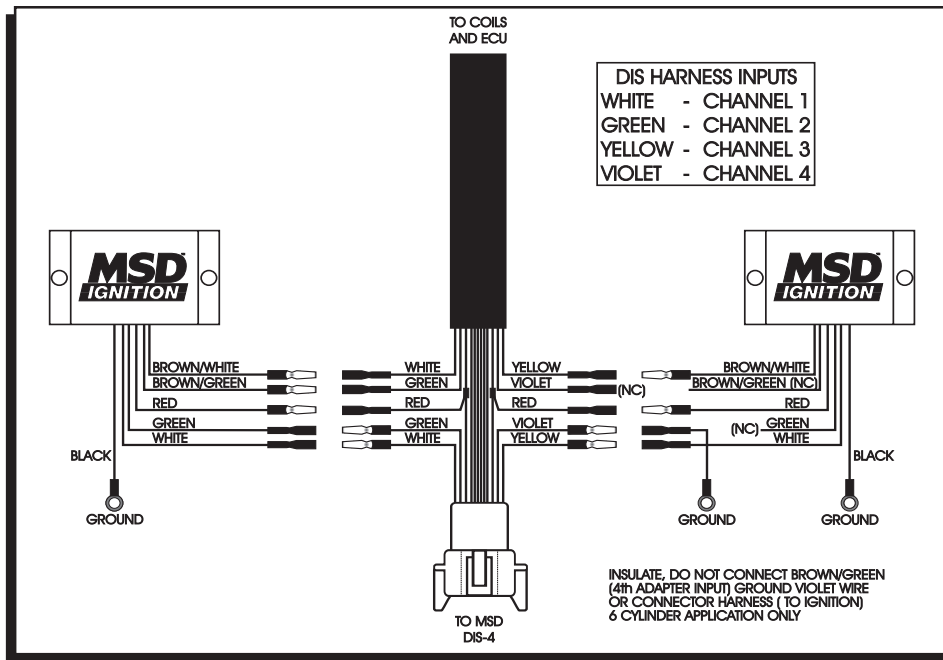

**Figure 2 Installation to an MSD DIS-4 using Three Channels**

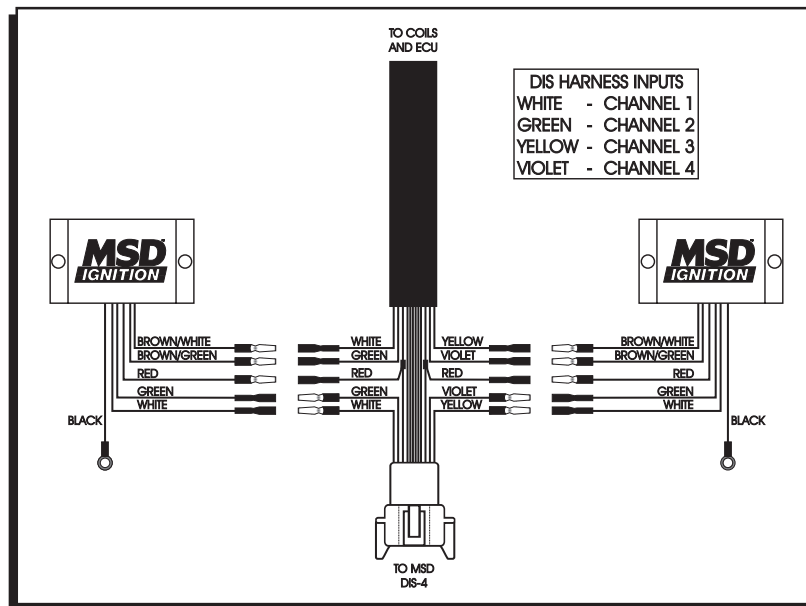

**Figure 3 Installation to an MSD DIS-4 Ignition using Four Channels**

### Limited Warranty

Autotronic Controls Corporation warrants MSD Ignition products to be free from defects in material and workmanship under normal use and if properly installed for a period of one year from date of purchase. If found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of date of purchase. This shall constitute the sole remedy of the purchaser and the sole liability of Autotronic Controls Corporation. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Autotronic Controls Corporation be liable for special or consequential damages.