

Spohn Performance, Inc.

494 E Lincoln Ave Myerstown, PA 17067

1-888-365-6064 www.spohn.net

Part # 1005-S – Torque Arm Front Rotator Mounting Plate

USE OF THIS PRODUCT IS ACCEPTANCE OF SELLER'S DISCLAIMER OF WARRANTY!

By their very nature, competition components are constantly pushed to their limits. While our components are designed to withstand intense race conditions, it is impossible to control the quality of installation or the varying conditions in which they are used. It is for this reason that absolutely no warranty or guarantee is either written or implied. Neither the seller nor the manufacturer will be liable for any loss, damage, or injury – direct or indirect – arising from the use of or inability to determine the use of any product. Before using, the user should determine the suitability of the product for its intended use, and the user shall assume all responsibility in connection therewith. Spohn Performance, Inc. makes no guarantee as to the legality for any specific class. Spohn Performance, Inc. makes no claims, nor does it intend its products to be used in street driven vehicles. Spohn Performance, Inc. reserves the right to make changes in design or add to or improve on their product without incurring any obligation to install the same on product previously manufactured. The Buyer agrees to indemnify and hold Spohn Performance, Inc. harmless from any claim, action or demand arising out of or incident to the Buyer's installation or use of products purchased from Spohn Performance, Inc.

INSTRUCTIONS

Replacement front rotator plate with welded 5/8" stud. Required on Spohn Performance SKUs 322, 330, 330-PS, 332 & 332-PS crossmember mounted torque arms. Fits any legacy Spohn Performance crossmember mounted torque arm with the solid front rotator mount. To check if this is the proper rotator plate for your torque arm, it has a 3/4" hole on the bottom and a 5/8"-18 x 3.25" long welded in stud on the top.

This is used as the inside rotator plate and the welded in stud is required for proper clearance with the transmission (a bolt head would not clear). You need to use our SKU 1005 as the outside rotator plate.

If you have the Thrustator front rotator on your torque arm use our SKU 1005-1S rotator plate (5/8" bottom hole and 5/8"-18 x 3.25" long welded in stud on the top).

Please reference the installation instructions for the specific torque arm SKU that you are working on for more detailed installation instructions.