



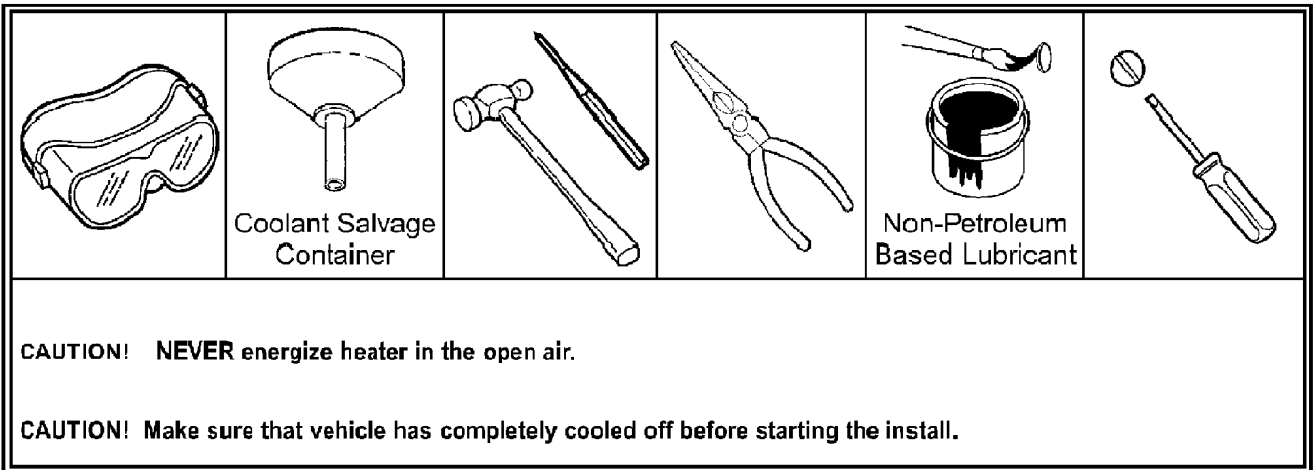

3.5L & 4.0L ENGINE BLOCK HEATER


Engine Block Heater

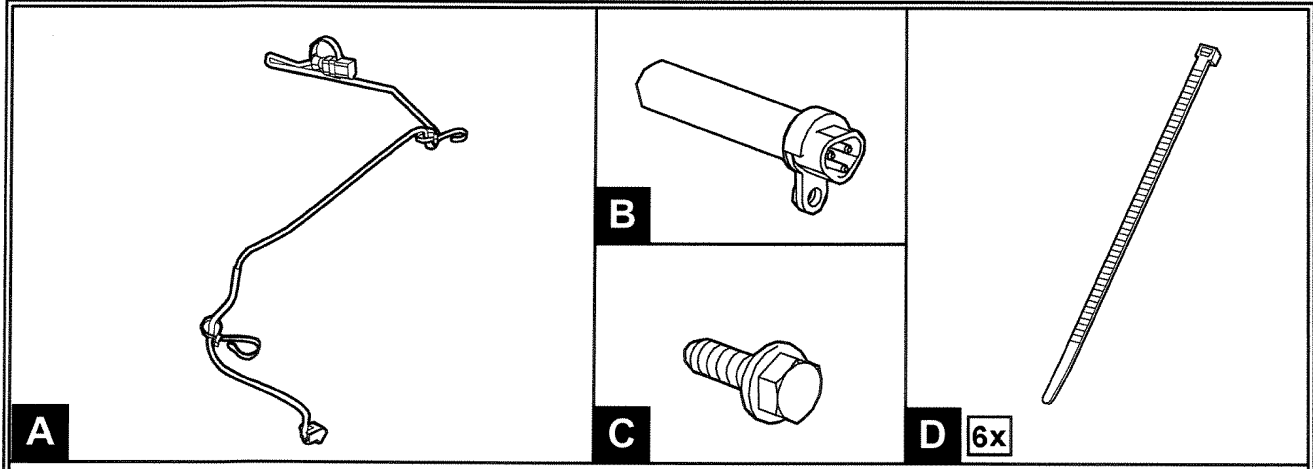

36PT514 (4/07)
K6860504


BLOCK HEATER INSTALL:

- Find block heater mounting hole located at the lower left rearward side of engine and under the exhaust manifold.
- Remove any burrs, compound, paint, rough spots, or sharp outer edges from the mounting hole.

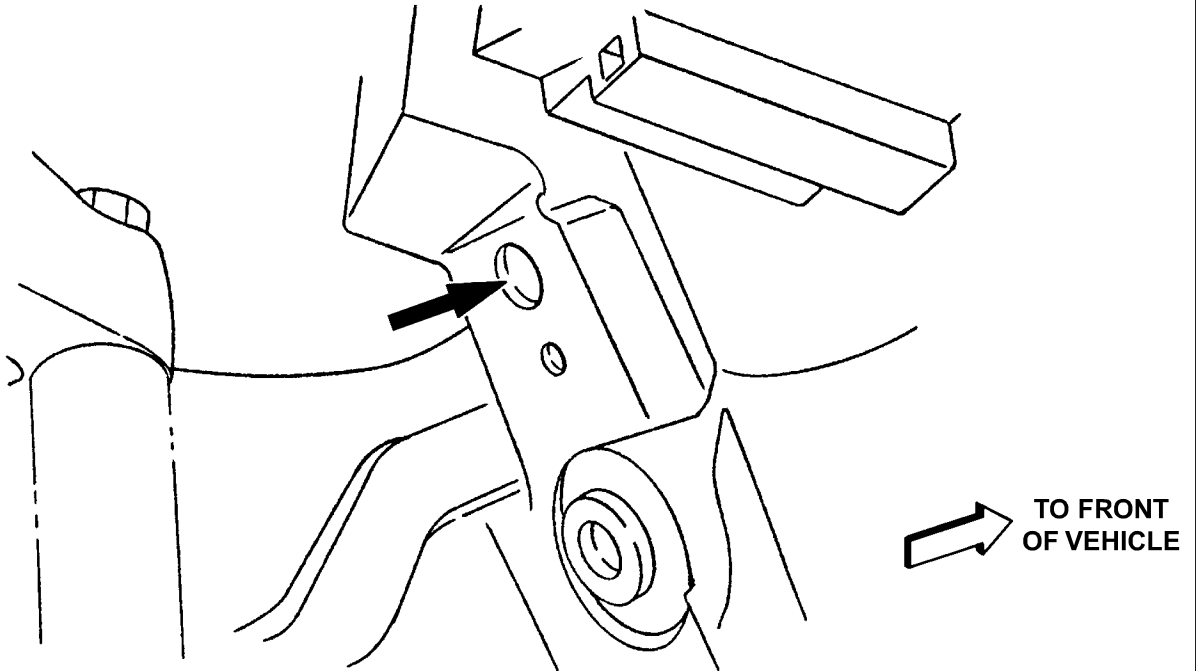

1

- Apply a coating of lubricant to the surface of hole and the "O" ring on the block heater.
- Insert block heater as shown. Secure in place with supplied bolt using a 10mm socket.

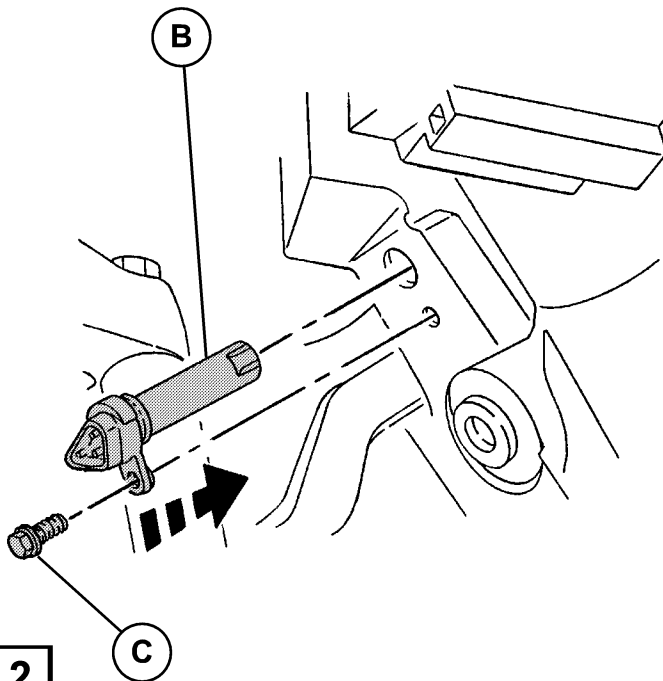


2

- Plug the cordset firmly into the block heater.
- Attach the cordsets in-line receptacle onto a existing body stud.

CAUTION! Make sure that cordset is positioned away from the exhaust manifold.

- Route cordset upwards along the left side of engine.
- Lower the vehicle and open the hood.
- Route cordset forward
- Secure the cordset inside engine compartment with the remaining tie straps.

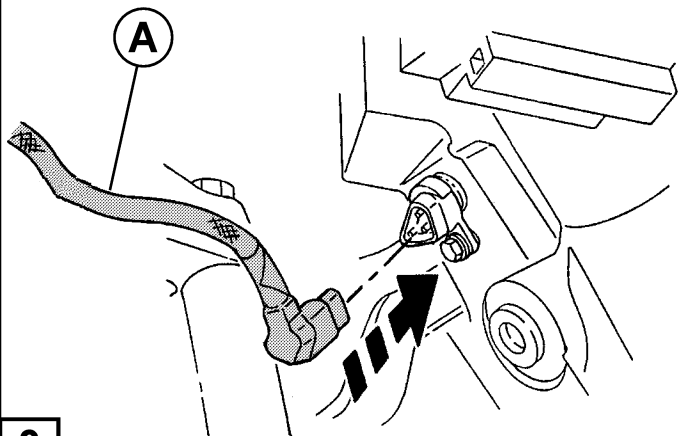

3