


EGR

INSTALLATION INSTRUCTIONS

Tools Required

	Soap & Water		Clean Dry Cloth		#2 Phillips Head Screwdriver
	Non-Permanent Marker				

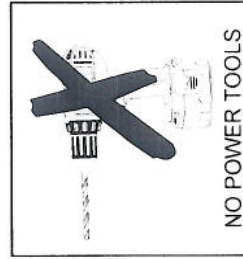




Cleaning Notes

- Spray with a firm water spray to remove any loose dirt.
- Wash with water, detergent and a soft cloth or sponge.
- Do not use petroleum based solvents or abrasives

1• Wash the hood with a mild soap and water solution, then dry thoroughly. Open the hood. Trial fit the hood protector centrally onto the hood. With a non-permanent marker, note and mark the positions of the four acrylic tag slots in the hood protector onto hood where they correspond to the rubber spacers. Also note the two holes in the hood protector wings and where they correspond to the hood lip. Remove hood protector.

2• Remove the four noted rubber spacers by turning 90° in either direction. Retain spacers for possible re-installation.

3• Insert the four screw plugs provided into the four vacant holes.

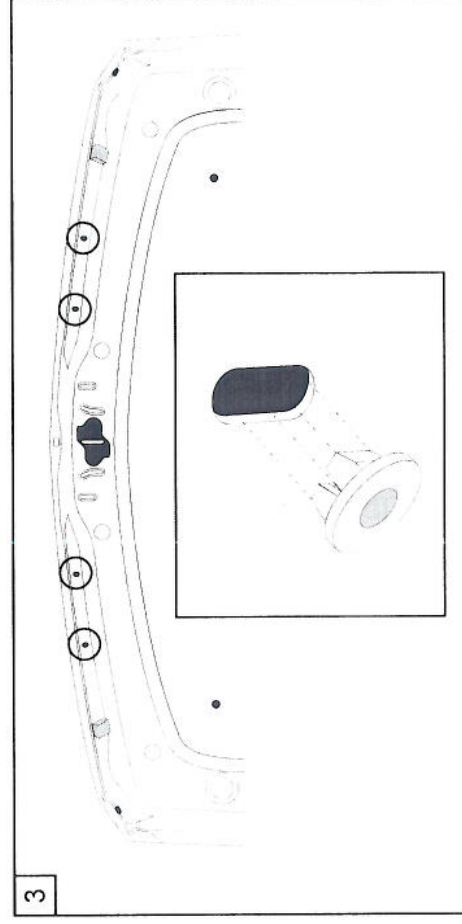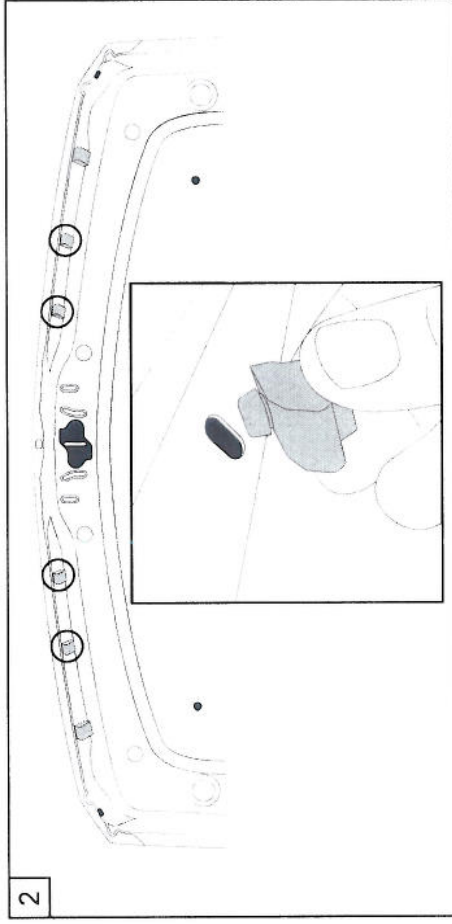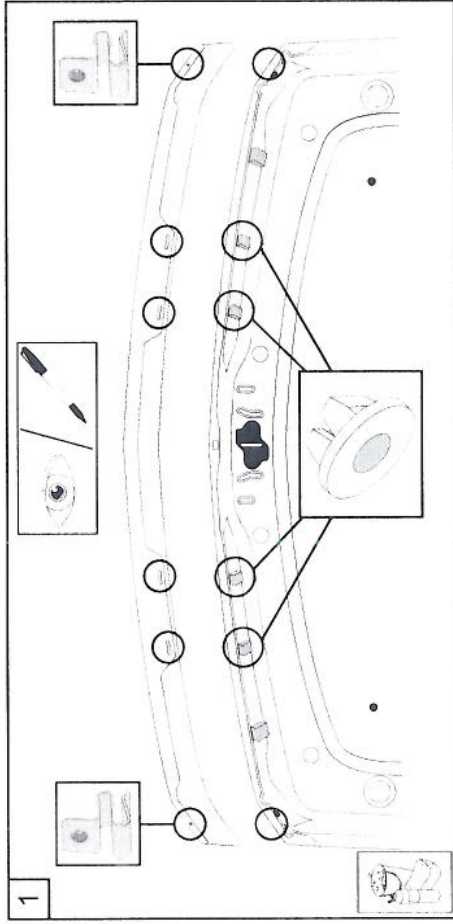


EGR

INSTALLATION INSTRUCTIONS

Tools Required

	Soap & Water		#2 Phillips Head Screwdriver
	Clean Dry Cloth		Non-Permanent Marker

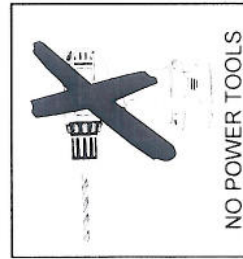

Cleaning Notes




- Spray with a firm water spray to remove any loose dirt.
- Wash with water, detergent and a soft cloth or sponge.
- Do not use petroleum based solvents or abrasives.

- 4•** Clean the noted areas with alcohol prep pad provided. Wipe off any residue with a dry clean cloth. Adhere the abrasive resistant tape strips over the hood lip. Apply tape so approximately half of each strip is adhered to the topside and half is adhered to the underside of hood.

- 5•** Attach the two foam washers to the face of the metal wing clips.

- 6•** Slide the metal wing clips over the abrasive resistant tape strips on the hood edge at the two previously noted outer positions.

IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with hood paint work. Failure to do this may result in permanent paint damage.

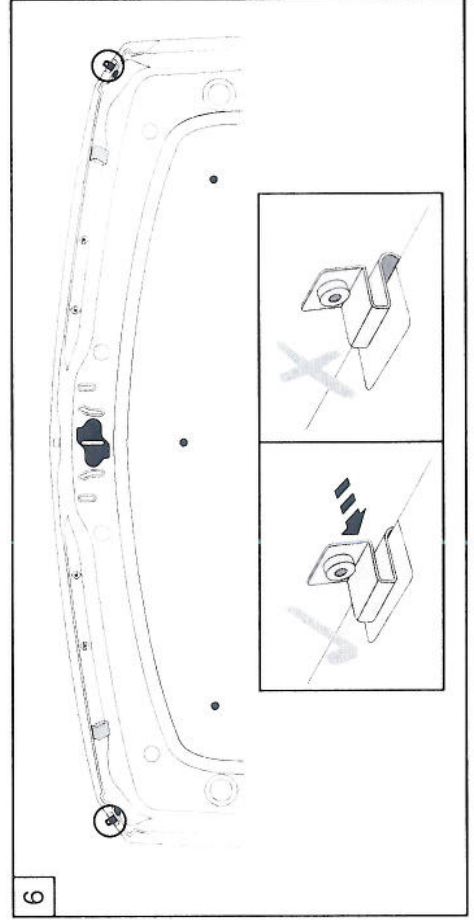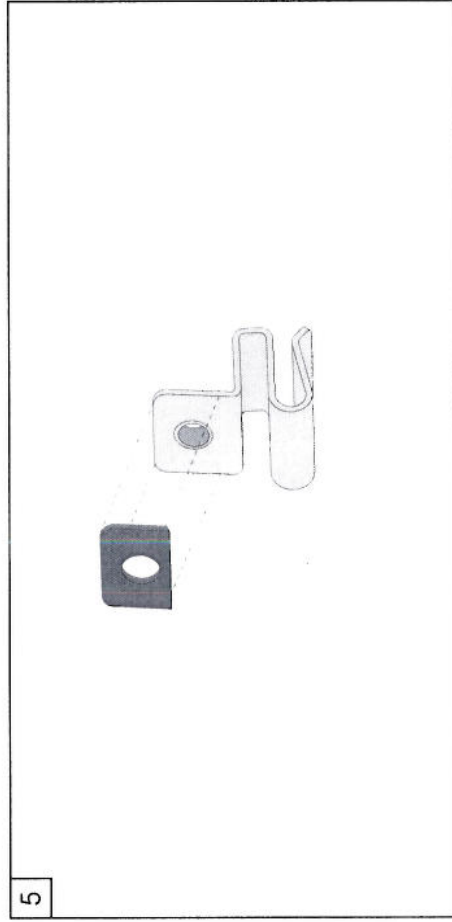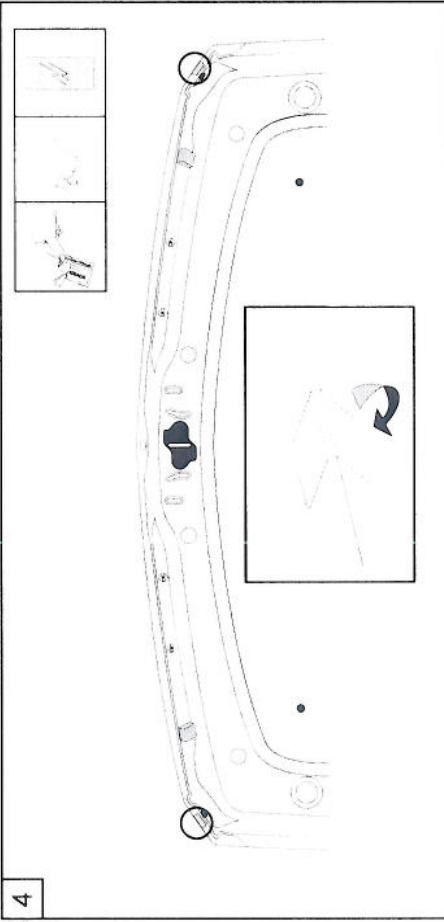


EGR

INSTALLATION INSTRUCTIONS

Tools Required


	Soap & Water		Clean Dry Cloth		#2 Phillips Head Screwdriver
	Non-Permanent Marker				

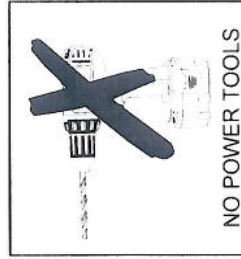


Cleaning Notes

- Spray with a firm water spray to remove any loose dirt.
- Wash with water, detergent and a soft cloth or sponge.
- Do not use petroleum based solvents or abrasives.

7• Install the hood protector onto the hood ensuring that the collar of the screw plugs locate into and parallel with the slots in the hood protector tags.

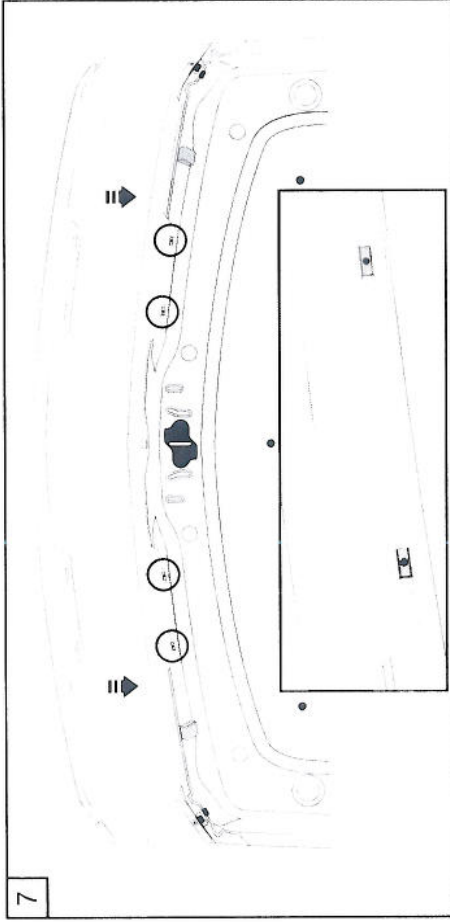


8• While maintaining thumb pressure against the underside of the hood protector, insert the large screws through the large washers into the screw plugs. Do not fully tighten yet. Ensure the hood protector is centralised on hood then fully tighten screws.

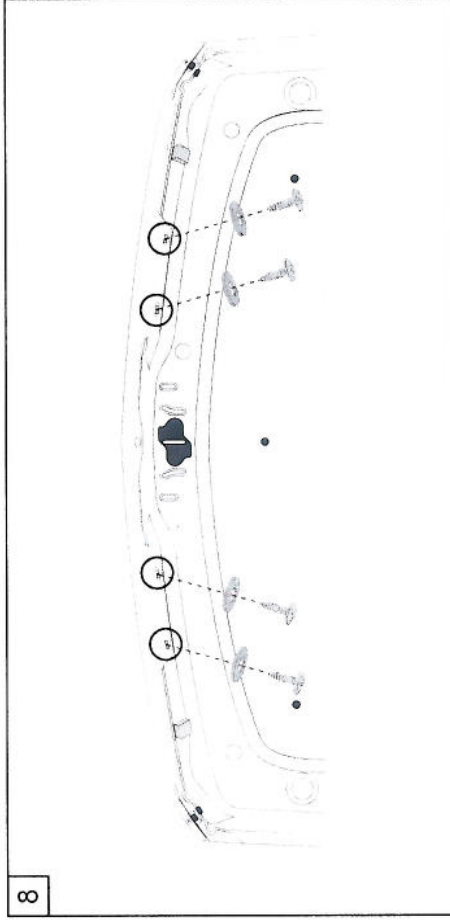

IMPORTANT: Thumb pressure must be maintained on the hood protector to prevent the screw plug from rotating. Do not overtighten screws.

9• Secure hood protector to wing clips with small screws and washers provided. Important: Do not overtighten screws.

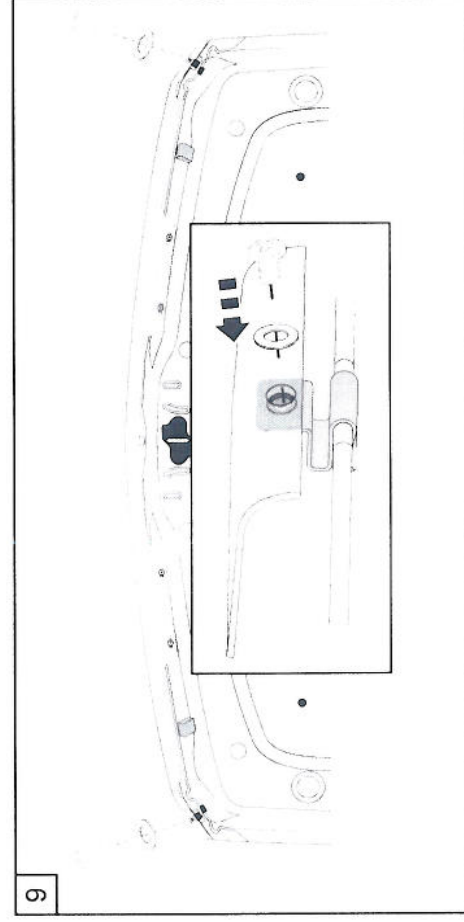

TO REMOVE: Reverse the above procedure.