

Installation Instructions for 555-79010 Transmission Jack 1000lb.

This transmission jack is used to remove and install transmissions and differential assemblies from vehicles.

Transmission Jack - a mobile lifting device having a lift platform assembly suited to retaining an automotive transmission and other components such as transfer cases and trans-axles. Designed to support and stabilize the component during its installation or removal from vehicle.


Only the attachments and the adapters supplied by the manufacturer or supplier for this equipment shall be used.

WARNINGS

- (A) The use of this jack is limited to the removal, installation, and transportation, in the lowered position, of transmissions and differentials. It may be used with appropriate adapters manufactured specifically for the jack to handle other components, such as rear axle units and transfer cases, within weight limitations specified. No alteration to the jack or adapters shall be made.
- (B) Be sure the vehicle is appropriately supported before starting repairs.
- (C) Do not overload. Overloading can cause damage to or failure of the jack.
- (D) This jack is designed for use only on hard level surfaces capable of sustaining the load. Use on other than hard surfaces can result in jack instability and possible loss of load.
- (E) No alterations to the jack shall be made.
- (F) Only attachments and adapters supplied by the manufacturer shall be used.
- (G) Failure to heed these warnings may result in loss of load, damage to jack, and/or failure resulting in personal injury or property damage.



1-800-345-4545 jeps.com

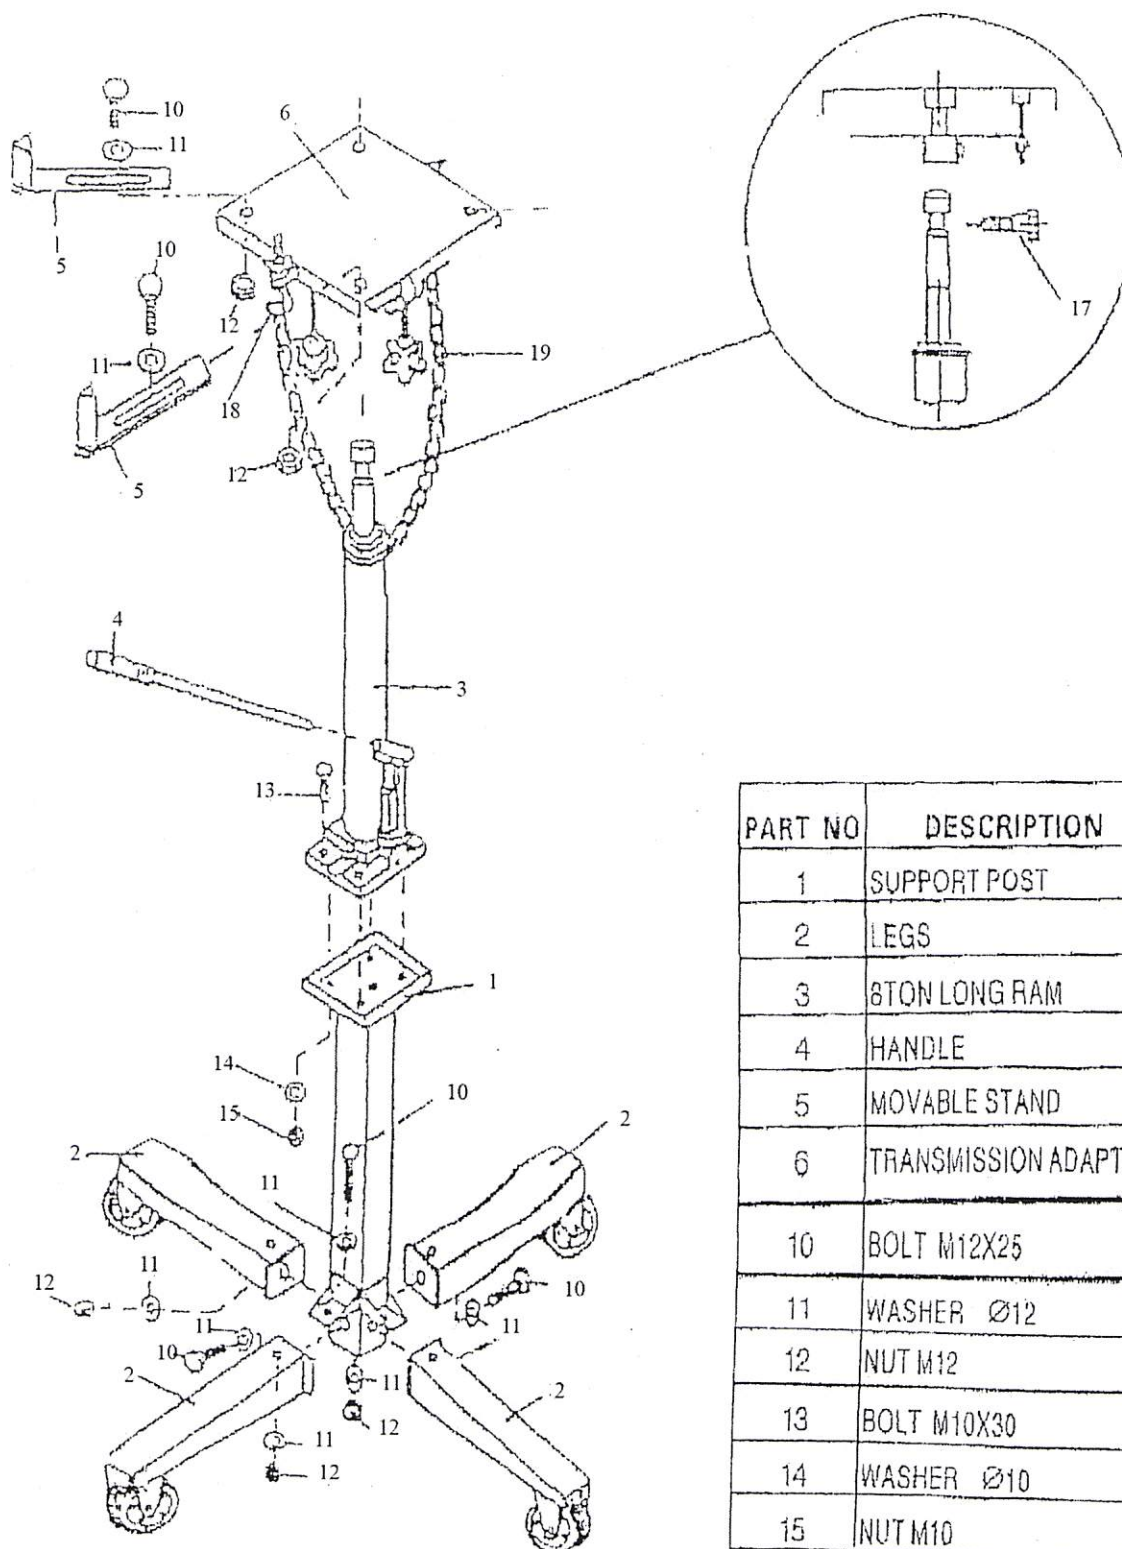

PART NO	DESCRIPTION	Q'TY
1	SUPPORT POST	1
2	LEGS	4
3	8TON LONG RAM	1
4	HANDLE	1
5	MOVABLE STAND	4
6	TRANSMISSION ADAPTOR	1
10	BOLT M12X25	12
11	WASHER Ø12	12
12	NUT M12	12
13	BOLT M10X30	4
14	WASHER Ø10	4
15	NUT M10	4
17	BOLT M10X20	1
18	HOOK BOLT M8	1
19	CHAIN	1