


Installation Instructions for 80099

Aluminum Jack Stands

2-Ton Capacity per Stand

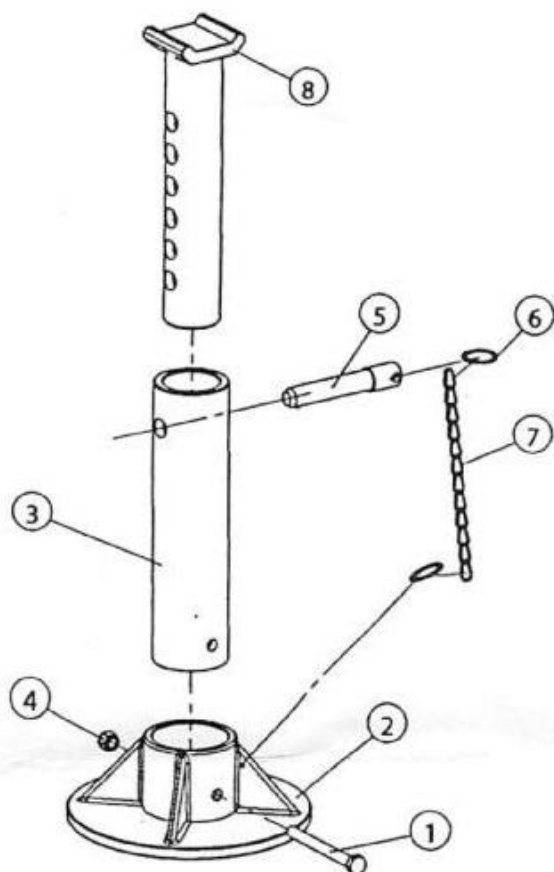

CAUTION: SAFETY FIRST

Do Not load beyond rated capacity.

Use only on hard, flat and level ground.

NEVER use stands individually, always use in pairs.

ALWAYS block unlifted tires

Secure emergency brake.

Center load on saddle, and apply load slowly.

Be sure load and stands are stable.

DO NOT work under vehicle if wheels have been removed.

Inspect stands periodically to insure your safety.

DO NOT attempt to lift and of vehicle if jack stands are being used on opposite end.

Failures to follow any of these instructions may result in property damage or personal injury.

PARTS LIST

ITEM NO	DESCRIPTION	QTY
1	Bolt M8x80	1
2	Base	1
3	Sleeve	1
4	Nut M8	1
5	Lock Pin	1
6	Key Ring	2
7	Chain	1
8	Saddle and Post	1