

Installation Instructions for 80896

Air Mover

900 CFM

Specifications

Model	555-80896	Motor Size	1/4 HP	Power Outlet	Single (115V) outlet
Weight	16.5 lbs.	Power	115V / 60Hz	Cord Length	15 ft.
Dimensions	19.5" D x 17.5" W x 8.6" H	Sound Level	68 dB (avg.)	Construction	Injection molded housing, wire grill. Stackable.
Amp Draw	2.0 A	Control	On/Off Rocker Switch		

Specifications are subject to change without notice. Some values may be approximate.

WARNING!

For the safe operation of this machine follow the instructions given in this booklet and the training given by your supervisor. Failure to do so can result in personal injury and/or damage to machine and property!

- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- Do not alter or modify your air mover in any way. Use only replacement parts authorized by manufacturer. Modifications or use of unapproved parts could create a hazard and will void your warranty. Contact your authorized distributor for assistance.
- Do not use or store this machine in areas involving fuels, grain dust, solvents, thinners or other flammable materials and vapors. Do not use flammables to clean this machine.
- For indoor use only. To avoid electrical shock, do not expose the unit to rain, and do not handle with wet hands. Do not immerse or use this unit in standing water.
- Do not pull or carry unit by the cord, do not use cord as a handle, and do not close a door on the cord or pull cord around sharp edges or corners. Keep cord away from heated surfaces. Do not unplug unit by pulling on cord. To safely unplug unit, grasp plug and not the cord.

WARNING!

- a) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- b) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

NOTICE!

- Do not obstruct openings or place any objects into openings on the unit. Keep unit free from dust, lint, hair and anything that may reduce air flow. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- Unplug when not in use or when moving unit. Turn off all controls before unplugging.
- Operate unit on a level and stable surface to prevent it from falling and reduce risk of possible injury or damage.
- Do not drop or throw the unit. Treatment of this type can cause damage to the components and create a serious hazard.
- Do not allow children to play with or around the unit. Be sure the unit is inaccessible to children when not attended.

GROUNDING INSTRUCTIONS

This machine must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug and must be plugged into a GFCI-protected outlet.

WARNING!

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine. If it will not fit the outlet, have a proper outlet installed by a qualified technician.



1-800-345-4545 jeps.com

MAINTENANCE

Before each use:

- Inspect the electrical cord and wiring for damage or discoloration.
- Inspect for loose fasteners
- Clean inlet and outlet as needed
- Listen for abnormal sounds
- Keep unit clean

As needed

Use compressed air or a vacuum to remove lint and other debris from the inlet/outlet grill and motor/impeller. Do not use liquids or a pressure washer to clean unit.

TRANSPORTATION AND STORAGE

Always use the handle to load or carry the unit. Units may be stacked for transport and storage. When transporting, secure the unit carefully to prevent sliding and damage to the unit and/or injury to vehicle occupants.

