



INSTALLATION INSTRUCTIONS

Part Number: E-0781 & E-0781HBK

This filter fits: See catalog for current applications

* **FREE K&N® decal** To register your warranty, please see us online at knfilters.com/register. **FREE K&N® decal** *
Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modification will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N® air filter.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

1. Loosen the screw on the air box lid, then remove the lid.
 2. Remove the stock air filter from the housing. Care should be taken to dislodge as little dirt as possible. Some models may utilize a plastic ring on the air filter seal for ease of installation. Be sure to remove the plastic ring prior to installing the K&N® Air Filter.
 3. Clean the air filter housing and sealing surface.
 4. Please Note the **Made In USA** engraving and stop feature details on the outer tabs of the K&N® Air Filter. Also, note the lug in the bottom of the stock air filter housing. See Fig. 1
 5. Insert the K&N® Air Filter. The **Made In USA** engraving should be in the 2 o' clock position, with the locking tab at the 7 o' clock position. Ensure the base of the filter fits into the air box correctly. The air filter should sit against the air box. See Figs. 2 & 3
 6. To lock the air filter into the housing, rotate the air filter until the **Made In USA** engraving is at the top. See Fig. 4
- NOTE: There is a positive stop to prevent the air filter from rotating any further.**
7. Re-install the air box lid. Ensure the air filter is pushed into the air box enough, so that the ribs on the inside of the air box lid are clearing the feature adjacent to the **Made In USA** engraving.
 8. Reset the air filter restriction indicator (if equipped) by pressing the top button on the indicator.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4