



**SOLENOID PRESSURE VALVE KIT
PART # 23907, 23908, 23909**

PARTS LIST

(6)	Terminal, Ring, Vinyl	(2)	Terminal, Male Vinyl
(12 ft)	Wire, 16 GA.	(1)	Nipple 1/2 Inch NPT
(1)	Solenoid, 12 Volt	(1)	Face Plate, On/Off
(1)	Brass Tee Fitting	(1)	Pressure Switch

INSTALLATION INSTRUCTIONS

1. Each side of the Solenoid Valve contains a 1/2" NPT female port.. A 1/2" male nipple and a 1/2" tee with 1/8" NPT hole for the pressure switch. Use Teflon tape or a thread sealer on all threads. Install the solenoid with the "IN" side towards the accumulator. This will prevent the accumulator from bleeding down while the solenoid is turned off.

2. Use the Toggle Switch, Pressure Switch, and 16 Gauge wire included in the kit to wire the valve as shown in the diagram.

NOTE: BE SURE TO USE A 20 AMP FUSE (MAXIMUM) INLINE WITH THIS CIRCUIT.


Ensure that the power source you choose for the pressure valve, is only hot when the ignition is on.

3. OPERATION:

- A. Switch on, pressure below pressure switch setting. Solenoid valve will be open.
- B. Switch on, pressure above pressure switch setting. Solenoid valve will be closed.
- C. Switch off, Solenoid is closed regardless of pressure.

THE PRESSURE SWITCH SHOULD BE ON THE "ENGINE" SIDE OF THE SOLENOID.

NOTE: Always check for leaks after installation and periodically, make any repairs as needed.

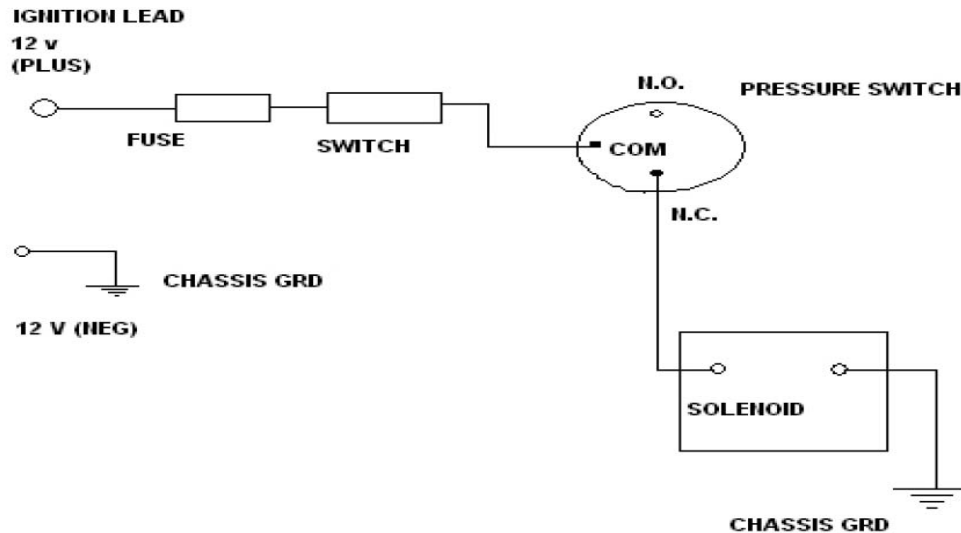

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906