



Expansion Tank, Automatic Trans P/N 41220

Parts List

Expansion Tank Tank Mounting Bracket

This Expansion Tank functions much like a closed type system. It prevents oil mist from spraying on the back of your car (and tires). The oil is captured in the Expansion tank and will drain back into the transmission as the trans cools. Oil may also be drained between rounds, by using the ball valve.

INSTALLATION

1. Locate a flat mounting surface close to the vent on the transmission. The vent is on the right (or passenger side) of the transmission case. Mount the tank as vertical as possible. The tank must be mounted higher than the hole the vent was removed from (if oil recovery is desired).
2. Remove the vent and replace it with a 1/8NPT fitting (not included with kit). A 90-degree fitting is recommended. **NOTE: Sometimes the vent is hidden by the dipstick tube.**
3. Connect fitting on transmission with hose and clamps (not included) or equivalent, as necessary.

After initial installation drain the tank after every pass to get an idea how often you will need to drain the tank.

NOTE: If the frequency increases at a later date, it may well be a sign that there is a problem occurring with your transmission.

NOTE: Remember that what is drained from this tank, will be missing for your transmission.

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com



Expansion Tank, Automatic Trans P/N 41220

Parts List

Expansion Tank Tank Mounting Bracket

This Expansion Tank functions much like a closed type system. It prevents oil mist from spraying on the back of your car (and tires). The oil is captured in the Expansion tank and will drain back into the transmission as the trans cools. Oil may also be drained between rounds, by using the ball valve.

INSTALLATION

1. Locate a flat mounting surface close to the vent on the transmission. The vent is on the right (or passenger side) of the transmission case. Mount the tank as vertical as possible. The tank must be mounted higher than the hole the vent was removed from (if oil recovery is desired).
2. Remove the vent and replace it with a 1/8NPT fitting (not included with kit). A 90-degree fitting is recommended. **NOTE: Sometimes the vent is hidden by the dipstick tube.**
3. Connect fitting on transmission with hose and clamps (not included) or equivalent, as necessary.

After initial installation drain the tank after every pass to get an idea how often you will need to drain the tank.

NOTE: If the frequency increases at a later date, it may well be a sign that there is a problem occurring with your transmission.

NOTE: Remember that what is drained from this tank, will be missing for your transmission.

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com



Expansion Tank, Automatic Trans P/N 41220

Parts List

Expansion Tank Tank Mounting Bracket

This Expansion Tank functions much like a closed type system. It prevents oil mist from spraying on the back of your car (and tires). The oil is captured in the Expansion tank and will drain back into the transmission as the trans cools. Oil may also be drained between rounds, by using the ball valve.

INSTALLATION

1. Locate a flat mounting surface close to the vent on the transmission. The vent is on the right (or passenger side) of the transmission case. Mount the tank as vertical as possible. The tank must be mounted higher than the hole the vent was removed from (if oil recovery is desired).
2. Remove the vent and replace it with a 1/8NPT fitting (not included with kit). A 90-degree fitting is recommended. **NOTE: Sometimes the vent is hidden by the dipstick tube.**
3. Connect fitting on transmission with hose and clamps (not included) or equivalent, as necessary.

After initial installation drain the tank after every pass to get an idea how often you will need to drain the tank.

NOTE: If the frequency increases at a later date, it may well be a sign that there is a problem occurring with your transmission.

NOTE: Remember that what is drained from this tank, will be missing for your transmission.

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com