



Installation Instructions

Coolant Level Sensor


The Moroso Coolant Level Sensor is designed to warn the driver of a coolant loss problem before engine damage can occur.

PARTS INCLUDED:

1 - Module	1 - 1/8 NPT Sensor Bung	1 - #10 Ring Term., 18 Ga.
1 - Sensor Assy.	1 - #10 Flat Washer	1 - #8 Ring Term., 18 Ga.
1 - Blue Light Assy.	1 - 10-32 Locknut	1 - Butt Conn., 18 Ga.
1 - Inline Fuse Holder	2 - 8-32 Locknut	1 - Low Coolant Decal
1 - 5A Fuse	2 - 8-32 x 3/4 Machine Screw	2 - Push-On Terminal

INSTALLATION

1. Drain coolant and remove radiator.
2. On the left-side radiator tank, drill a 3/4" dia. hole 5" down from the top of the tank. Weld Sensor Bung in place with the three 3/16" holes facing down. (This is to prevent false alarms due to coolant sloshing).
3. Once cooled, install sensor in Bung with thread sealer.
4. Install radiator. **NOTE: Radiator needs to be grounded for the sensor to function properly.**
5. Mount Module in convenient location away from any direct source of heat (i.e. headers) with two of the 8-32 x 3/4 screws and locknuts.
6. Drill a 1" thru hole for the Blue Light Assembly on the dash in a visible location. Install Blue Light Assembly and apply Low Coolant Decal on light if desired.
7. Wire as indicated below.

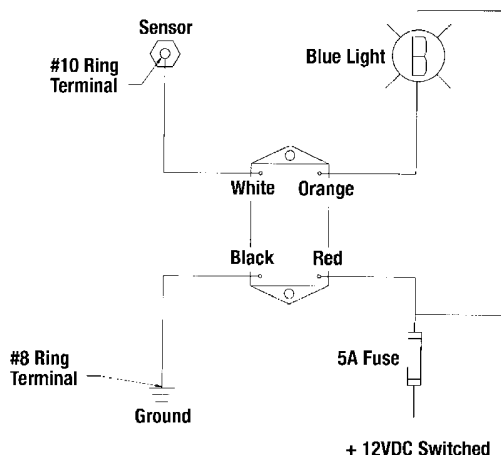

For Technical Assistance, call Moroso's Tech Line at
(203) 458-0542, 8:30am-5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS
80 Carter Drive • Guilford, CT. 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com



Installation Instructions

Coolant Level Sensor


The Moroso Coolant Level Sensor is designed to warn the driver of a coolant loss problem before engine damage can occur.

PARTS INCLUDED:

1 - Module	1 - 1/8 NPT Sensor Bung	1 - #10 Ring Term., 18 Ga.
1 - Sensor Assy.	1 - #10 Flat Washer	1 - #8 Ring Term., 18 Ga.
1 - Blue Light Assy.	1 - 10-32 Locknut	1 - Butt Conn., 18 Ga.
1 - Inline Fuse Holder	2 - 8-32 Locknut	1 - Low Coolant Decal
1 - 5A Fuse	2 - 8-32 x 3/4 Machine Screw	2 - Push-On Terminal

INSTALLATION

1. Drain coolant and remove radiator.
2. On the left-side radiator tank, drill a 3/4" dia. hole 5" down from the top of the tank. Weld Sensor Bung in place with the three 3/16" holes facing down. (This is to prevent false alarms due to coolant sloshing).
3. Once cooled, install sensor in Bung with thread sealer.
4. Install radiator. **NOTE: Radiator needs to be grounded for the sensor to function properly.**
5. Mount Module in convenient location away from any direct source of heat (i.e. headers) with two of the 8-32 x 3/4 screws and locknuts.
6. Drill a 1" thru hole for the Blue Light Assembly on the dash in a visible location. Install Blue Light Assembly and apply Low Coolant Decal on light if desired.
7. Wire as indicated below.

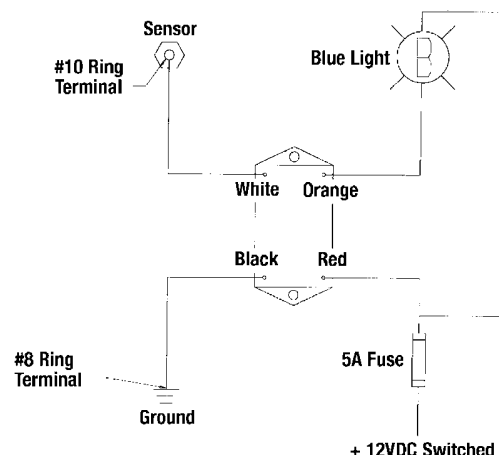

For Technical Assistance, call Moroso's Tech Line at
(203) 458-0542, 8:30am-5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS
80 Carter Drive • Guilford, CT. 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com