



Race Distributor Instructions

Part #72240-72248

Note: Disconnecting the Negative Battery Cable may interfere with your on-board computer's operation. Your computer may require some time to reset itself, after you have reconnected the Negative Battery Cable.

Removal of Stock Distributor

1. Disconnect the Negative Battery Cable.
2. Disconnect the spark plug wires and mark or tag them with their cylinder number for easy identification later.

Note: Simplify this installation and any other with multiple connections, by placing a piece of masking tape on both the male and female connectors. Mark the corresponding connectors with the same number. It will be easy to match the connectors during reassembly by simply matching the numbers on the masking tape. (This trick will work for vacuum hoses also)

3. Disconnect the coil wire and primary lead wire, if equipped.
4. Disconnect the vacuum advance hoses, if equipped.
5. Disconnect the necessary electrical connectors.
6. Remove the Distributor Cap.
7. Using a marking tool, mark the position of the Distributor Rotor on the distributor housing. Next mark the position of the Distributor Housing in relation to the cylinder head.
8. Remove the Distributor Hold-Down Bolts, Distributor and O-ring.

Installation of Moroso Race Distributor

1. Coat a new Distributor O-ring with oil and place on the Distributor.
2. Install the Distributor aligning the Distributor Housing and the Distributor Rotor with the marks that were made during removal.
3. The lugs and grooves are both offset to prevent installing the Distributor 180 degrees out of time.
4. Install the Distributor Hold-Down Bolts and tighten, temporarily.
5. Install the Distributor Cap and connect the Electrical Connectors.
6. Connect the vacuum hoses, if equipped.
7. Connect the coil wire and the primary lead wire, if equipped.
8. Re-connect the Spark Plug Wire in their original positions.
9. Check the ignition timing and tighten the Distributor Hold-Down Bolt to 16ft.lbs. (Re-check timing).

**For Technical Assistance, call Moroso's Tech Line at
(203) 458-0542, 8:30am-5:00pm Eastern Time**

MOROSO PERFORMANCE
80 Carter Drive • Guilford, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906