



Installation Instructions

P/N 72358 Pro-Coil GM HEI with External Coil

V8 Applications

1. Remove the ignition switch-to-coil lead from the coil.
2. Unfasten the distributor leads from the coil.
3. Remove the screws, which secure the coil to the engine and lift it off.
4. Installation is the reverse of removal.

V6 Applications

1. Remove the ignition switch-to-coil lead from the coil.
2. Unfasten the distributor leads from the coil.
3. Drill out the rivets that secure the coil to its mounting bracket. The Bracket may have to be removed from the engine to perform this operation. This varies from year, make, and model.
4. Using the supplied mounting straps and fasteners, install the coil to mounting bracket.
5. Installation is the reverse of removal.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906