



INSTALLATION INSTRUCTIONS
P/N 72360
H.O. FORD IGNITION COIL

V8 APPLICATIONS

1. Remove the ignition switch-to-coil lead from the coil.
2. Unfasten the distributor leads from the coil.
3. Remove the screws that secure the coil to its mounting bracket, then lift the coil off.
4. Installation is reverse of removal.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906