



Ignition Wire Dress-up Kit

Installation Notes:

Mount the Loom Brackets and Wire Separators where convenient to maintain spacing between wires. Loom Brackets can be bent slightly if needed to obtain proper clearance. On installation or removal of wires from looms and separators, use a silicone lubricant spray to help prevent the wire jacket from tearing.

When routing the Ignition Wires, be sure they clear exhaust headers. Always remove and install Ignition Wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At www.moroso.com

Rev.A
121900

72752INST



Ignition Wire Dress-up Kit

Installation Notes:

Mount the Loom Brackets and Wire Separators where convenient to maintain spacing between wires. Loom Brackets can be bent slightly if needed to obtain proper clearance. On installation or removal of wires from looms and separators, use a silicone lubricant spray to help prevent the wire jacket from tearing.

When routing the Ignition Wires, be sure they clear exhaust headers. Always remove and install Ignition Wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At www.moroso.com

Rev.A
121900

72752INST



Ignition Wire Dress-up Kit

Installation Notes:

Mount the Loom Brackets and Wire Separators where convenient to maintain spacing between wires. Loom Brackets can be bent slightly if needed to obtain proper clearance. On installation or removal of wires from looms and separators, use a silicone lubricant spray to help prevent the wire jacket from tearing.

When routing the Ignition Wires, be sure they clear exhaust headers. Always remove and install Ignition Wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At www.moroso.com

Rev.A
121900

72752INST



Ignition Wire Dress-up Kit

Installation Notes:

Mount the Loom Brackets and Wire Separators where convenient to maintain spacing between wires. Loom Brackets can be bent slightly if needed to obtain proper clearance. On installation or removal of wires from looms and separators, use a silicone lubricant spray to help prevent the wire jacket from tearing.

When routing the Ignition Wires, be sure they clear exhaust headers. Always remove and install Ignition Wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At www.moroso.com

Rev.A
121900

72752INST