

THE RATTLER™

GENERAL INFORMATION:

The **Rattler™** can be placed up to 2000ft away from the **tattletale™** base unit depending on objects and structures between The **Rattler™** and the **tattletale™**. The **Rattler™** is sensitive to **six degrees** of movement or rotation. The **Rattler™** unit can be placed on top of the item(s) to be protected. It can also be attached to any metal object with the integrated magnets. When the **tattletale™** base unit is armed, **The Rattler™** will detect movement of 6° or more. The **Rattler™** will operate normally between 0°F and 120°F. The **Rattler™** is designed for outdoor use and is water resistant. However, IT IS NOT WATERPROOF. Do not leave The **Rattler™** in standing water. If The **Rattler™** takes on water, disassemble the end caps from the body, dry all electrical connections, and reassemble. The 3V CR123A battery included with The **Rattler™** will typically last 2-3 years depending on usage and environment.



Mounting Instructions:

The **Rattler™** is ready to protect out of the box and can be used anywhere within your field of protection, indoors or outdoors. To mount The **Rattler™**, simply place it on top of the item(s) you wish to protect or attach to any metal object with the supplied integrated magnets.


Testing the Rattler:

1. It is not necessary to arm your **tattletale™** base unit to perform this test. **To avoid alarm events, leave your base unit disarmed.**
2. Bring The **Rattler™** near the **tattletale™** base unit and move The **Rattler™** while observing the zone light that corresponds to The **Rattler™**. The zone light will flash.
3. Set The **Rattler™** down so that it remains motionless for at least 10 seconds. If the zone light that corresponds to The **Rattler™** clears after remaining motionless, then The **Rattler™** is functioning properly.

Follow these steps to change the batteries:

- Unscrew the end cap indicated by the sticker on the sensor body.
- Remove the transmitter cassette by gently pulling the end of the cassette out of the body.
- Remove the transmitter cap by applying pressure to the top of the sensor near the wire until the cap comes free of the transmitter.
- Locate the 3V CR123A battery. Remove old battery and replace with a new 3V CR123A battery and press the black RESET button (Fig.1)
- Carefully slide the cassette back into the sensor body. Screw the end cap back on as tightly as possible.
- Test The **Rattler™**.

Fig. 1

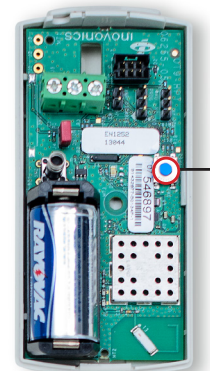

RESET BUTTON

General Troubleshooting:

If there is a rapidly flashing zone light on the **tattletale™** base unit that corresponds to the zone of The **Rattler™**, you will need to check 4 areas:

1. Check that the sensor's battery is above 2.9 volts, if not replace.
2. Check that the sensor's battery hasn't been dislodged. If it has, put back in place and press the black RESET button.
3. Verify that the sensor is within range of the **tattletale™** base unit.
4. There may be damage to the sensor that would require repair or replacement.

THE RATTLER™

continued

Follow these steps to change the batteries:

- Unscrew the end cap indicated by the sticker on the sensor body.
- Remove the transmitter cassette by gently pulling the end of the cassette out of the body.
- Remove the transmitter cap by applying pressure to the top of the sensor near the wire until the cap comes free of the transmitter.
- Locate the 3V CR123A battery. Remove old battery and replace with a new 3V CR123A battery and press the black RESET button (Fig.1)
- Carefully slide the cassette back into the sensor body. Screw the end cap back on as tightly as possible.
- Test The **Rattler™**.