

INSTALLATION INSTRUCTION

8852

Rev A


READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

1984 TOYOTA OEM STABILIZER

1. Attach cylinder end of stabilizer to bracket A. See illustration below.
2. Attach bracket B to the rod end of the stabilizer as shown in the illustration.
3. Extend the cylinder rod halfway out. Attach bracket B to tie rod with the supplied 3/8" bolt in the lower forward hole and the supplied U-bolt around the tie rod.

NOTE: Stabilizer rod end should be slightly higher than the cylinder end.

4. Turn the wheels completely left and then right. Verify that the stabilizer does not bottom out or contact other components.
5. Periodically, inspect nuts and bolts for tightness.

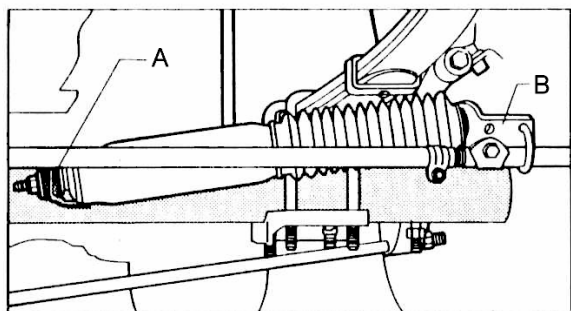

INSTALLATION INSTRUCTION

8852

Rev A


READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

1984 TOYOTA OEM STABILIZER

1. Attach cylinder end of stabilizer to bracket A. See illustration below.
2. Attach bracket B to the rod end of the stabilizer as shown in the illustration.
3. Extend the cylinder rod halfway out. Attach bracket B to tie rod with the supplied 3/8" bolt in the lower forward hole and the supplied U-bolt around the tie rod.

NOTE: Stabilizer rod end should be slightly higher than the cylinder end.

4. Turn the wheels completely left and then right. Verify that the stabilizer does not bottom out or contact other components.
5. Periodically, inspect nuts and bolts for tightness.

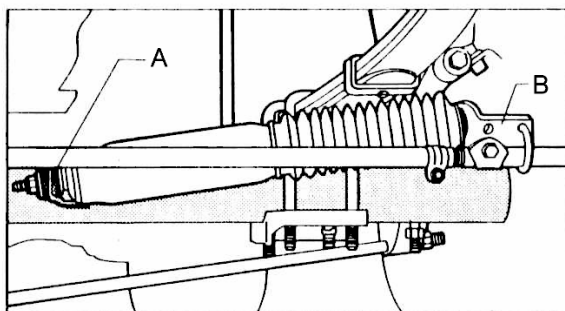

INSTALLATION INSTRUCTION

8852

Rev A

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

1984 TOYOTA OEM STABILIZER

1. Attach cylinder end of stabilizer to bracket A. See illustration below.
2. Attach bracket B to the rod end of the stabilizer as shown in the illustration.
3. Extend the cylinder rod halfway out. Attach bracket B to tie rod with the supplied 3/8" bolt in the lower forward hole and the supplied U-bolt around the tie rod.

NOTE: Stabilizer rod end should be slightly higher than the cylinder end.

4. Turn the wheels completely left and then right. Verify that the stabilizer does not bottom out or contact other components.
5. Periodically, inspect nuts and bolts for tightness.

