

Part No.


35754-01K

1 Boost Valve Sleeve

1 Reverse & Modulator

Boost Valve

1 Intermediate Boost Valve

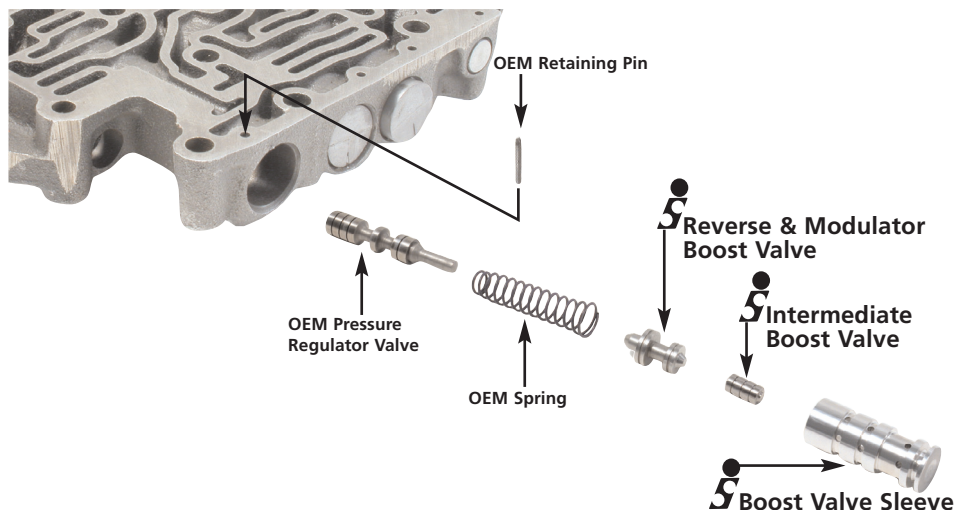

INSTRUCTIONS

1. Remove retaining pin holding boost valve and sleeve (do not discard retaining pin).
2. Discard the worn boost valve sleeve, reverse and modulator boost valve and the intermediate boost valve.
3. Lubricate all pieces of the replacement kit.
4. Carefully push the sleeve assembly into the valve body (only deep enough to install the retaining pin), open end toward the springs.
5. Install the retaining pin.