

Part No.

35988-01K

1 Accumulator Cover

2 O-Rings



INSTRUCTIONS

1. Place both o-rings back to back onto cover.
2. Lubricate o-rings and case bore with assembly lube.
3. Carefully work cover into position.
4. Push in on cover and install retaining ring.
5. Verify retaining ring is fully seated into its groove.