

### CAUTION FOR USERS OF P/N 7282

When torquing the manifold bolts to the cylinder heads, follow the factory sequence, but torque in three steps.

1. 10 ft./lbs.
2. 15 ft./lbs.
3. **Torque only the four outer/corner bolts to 20-25 ft./lbs.**

There is no cylinder head support under the other six bolts and the manifold may crack if torqued beyond 15 ft./lbs. Also, do not forget to install the two 1/4" pipe plugs, on the bottom of the intake, before bolting the manifold down.

Use thread sealant on the plugs.

Remember to retorque the manifold after 6 months or 6,000 miles following the above instructions.

**W516**

### CAUTION FOR USERS OF P/N 7282

When torquing the manifold bolts to the cylinder heads, follow the factory sequence, but torque in three steps.

1. 10 ft./lbs.
2. 15 ft./lbs.
3. **Torque only the four outer/corner bolts to 20-25 ft./lbs.**

There is no cylinder head support under the other six bolts and the manifold may crack if torqued beyond 15 ft./lbs. Also, do not forget to install the two 1/4" pipe plugs, on the bottom of the intake, before bolting the manifold down.

Use thread sealant on the plugs.

Remember to retorque the manifold after 6 months or 6,000 miles following the above instructions.

**W516**

### CAUTION FOR USERS OF P/N 7282

When torquing the manifold bolts to the cylinder heads, follow the factory sequence, but torque in three steps.

1. 10 ft./lbs.
2. 15 ft./lbs.
3. **Torque only the four outer/corner bolts to 20-25 ft./lbs.**

There is no cylinder head support under the other six bolts and the manifold may crack if torqued beyond 15 ft./lbs. Also, do not forget to install the two 1/4" pipe plugs, on the bottom of the intake, before bolting the manifold down.

Use thread sealant on the plugs.

Remember to retorque the manifold after 6 months or 6,000 miles following the above instructions.

**W516**

### CAUTION FOR USERS OF P/N 7282

When torquing the manifold bolts to the cylinder heads, follow the factory sequence, but torque in three steps.

1. 10 ft./lbs.
2. 15 ft./lbs.
3. **Torque only the four outer/corner bolts to 20-25 ft./lbs.**

There is no cylinder head support under the other six bolts and the manifold may crack if torqued beyond 15 ft./lbs. Also, do not forget to install the two 1/4" pipe plugs, on the bottom of the intake, before bolting the manifold down.

Use thread sealant on the plugs.

Remember to retorque the manifold after 6 months or 6,000 miles following the above instructions.

**W516**

### CAUTION FOR USERS OF P/N 7282

When torquing the manifold bolts to the cylinder heads, follow the factory sequence, but torque in three steps.

1. 10 ft./lbs.
2. 15 ft./lbs.
3. **Torque only the four outer/corner bolts to 20-25 ft./lbs.**

There is no cylinder head support under the other six bolts and the manifold may crack if torqued beyond 15 ft./lbs. Also, do not forget to install the two 1/4" pipe plugs, on the bottom of the intake, before bolting the manifold down.

Use thread sealant on the plugs.

Remember to retorque the manifold after 6 months or 6,000 miles following the above instructions.

**W516**

### CAUTION FOR USERS OF P/N 7282

When torquing the manifold bolts to the cylinder heads, follow the factory sequence, but torque in three steps.

1. 10 ft./lbs.
2. 15 ft./lbs.
3. **Torque only the four outer/corner bolts to 20-25 ft./lbs.**

There is no cylinder head support under the other six bolts and the manifold may crack if torqued beyond 15 ft./lbs. Also, do not forget to install the two 1/4" pipe plugs, on the bottom of the intake, before bolting the manifold down.

Use thread sealant on the plugs.

Remember to retorque the manifold after 6 months or 6,000 miles following the above instructions.

**W516**