



Item #	Part #	Description	QTY
1	90003438	Leaf Spring Front Drop Bracket - Driver	1
2	90003439	Leaf Spring Front Drop Bracket - Passenger	1
3	90003440	Leaf Spring Frame Brace - Driver	1
4	90003441	Leaf Spring Frame Brace - Passenger	1
5	90003442	Leaf Spring Mount Spacer, 656" ID x 1.00" OD x 2.43 Long	2
6	90003443	Rear Shackle	2
7	70015559	Shackle Bushing - installed in shackle	2
8	90003444	Leaf Spring Flip Bracket	4
9	90001366	Leaf Spring Clamp Plate	2
10	99626004	U-Bolt, 3.375"W x 7.00"L x 5/8"-18	4
11	90003445	Differential Harness Relocation Bracket	3
12	70015643	Bump Stop	2
13	90003446	Bump Stop Nut Plate	2
14	90003447	Rear Shock relocation Bracket	2
15	90003474	Sleeve, .558" ID x .75" OD x 1.67 Long	2
	90003448	1/2" Riv-Nut Tool	1
<b>11729511 KIT SHOCKS</b> (Shock are NOT included with 11729512 Kit)			
	986-10-806	6.3" Travel Single Adjustable Shock	2
	815-05-022-KIT	1.7" Shock Eyelet	2
	90001994	Shock Bearing, .625" D - installed in shock	4
	90001995	Internal Snap Ring - installed in shock	8
	90003449	Shock Bearing Spacer - .500" ID x .81" Spaced Length	4
	90003473	Shock Bearing Spacer - 14mm " ID x .588" Spaced Length	4