


Installation Instructions for 1055 Pocket Practice Tree II

Proper Insertion of Hand Switch: Plug Hand Switch into Pocket Practice Tree. Connection MUST be FLUSH with the top of the Practice Tree. If you see any shiny metal then the plug is **NOT** inserted all the way.

NOTE: When you insert the Hand Switch into the Practice Tree – Twist and Push at the same time. You will feel a slight click when the connection is complete and you will not be able to see any metal between the top of the Practice Tree and the Hand Switch Connection.

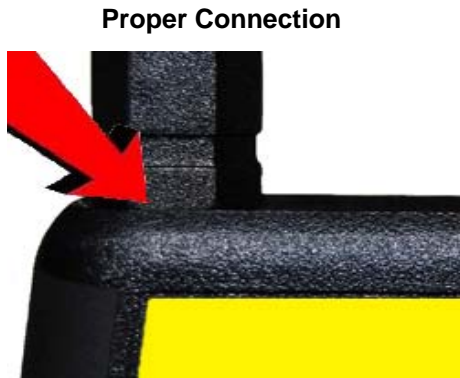

INTRODUCTION:

1. This Practice Tree requires 2 – AA Batteries (not included)
2. **Low Battery** will come on when Voltage from the Battery Compartment drops below 2.6 Volts. Under 2.3 volts the practice tree will not turn on.
3. The practice tree has a **7 Segment Numeric Display** that is designed to show Numerals ONLY! We have used upper and lower case letters for words (All letters are not available).
4. The practice tree goes to Sleep Mode after 3 minutes when not in use.

MAIN MENU:

- Press & Hold the **ESCAPE /ON-OFF Button** to turn “ON” or turn “OFF” the practice tree. The practice tree will be in the main menu “JEGS” is displayed on the screen.
- Press the **Up or Down Arrow Key** to turn the **Backlight ON or OFF**.
- Press the “**Stage/Enter**” Key to enter **Practice Mode** (Refer to "Practice Mode" Instructions).
- The **Main Menu** can be reached at any time by repeatedly pressing the **Escape Key**.

PRACTICE MODE

- **Practice your Reaction Time** here.
You can either:
 1. Depress the “**STAGE/ENTER**” key until the tree begins to cycle. Release the “**STAGE/ENTER**” key to clock Reaction Time.
 2. Or Plug the **External Hand Switch** into the 1/8" jack on the top of the practice tree. Depress the button on the hand switch until the tree begins to cycle. Release the button to clock Reaction Time.

BUTTON DESCRIPTIONS while in the PRACTICE MODE:

- **STAGE/Enter Key** – Stages the practice tree when you are not using the External Hand Switch.
- **Mode Key** – Press the **Mode Key** to enter the **PRACTICE MENU** where you can change your Practice Settings (Below are the Practice Menu Instructions).
- **Reset Key** -- When editing a setting in the **Practice Menu** - pressing the Reset key restores the factory default.
- **Reset Key** – While in **Practice Mode** resets to “**S UP**” Stage UP.
- **Escape Key** – Returns to **Main Menu** and if held down will shut off the unit.
- **Up/Down Arrow Keys** – While In **Practice Mode** will Increase or decrease the delay box setting.



1-800-345-4545 jegs.com

PRACTICE MENU - INSTRUCTIONS:

- **Change your: Tree Type & Tree Speed, Rollout, Delay Box, Bump Down or View Statistics here.**
- While in **Practice Mode** press the **MODE** key to access the **Practice Menu**.
 1. **Press the Up or Down Arrow Key** to scroll through the menu.
 2. **Press the "Stage/Enter" Key to Access or Save** a setting.
 3. **Press the "Escape" Key** to return to the **Practice Mode**.
 - a) **Statistics (Stat)** automatically scrolls through ("6rn" = # green lights, "rEd" = # red lights, and "AU6" = Running Average).
 - b) **Tree (trEE)** Combination of **Tree Type** and **Tree Speed**. Full Tree choices: F500 or F400. Pro Tree choices: P400 or P500.
 - c) **Roll Out (roll)** Factory setting is .320 Seconds. You can set your own from .100 to 1.000 seconds.
 - d) **Delay Box (d.b)** -- You can set your own from .000 to 1.500 seconds. Factory setting is .000 seconds.
 - e) **Bump Down (bP.dn)** -- You can set your own from 0.000 to 0.020 seconds. Factory setting is .000 seconds.
 - f) **Defaults (dFLt)** Press the **Stage/Enter** key to restore all Factory Settings.

IMPORTANT: You must press the "STAGE/ENTER" Key to **Save** your changes



1-800-345-4545 jeps.com