

# Installation Instructions for 2010

## Eazy Up Canopy

10' x 20'

Please take a few minutes to read the use and care instructions. If you need any assistance or have any questions please call JEGS at 1-800-345-4545.

Read this information before proceeding. It is the user's responsibility to take precautions at all times.


- Do not use in any potentially windy or rainy weather.
- Do not rely on for protection in heavy or prolonged rain storms.
- Designed as a temporary shelter. Do not leave up for extended periods of time.
- Use caution when handling the folding frame. Be careful not to pinch hands or fingers as frame opens and closes.
- Do not use in a lightning storm.
- Do not leave unattended.
- Do not build fires within the enclosure.
- Keep all flame away from unit. Canopy may burn if left in continuous contact with a flame source.

### Package Contents

- (1) One-piece foldable frame
- (1) Yellow JEGS canopy top
- (1) Black JEGS storage bag
- (3) Peak poles

### Unpack and Open

1. Place one-piece foldable frame in center of designated area.
2. From the 10' side of the canopy, and with a partner on the opposite side grasp two outer legs. Lift the frame slightly off the ground, and pull the frame backwards until it is approximately 3/4 of its fully-opened size. Set frame back down.
3. Place (3) peak poles into center of (3) spring loaded peak beams.

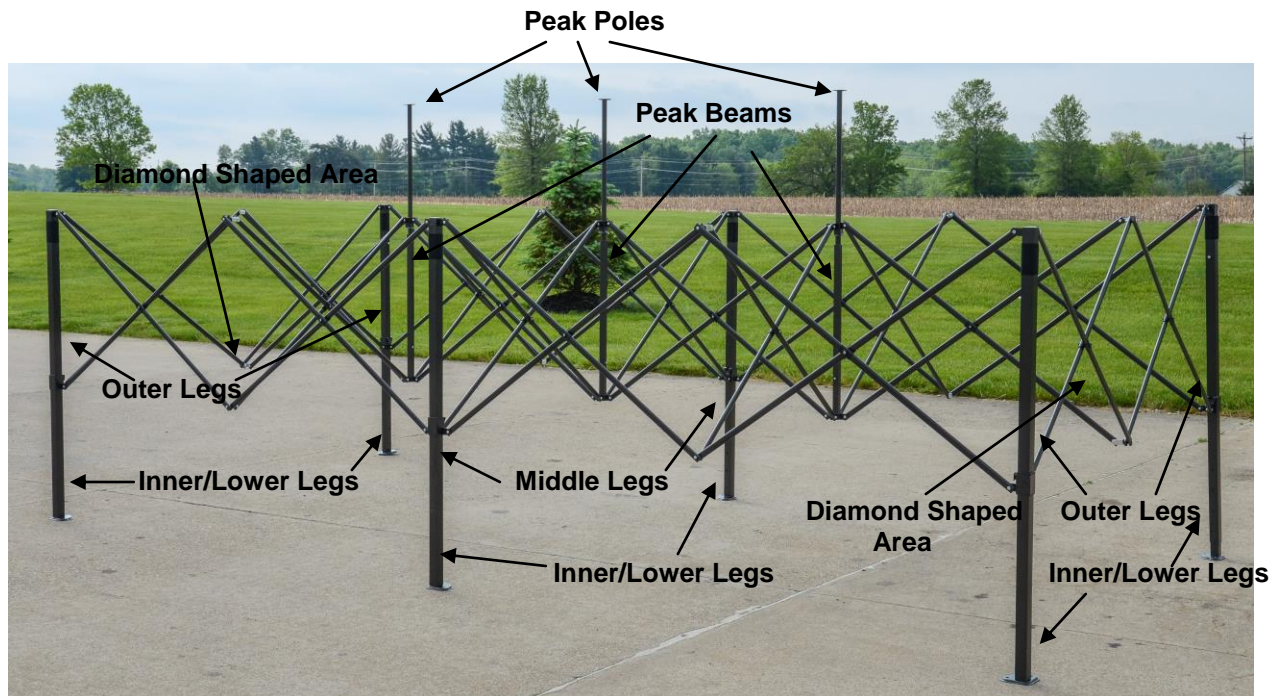

1-800-345-4545 [jegis.com](http://jegis.com)

### Attach Fabric Top

1. Gently unfold the canopy top, and place it on the semi-opened frame over the peak poles. Identify the corners and align them with the frame corners.
2. Attach the canopy by matching the hook and loop strips on the inside with the hook and loop strips on the top of each frame leg.
3. Pull the canopy top down over the frame and push the hook and loop strips firmly together.



### Setup

1. With a partner on the opposite side grasp the bottom of the diamond shaped area in the center of the frame.
2. Lift the frame up slightly and step backwards until the frame is almost fully open. Gently shake the frame while opening. Use caution! Do not pinch hands or fingers!
3. With a partner lift two outer legs up simultaneously.
4. Slide the lower/inner legs out until the leg adjustment toggle buttons lock at the selected height.
5. By pushing up on each leg a button at the top of each leg will auto-engage when aligned with the hole. This will lock the leg into place.
5. Moving to the middle of the frame structure lower the inner leg on the middle leg until the toggle button locks. Be sure the top button is engaged on this leg as well.
6. Repeat on the opposite side. Be sure to adjust two outer legs together thus avoiding frame damage.





#### **Take Down**

1. Collapse canopy legs. Depress the toggle button on one of the middle legs to slide the lower/inner leg section into the upper/outer leg.
2. With a partner slightly lift two adjacent corner legs simultaneously.
3. Depress the toggle button and slide lower/inner legs into upper/outer legs, making sure to do two legs at time on the same side. Depress top lock button.
4. Repeat on remaining legs. **Note:** Keep the toggle buttons depressed while retracting leg.
5. Closing canopy. Grasp the frame on the top of the diamond-shaped area of center on the opposite sides.
6. Lift the shelter up slightly, and shake it while stepping towards your partner until the canopy is approximately 3/4 closed. Use caution! Do not pinch hands or fingers!
7. Grasp the two outer legs and push the frame together until it is fully closed.
8. Store the shelter in the bag provided. Note: Hug your canopy before placing in the storage bag.

#### **Care & Maintenance**

1. Use a mild soap (not detergent) and plenty of water for the canopy cleaning.
2. Let the top and frame dry completely before closing or storing to avoid mildew.
3. Frame will operate and look better if occasionally treated with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying canopy.
4. Use a seam sealer (available at most sporting goods and hardware stores) if top leaks or drips water.
5. Slightly tighten bolts if frame become loose.



**1-800-345-4545 [jeps.com](http://jeps.com)**