



'86-'93 5.0L Intake Manifold Part #5001-5002

INSTALLATION INSTRUCTIONS

Supplied Materials

Bottom cover, Upper manifold, Lower manifold, Plenum cover plate,
1501 Throttle body (comes with instructions and bill of materials)
5002 ONLY

Gaskets

EGR valve to intake, Throttle body to intake, Upper to lower manifolds,
Plenum cover plate to upper

Hoses

(1) Hose clamp, (1) Vacuum cap, 24" Vacuum hose 5/32" I.D.,
24" Hose 3/8" I.D. (cut to fit)

Installation Hardware

- (1) 90° fitting, 3/8-18 to 3/8" I.D. hose
- (8) Bottom plate mounting, 1/4-20 x 3/8" SS-BHCS
- (4) Throttle body mounting, 5/16-18 x 1" SS-SHCS
- (2) Upper to lower mounting, 5/16-18 x 2-3/4" SHCS
- (6) Upper to lower mounting, 5/16-18 x 1-1/4" SHCS
- (6) Plenum cover plate mounting, 10-32 x 5/8" SS-BHCS
- (1) EGR valve to upper manifold replacement stud- 3/8"
- (1) EGR valve to upper manifold replacement stud- 5/16"
- (2) Upper manifold locating pins (dowel pins) 1/4" x 3/4"
- (3) Water fitting/vacuum port block-off plugs, 3/8-18 pipe plugs
- (2) MAP sensor bracket re-location, #10 x 1/2" -SELF TAPPING



BHCS= Button Head Cap Screw.



SHCS= Socket Head Cap Screw.

Specified lengths are measured from the bottom of the bolt/screw head

Other Abbreviations

SS= Stainless Steel
IAC= Idle Air Control
PCV= Pressure Control Valve
FPR= Fuel pressure Regulator
EGR= Exhaust Gas Recirculation
MAP= Manifold Absolute Pressure
RTV= Room Temperature Vulcanizing (silicone sealant)

Fuel Rail Kit

- (1) FPR mount
- (2) Small O-rings
- (2) Large O-rings
- (4) Mounting tabs
- (1) Crossover tube
- (3) Tubular spacers
- (1) Fuel rail end cap
- (1) FPR to FPR mount gasket
- (2) Rail end plugs, 3/8-18 pipe plugs
- (2) Mount to rail bolts, 6-32 x 3/4" SS-SHCS
- (3) Mount to regulator bolts, 10-32 x 3/4" SS-SHCS
- (1) Short rail mounting bolt, 1/4-20 x 1/2" SS-SHCS
- (3) Long rail mounting bolts 1/4-20 x 1-1/2" SS-SHCS
- (8) Mounting tab to rail screws, 10-32 x 5/8" SS-BHCS
- (1) Fuel rail end cap locking screw 10-32 x 5/8" SS-BHCS
- (1) Pre-assembled hose, 90° fitting- 3/8" I.D. hose- Spring Lock adapter
- (1) Pre-assembled hose, 90° fitting- 1/2" I.D. hose- Spring Lock adapter

Tools Required

This is a list of the essential tools required to perform a basic SSI intake installation on a showroom stock 87-93 5.0 Mustang. Depending on the application, your installation may require additional tools that are not listed below.

Flat head screwdriver	T-20 Torx
6" or longer extension	3/8" ratchet
Cutters or heavy scissors	Timing light
1/2", 11/16", and 1" deep sockets,	Electric drill
1/4" ratchet (or 3/8"-1/4" reducer)	Torque wrench
7/32", 1/4", 11/32", 5/16", and 10mm sockets	Adjustable pliers
1/2", 5/8", 11/16", 1", and 1-1/8" open end wrenches	
1/2" and 5/8" fuel line disconnect tools (spring lock type)	
7/64", 1/8", 5/32", 1/4", 5/16", and 5mm, Allen wrenches	

Additional Items Required for Installation

Teflon tape, Thermostat housing gasket, Lithium grease (or equivalent),
(1) Tube of grey (or equivalent) RTV, Large port intake to head surface
gaskets, Coolant/distilled water (depending on amount lost during
installation), Red thread locker

Items That May Require Replacement During Installation (Depending On Their Condition)

Thermostat, PCV/grommet, Engine oil and filter,
Any worn or damaged hoses/vacuum lines,
Any worn or damaged fuel injector O-rings/tips

- Step 1** Disconnect negative battery terminal.
- Step 2** Remove intake hose between the mass air meter and throttle body.
- Step 3** Remove the distributor. (Use a marker pen to mark the position of the rotor on the lower cup of the distributor. Also note where the distributor base is at the engine block. Your distributor should have a hash mark on it for ease of reference. This will help reassembly)

WARNING!

COOLANT MAY BE HOT. USE CAUTION WHEN DISCONNECTING HOSES.


- Step 4** If your manifold has a decorative plate (5.0 H.O.) on top, you will need to remove the plate. Use a T-20 Torx to remove the screws then unclip the wiring harness locator from the manifold. (These screws are usually corroded and can be very challenging to remove. We use a small hammer to tap on the screw heads to help break them loose).
- Step 5** Disconnect the electrical, vacuum, coolant, and cable connections at the throttle body, EGR valve, fuel pressure regulator, IAC valve, and the upper intake manifold. (There are vacuum lines underneath and behind the upper manifold)
- Step 6** Using a 1/2" socket and extension remove the upper intake manifold bolts, then slide the manifold towards the front of the car and disconnect the vacuum lines that attach to the rear of the manifold and the PCV. Lift the upper manifold out of the car and set it aside. (Some models have a steel bracket that connects between the upper and lower manifolds in the rear. Remove and discard this bracket if applicable).
- Step 7** Unplug the wiring harness from the fuel injectors (Be sure to only pull on the plastic plugs, never pull by the wires), lower manifold connections, and oil pressure sending unit. Set the harness back and out of the way. (It is not necessary to remove the brown ground wire that bolts to the back of the driver side cylinder head).
- Step 8** Unplug the MAP sensor and remove the screws that hold its mounting bracket to the firewall. (The MAP sensor will be relocated in a later step).
- Step 9** Disconnect the water hoses that run to the heater core feed/return pipes and thermostat housing. Remove the small water hose that runs to the EGR spacer. (To avoid spilling coolant we use a wet/dry shop vacuum to suck the water out of the hoses).
- Step 10** Remove the sensors from the lower manifold and loosen the heater core feed/return pipe with a 1-1/8 open end wrench. (It's best to do this while the manifold is still bolted to the engine)

!WARNING!

FUEL SYSTEM MAY BE UNDER PRESSURE. USE EXTREME CAUTION WHEN RELEASING PRESSURE. EXTINGUISH ALL OPEN FLAMES AND IGNITION SOURCES WHEN WORKING WITH GASOLINE AND VAPORS. ALWAYS WEAR PROTECTIVE EYEWEAR.

- Step 11** Carefully release any fuel system pressure by removing the cap on the fuel rail near the front end of the passenger side valve cover, behind the alternator and depressing the Schrader valve using a small screwdriver or pick. (Hold a rag over the valve while releasing the pressure to avoid fuel spray).
- Step 12** Use the fuel line disconnect tools to separate the fuel feed and return lines from the injector rails.
- Step 13** Unbolt and remove the lower manifold (The fuel rails will have excess fuel in them, use caution when removing to avoid spillage)
- Step 14** Unbolt and remove the fuel rails and injectors from the lower manifold. (Check each injector to make sure that both of the O-rings are in place. The O-rings have a tendency to get stuck in the fuel rails)
- Step 15** Separate the fuel pressure regulator from the stock fuel rail. (Skip this step if you are installing an aftermarket regulator)
- Step 16** Inspect the injector tips and O-rings for cracks or damage. If you have any questionable items, we recommend replacing them (available through auto parts stores).

- Step 17** To ensure proper sealing of your new intake, thoroughly scrape and clean the head surfaces, and engine block gasket areas. (Be sure to get any debris, oil, or coolant out of the ports in the heads, and the intake valley. A wet/dry shop vacuum works well for this)
- Step 18** Apply a 1/8" bead of RTV to the bottom cover plate mounting surface of the BBK lower manifold, install the bottom cover plate using 10-32 SS-BHCS's and fold the anti-backout tabs over each bolt head.
- Step 19** Transfer all of the sensors, thermostat and housing, PCV strainer basket, rubber grommet, and PCV from your old lower intake to the BBK lower using a new thermostat housing gasket. (Inspect your thermostat, PCV, and grommet. If they are old or damaged now would be a good time to replace them. When worn or damaged these items can negatively affect your engine's performance).

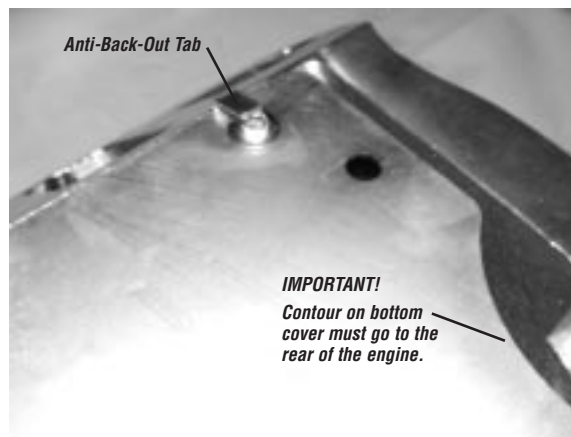

Step 18. Anti-back-out tab folded over.

Assembling the Fuel Rails

- Step 20** Wrap the threaded portions of the pre-assembled fuel rail to Spring Lock couplers with Teflon tape and tighten the feed line into the front of the passenger side rail, and the return line into the side of the FPR mount. When the rails are installed and tightened the feed line needs to follow the angle of the valve cover pointing towards the passenger side and the return line needs to run parallel to the fuel rail towards the radiator
- Step 21** Attach the fuel rail mounting tabs to the fuel rails using 10-32 SS-BHCS's with red thread-locker applied to them.
- Step 22** Place the supplied FPR gasket in the machined gasket surface area of the supplied FPR mount and attach the FPR of your choice to the FPR mount using the three 10-32 SS-SHCS's with red thread-locker applied to them.
- NOTE: Lightly lubricating all O-rings will help to ensure proper sealing.**
- Step 23** Place one of the SMALL O-rings into the machined O-ring groove on the bottom of the FPR mount and attach the FPR/FPR mount assembly to the passenger side fuel rail using the two 6-32 SS-SHCS's with red thread-locker applied to them.
- Step 24** Place the other SMALL O-ring over the fuel rail end cap into the O-ring groove. Install the end cap into the front end of the driver side fuel rail and secure it using one 10-32 SS-BHCS with red thread-locker applied to it.
- Step 25** Insert the injectors into the rails with the electrical sockets pointing outward.
- Step 26** Place one LARGE O-ring into the crossover tube port of each fuel rail.
- Step 27** Install the passenger side fuel rail/injector assembly by guiding each injector into its respective port. (The rails are designed to sit at the correct stab depth once everything is tightened. Do not force them down onto the injectors). Slip the spacer tubes behind the rail and into their seats and START threading two 1/4-20 x 1-1/2" SS-SHCS's. (Do not tighten these bolts yet)
- Step 28** Insert the crossover tube into its port on the passenger fuel rail making sure that its bends follow the machined contour of the lower manifold and that it does not catch/snag the O-rings.
- Step 29** Install the driver side rail while guiding the crossover tube and injectors into their respective ports. In the front, slip the spacer tube behind the rail into its seat and attach using a 1/4-20 x 1-1/2" SS-SHCS. In the back use the 1/4-20 x 5/8 SS-SHCS. Tighten all four of the fuel rail mounting bolts (As you tighten the rail mounting bolts the crossover tube will seat itself firmly into place).



Steps 20-30. Prepped fuel rails.

- Step 30** Wrap the threads of two of the 3/8-18 pipe plugs in Teflon tape and tighten one into the threaded opening in the rear of each fuel rail.
- Step 31** Apply your choice of lower intake gaskets to the head surface and apply a 1/4" bead of RTV sealant to the front and back edges of the engine block. (Use this sealant in lieu of factory type end seal gaskets for best leak prevention).
- Step 32** Push the two supplied dowel pins into the two small holes in the top of the lower manifold (If your application requires a driver side throttle body do not use the studs).
- Step 33** Place the BBK lower manifold/fuel rail assembly on the engine. Install the heater core feed/return pipe assembly and tighten the 12 lower intake mounting bolts (Place the intake bolt that mounts the heater tube through the mounting tab and then tighten).
- Step 34** Install all of the lower manifold sensors into the BBK lower and install two of the supplied 3/8-18 pipe plugs wrapped in Teflon tape into the remaining holes.
(The EGR spacer water return fitting is not used on the BBK lower. One of the supplied 3/8-18 plugs must be installed to block it off).
- Step 35** Re-establish all lower manifold wiring connections that you disconnected in step 8 and re-connect the water hoses that run to the heater core feed/return pipes, and thermostat housing. (The large black and white wiring harness connectors should now sit behind the driver side fuel rail).
- Step 36** Firmly push the supplied vacuum cap onto the EGR spacer coolant feed fitting on the heater core feed/return pipe. Tighten the supplied hose clamp around the cap.

Instructions for Pressure Testing the Fuel Rails

(If the car has automatic door locks or an alarm, be sure to leave the driver door open while following this procedure. Otherwise the doors might lock with the key in the ignition). With the negative battery cable disconnected turn the ignition key to the run position. While watching the fuel rails and connections touch the negative battery cable to the negative terminal of the battery for 3 seconds. Repeat this 3 times. (This will turn the fuel pump on momentarily and pressurize the fuel rails. If you have any leaking connections or fittings, this will allow you to find them before you put the upper intake manifold on). Inspect the fuel rails and injector assembly. Once you have verified that there are no fuel leaks in your system turn the key back off.

- Step 37** From the bottom of the original upper intake transfer the large steel vacuum tree and other fittings to the BBK upper (the large tube on the steel tree needs to point out to the driver side) and install the supplied pipe plug wrapped in Teflon tape into the remaining hole.
- Step 38** Install the supplied 90° vacuum fitting into the front driver side bottom corner of the upper intake.
- Step 39** Cut the supplied 3/8" hose into 2 sections. (1) 8" and (1) 15". Connect the 8" section between the 90° and T fittings. Connect the 15" section to the PCV on the lower manifold. The 15" section will connect between the backside of the T fitting and the PCV once the upper manifold is installed.
- Step 40** Re-position the electrical connector on the EGR valve. With the connector in the 10:00 position remove the fasteners and rotate the connector to the 2:00 position. Re-attach the fasteners. The connector should be pointing up and out to the passenger side of the car.
- Step 41** Transfer the EGR valve, throttle body*, and throttle cable bracket to the BBK upper *(5002 customers will install the supplied throttle body and transfer the IAC valve) using the 5/16-18 x 5/8 bolts and the supplied gaskets for the throttle body, and the stock bolts for the bracket. (If your vehicle has cruise control install the supplied spacer between the upper manifold and throttle cable bracket using the two M-8 x 1.25 x 30 SS-BHCS. The spacer only installs one way).




Step 40. Reposition the EGR valve.



Prepped upper intake.

- Step 42** Connect the supplied vacuum hose to one of the small vacuum ports on the steel tree. This will run under the upper intake and connect to the FPR once the upper is installed. (You will not be re-using the original FPR vacuum hose).
- Step 43** Lay the supplied gasket over the dowel pins on top of the lower intake. (The gasket will only fit over the locating pins one way). Using the dowel pins as guides set the upper manifold onto the lower and torque the supplied mounting bolts to 10-13 Ft-lbs.
- Step 44** If applicable; SLIGHTLY loosen the large air conditioning hose connection on the back of the compressor until the hose can be swiveled. (1/4-1/2 turn should be all that is need to loosen the connection enough for this). Gently lift the hose to its maximum height where it curves to run along the firewall (without bending) and re-tighten the connection.
- Step 45** Re-establish all upper manifold connections that you disconnected in step 5.
- Step 46** With the MAP sensor plugged in, hold it up to the firewall and determine the best mounting location. Using the supplied self-drilling screws relocate the MAP sensor on the firewall.
- Step 47** Using the supplied gasket and the final 6 10-32 SS-BHCS attach the plenum cover to the upper manifold.
- Step 48** Install and connect the distributor, cap, and spark plug wires (be sure to line up your reference marks when inserting the distributor).
- Step 49** Connect the intake hose to the mass air meter and throttle body.
- Step 50** Connect the negative battery terminal.
- Step 51** Refill the radiator with your choice of coolant/water mixture.
- NOTE:** *If you think you may have dropped dirt, debris, or coolant into the intake valley of the engine during this installation, we **STRONGLY RECOMMEND** that you change your oil and filter before attempting to start your engine.*
- Step 52** Start the engine and adjust the ignition timing to your preferred setting. (Stock setting is 10° ATC)

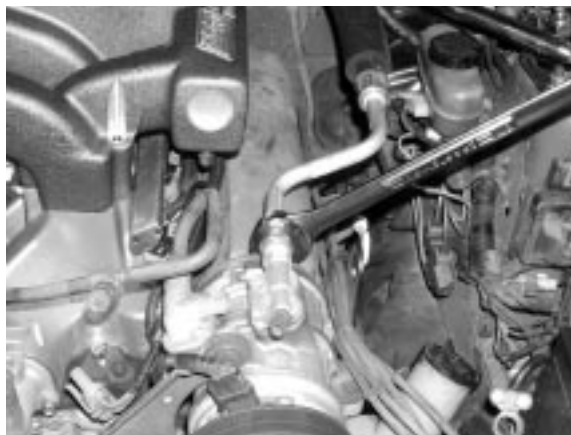

Step 44. Loosen and swivel A/C hose.



Step 46. Relocate the MAP sensor.

WARNING!

ALWAYS USE CAUTION WHEN OPENING THE RADIATOR CAP! THE SYSTEM MAY BE UNDER PRESSURE AND THE COOLANT MIGHT BE HOT!

It may take a bit of driving to circulate any ingested air out of the engine cooling system. Keep watch over the temperature gauge and be prepared to add fluid until you are sure the system is full. You may need to top off the reservoir/radiator more than once after this install.

Torque Sequence

Step 1. 12 Ft.- lbs.

Step 2. 18 Ft.- lbs.

Step 3. 24 Ft.- lbs.



Please visit us at www.bbkperformance.com to view a fully photographed installation of this and the many other BBK products available to help maximize the performance potential of your vehicle.