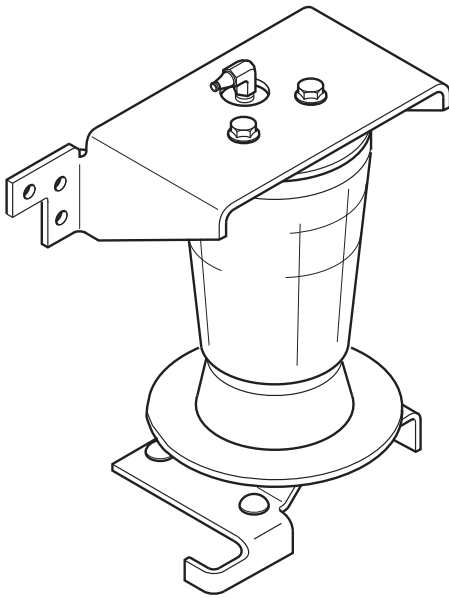


**WARNING:**

Do not inflate this assembly when it is unrestricted. The assembly must be restricted by the suspension or other adequate structure. Do not inflate beyond 100 P.S.I. Improper use or over inflation may cause property damage or severe personal injury.

**INSTALLATION INSTRUCTIONS**

Congratulations - your new Sport-Rite Air Helper Springs are quality products capable of improving the handling and comfort of your vehicle. As with all products, proper installation is the key to obtaining all of the benefits your kit is capable of delivering. Please take a few minutes to read through the instructions to identify the components and learn where and how they are used. It is a good idea to start by comparing the parts in your kit with the parts list below.

The heart of the Sport-Rite kit is, of course, the air helper springs. Remember that the air helper springs must flex and expand during operation, so be sure that there is enough clearance to do so without rubbing against any other part of the vehicle.

Be sure to take all applicable safety precautions during the installation of the kit.

Your kit includes separate inflation valves and air lines for each air helper spring. This will allow you to level your vehicle from side to side as well as from front to back. If you would rather have a single valve inflation system, your dealer can supply the required "T" fitting.

**IMPORTANT!**

*For your safety and to prevent possible damage to your vehicle, do not exceed the maximum load recommended by the vehicle manufacturer (GVWR). Although your Sport-Rite Air Helper Springs are rated at a maximum inflation pressure of 100 P.S.I., this pressure may allow you to carry too great a load on some vehicles. Check your vehicle owner's manual for maximum loads listed for your vehicle.*




*When inflating your Sport-Rite Air Helper Springs, add air pressure in small quantities, checking pressure frequently during inflation. The air spring requires much less air volume than a tire and, therefore, inflates much quicker.*

**PARTS LIST**

|                                  |      |    |                             |   |
|----------------------------------|------|----|-----------------------------|---|
| AIR SPRINGS                      | 9000 | 2  | 3/8" WASHERS                | 1 |
| RIGHT UPPER BRACKET              | 5209 | 1  | 3/8"-16 X 3" CARRIAGE BOLTS | 4 |
| LEFT UPPER BRACKET               | 5208 | 1  | 5/16" FLAT WASHERS          | 4 |
| LOWER BRACKETS                   | 5218 | 2  | PUSH TO CONNECT             |   |
| DISK                             | 5204 | 2  | INFLATION VALVES 3032       | 2 |
| BRACKET STRAPS                   | 5086 | 2  | PUSH TO CONNECT             |   |
| AIR LINE TUBING                  |      | 1  | FITTINGS 3031               | 2 |
| 3/8"-16 X 1-1/2" HEX BOLTS       |      | 8  | NYLON TIES                  | 6 |
| 3/8"-16 FLANGE LOCK NUTS         |      | 12 | THERMAL SLEEVE              | 2 |
| 3/8"-16 X 3/4" FLANGED HEX BOLTS |      | 6  | CAUTION TAG                 | 2 |
| 3/8" LARGE FLAT WASHERS          |      | 7  |                             |   |

**Note:** The kit assembly illustration shown to the right is of the right, or passengers side, of the vehicle. Reverse any orientations when assembling the kit on the left, or drivers, side of the vehicle.


## Kit to frame assembly

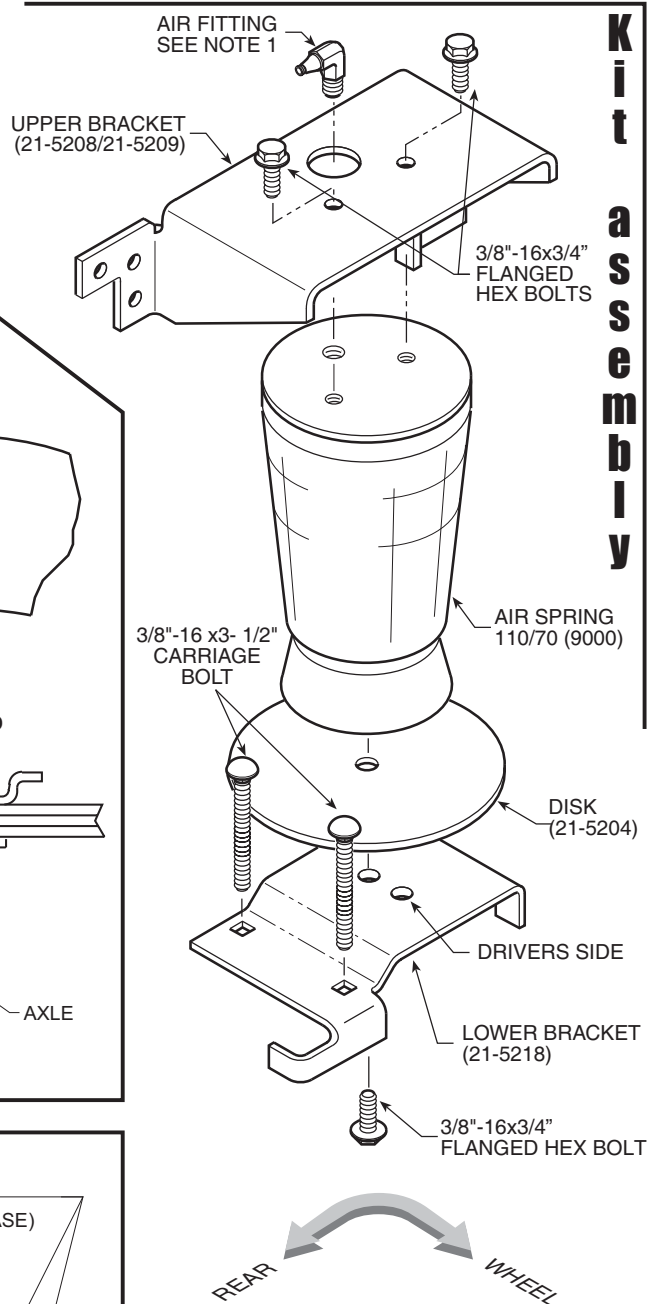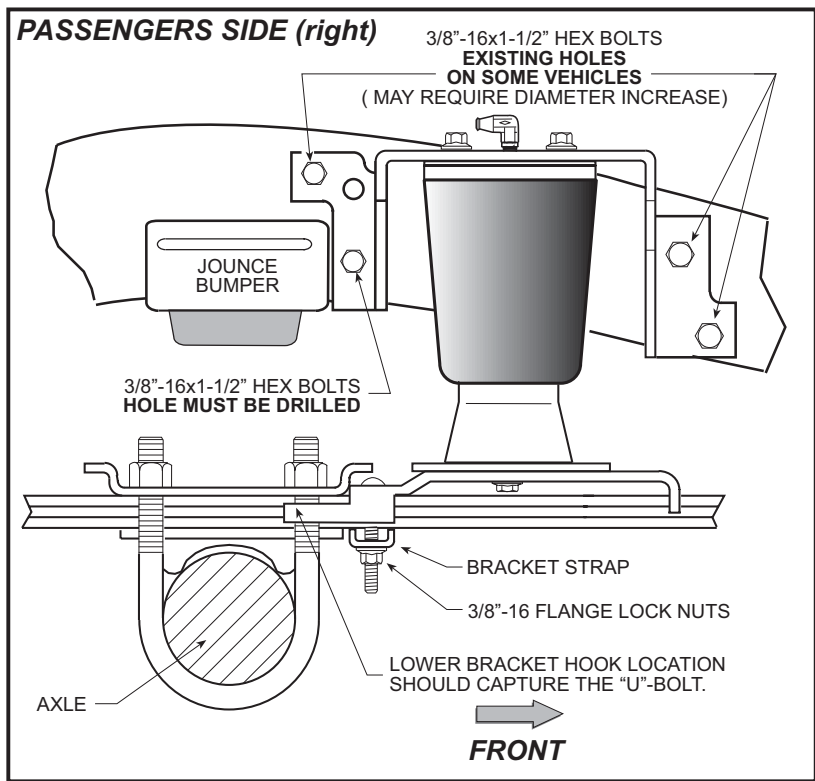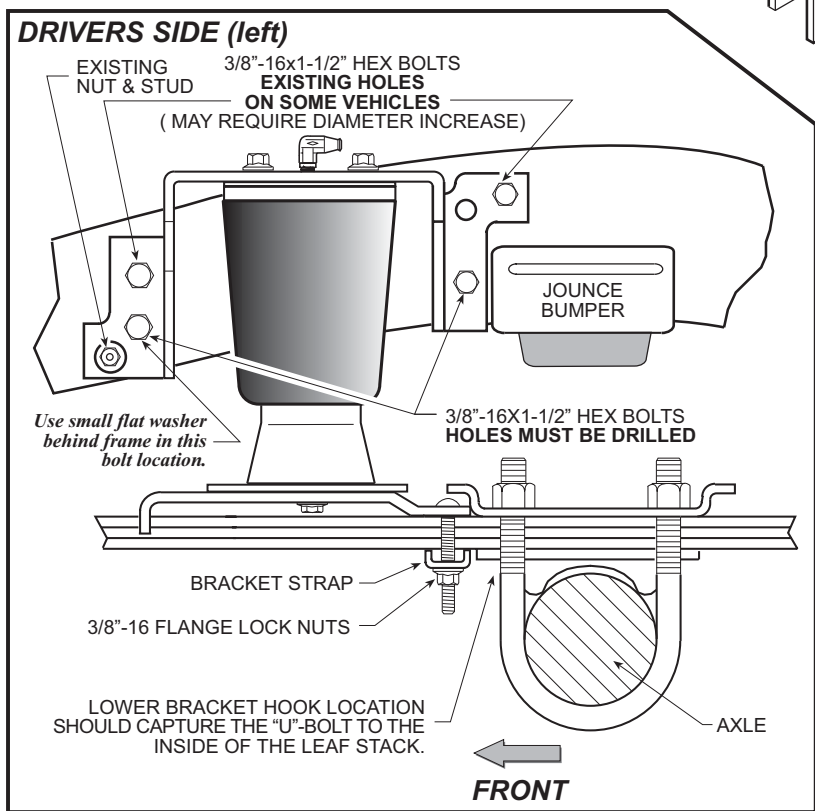


**Note 1:**  
Elbow fitting may point in various directions depending upon inflation valve location.

**Note 2:**  
Please take all necessary safety precautions while installing your Sport-Rite kit.

**FIGURE "A"**

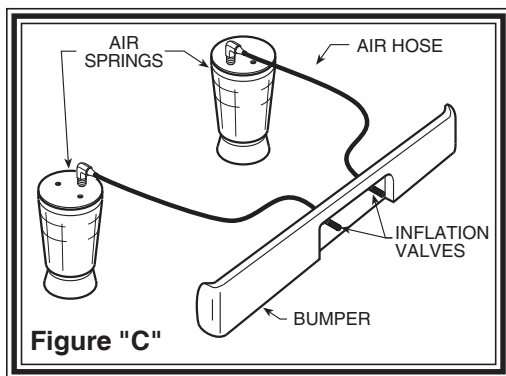

**Figure "C"**

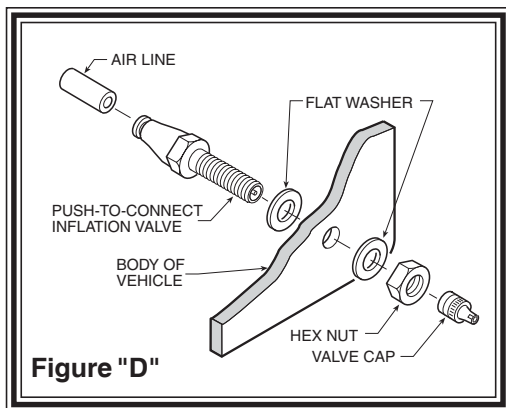

**Figure "D"**

**NOTE:**

Once the air helper springs are installed, it is recommended that the vehicle not be lifted by the frame, as over-extension may occur, resulting in damage to the air helper springs. However, should it become necessary to raise the vehicle by the frame, deflate both air helper springs completely.

**STEP 1 - PREPARE THE VEHICLE**

With the vehicle on a solid, level surface chock the front wheels. Place a jack under the rear axle, jack up and remove the rear wheels. The use of jack stands is required for this installation use jack stands rated for your vehicles weight. Remove the positive battery cable.

**STEP 2 - PREASSEMBLE THE RIDE-RITE KIT**

Select one air helper spring from your kit. Install the upper right bracket stamped "R" by aligning the threaded holes on the air spring with the holes on the upper bracket. Fasten the upper bracket to the air spring using the 3/8"-16 x 3/4" flanged hex bolt as shown in **Figure "A"**. Install the air fitting as shown in **Figure "A"**. Tighten the air fitting securely to engage the orange thread sealant (make sure the fitting is pointing in the direction of the inflation valve see **Note 1 Figure "A"**). Insert the two 3/8"-16 x 3 1/2" carriage bolts into the lower bracket. Next, attach the lower bracket and disk to the air spring finger tight using the 3/8"-16 x 3/4" flanged hex bolt see **Figure "A"**. Refer to **Figure "A"** for proper orientation of the lower bracket.

**STEP 3 - ATTACH LOWER BRACKET TO LEAF SPRING**

Place the assembly on the passenger's side on top of the leaf spring stack forward of the axle (see **Figure "A"**). Attach the the lower bracket to the leaf stack using the 3/8"-16 x 3 1/2" carriage bolts installed earlier and bracket strap as shown in **Figure "A"**. Note that the hook on the lower bracket will capture the "U"-bolt. Tighten the lower air spring bolt that attaches the lower bracket to the air spring.

**STEP 4 - MARK AND DRILL HOLES IN THE FRAME RAIL**

Several existing holes on some vehicles will be used in the frame rail. Refer to **Figure "A"** for positioning of the upper bracket and selected hole locations. Some holes may also need to be drilled or existing holes may need to be enlarged to accept the 3/8"-16x1-1/2" hex bolts (see **Figure "A"**). With the air spring assembly in place, use the upper bracket as a template and drill the holes or enlarge existing holes using a 7/16" drill bit. **Before drilling the holes make sure all electrical, brake and fuel lines are**

**cleared from the path of the drill. In order to prevent any damage to these lines it is recommended that a piece of wood be placed between the frame rail and the existing lines.**

**STEP 5 - ATTACHING THE UPPER BRACKET**

Once the holes have been drilled or enlarged, attach the upper bracket using the 3/8"-16 x 1-1/2 inch hex bolts, large flat washers and the flanged hex nut, to the frame rail see **Figure "A"**. Large flat washers and nuts to be applied to the back side of the frame rail.

**STEP 6 - INSTALLATION OF THE DRIVER'S SIDE ASSEMBLY**

Follow steps 1-5 for assembly and installation of the driver's side assembly. Note, reverse any orientations for the driver side installation. See **Figure "A"** "Driver's side" selected upper bracket mounting holes. Large flat washers are to be used behind upper bracket mounting holes except as noted in **Figure "A"** the 3/8" flat washer will be used in the location shown. (see **Figure "A"**).

## **STEP 7 - INSTALL THE AIR LINE AND INFLATION VALVE**

Uncoil the air tubing and cut it into two equal lengths. *DO NOT FOLD OR KINK THE TUBING.* Try to make the cut as square as possible. Insert one end of the tubing into the elbow fitting installed in the top of the air helper spring. Push the tubing into the fitting as far as possible refer to **Figure "A"**.

Select a location on the vehicle for the air inflation valves. The location can be on the bumper or the body of the vehicle, as long as it is in a protected location so the valve will not be damaged, but maintain accessibility for the air chuck (*see Figure "B"*). Drill a 5/16" hole and install the air inflation valve using two 5/16" flat washers per valve as supports (*see Figure "C"*). Run the tubing from the air helper spring to the inflation valve, routing it to avoid direct heat from the engine, exhaust pipe, and away from sharp edges. The air line tubing should not be bent or curved sharply as it may buckle with age. Secure the tubing in place with the nylon ties provided. Push the end of the air line tubing into the inflation valve as illustrated (*see Figure "C"*).

## **STEP 8 - CHECK THE AIR SYSTEM**

Once the inflation valves are installed inflate the air helper springs to 50 P.S.I. and check the fittings for air leaks with an applied solution of soap and water. If a leak is detected at a tubing connection then check to make sure that the tube is cut as square as possible and that it is pushed completely into the fitting. The tubing can easily be removed from the fittings by pushing the collar towards the body of the fitting and then pulling out the tube. If a leak is detected where the brass straight fitting screws into the spring, remove the tubing, then screw the straight fitting into the spring one additional turn or until the leak stops. Reinstall the tubing and reinflate the air springs and check for leaks as noted above. Further information on troubleshooting can be found in the General Operation Instruction book included with this kit.

This now completes the installation. Install the wheels and torque the lug nuts to the manufactures specifications. Raise the vehicle by the rear axle and remove the jack stands and lower the vehicle back onto the ground. Re-attach the positive battery cable and remove the wheel chocks from the front wheels. Before proceeding, check once again to be sure you have proper clearance around the air springs. With a load on your vehicle and the air helper springs inflated, you must have at least 1/2" clearance around the air springs. As a general rule, the Sport-Rite Air Helper Springs will support approximately 30 lbs. of load for each P.S.I. of inflation pressure (per pair). For example, 50 P.S.I. of inflation pressure will support a load of approximately 1500 lbs. per pair of air helper springs. *FOR BEST RIDE* use only enough air pressure in the air helper springs to level the vehicle when viewed from the side (front to rear). This amount will vary depending on the load, location of load, condition of existing suspension and personal preference.

### **NOTE:**

Too much air pressure in the air helper springs will result in a firmer ride, while too little air pressure will allow the air helper spring to bottom out over rough conditions. Too little air pressure will also not provide the improvement in handling that is possible. ***TO PREVENT POSSIBLE DAMAGE MAINTAIN A MINIMUM OF 10 P.S.I. IN THE SPORT-RITE AIR HELPER SPRINGS AT ALL TIMES.***

### **NOTE:**

**MIN PRESSURE                      10 PSI**

**MAX PRESSURE (LOADED)   100 PSI**



[www.riderite.com](http://www.riderite.com)

# Firestone

**World's Number 1  
Air Spring.**



FIRESTONE INDUSTRIAL PRODUCTS COMPANY



## Operating Instructions and Trouble Shooting Guide

---

Thank you for purchasing Firestone air helper springs. You have purchased a quality product from the world's number one air spring manufacturer.

This guide will provide answers to some of your questions regarding the use and operation of your new air helper springs. Following the guidelines in this manual will help provide you with many years of trouble-free service from your Firestone air helper springs.

For vehicle applications, air pressure requirements, air compressor CFM, maintenance, or air spring technical data, contact us at:

***www.ride-rite.com***  
**1-800-888-0650**

**INSTALLER: Please leave this manual with the vehicle's owner.**



## **SAFETY TIPS**

### **Never exceed the manufacturer's recommended Gross Vehicle Weight Rating (GVWR)**

As with your vehicle's tires, an air helper spring is a pneumatic device that supports a portion of the vehicle's weight. The air helper spring may fail as a result of punctures, impact damage, improper inflation, improper installation, or improper usage. To reduce the risk of failure, we strongly recommend the following:

**Never overload your vehicle.** The manufacturer's gross vehicle weight rating (GVWR) is stated on the specification plate on the chassis. You should weigh your vehicle on a truck scale when it is fully loaded and in a level condition to determine if you are exceeding the manufacturer's recommended GVWR.

Inspect the inflated air springs to verify that they do not contact any component of the vehicle under normal suspension operation. The air helper spring must flex and expand during normal operation. There must be at least 1/2" of clearance between the inflated air spring and any other component of the vehicle under normal suspension operation.

The kit is designed to clear all chassis components. If there is **any** interference, please call Firestone at 1 (800) 888-0650.

Inspect the air line tubing and the air spring to verify that they have not been too close to the exhaust system. If the distance between any portion of the air spring or air line tubing and the exhaust system is less than 6", a heat shield should be used.

Never inflate the air helper springs beyond the maximum pressure indicated in the installation manual.

Never attempt to remove any component of the air spring assembly when the air springs are inflated.

If an air helper spring has failed while you are on the road, operate your vehicle at reduced speeds. High speed over rough roads will result in severe bottoming of the air spring and may damage other vehicle components.

Never attempt to drive the vehicle in an unlevelled condition. Failure to level a heavily loaded vehicle may result in excessive body roll and possible damage or injury.

If unidentifiable problems exist with your air helper spring kit, visit Firestone on the web at [www.riderite.com](http://www.riderite.com) or call 1 (800) 888-0650 for technical assistance.

Never cut, weld, or modify the air helper springs or brackets.

Do not use aerosol tire repair products in the air helper springs or a tire patch of any kind on the air helper spring. If there is a hole in the air spring it must be replaced.

## **GENERAL INFORMATION**

Firestone air helper springs are heavy duty, quality air springs designed to supplement your vehicle's existing suspension system. These durable air springs allow you to maximize your vehicle's load carrying capacity through the use of air pressure. Proper installation, use, and operation will provide the maximum service life and performance your air spring kit is capable of delivering. These instructions will help you obtain the maximum benefits available from your air spring kit.

### **RIDE-RITE™ AIR HELPER SPRINGS**

Ride-Rite™ air helper springs are installed between the frame and the suspension of trucks, vans, and motorhomes. Ride-Rite™ air helper springs are capable of supporting loads up to 5000 lbs per pair.\*

### **SPORT-RITE™ AIR HELPER SPRINGS**

Sport-Rite™ air helper springs are installed between the frame and suspension of light trucks, and utilize a sleeve-style air spring to enhance the ride when the vehicle is loaded or unloaded. Sport-Rite™ air helper springs are capable of supporting loads up to 3000 lbs per pair.\*

### **LEVEL-RITE™ AIR HELPER SPRINGS**

Level-Rite™ air helper springs replace the existing shock absorber with a fully-protected, reversible sleeve air spring paired it with a high-performance Bilstein monotube shock absorber for perfectly matched performance characteristics over the entire operation spectrum. Level-Rite™ air helper springs are capable of supporting loads up to 1000 lbs per pair.\*

## **BASIC OPERATION**

As your vehicle is loaded, the stock suspension is compressed under the weight of the load. Your vehicle's stock suspension system has been designed so that it will provide optimum performance and handling with a specific load on the vehicle. When your vehicle is loaded, its performance, handling characteristics, and ride quality may be compromised. As the stock suspension is compressed, the ride may become "mushy", and you may encounter sway and handling problems. As weight is added to the vehicle, the air helper springs become an active part of

\*Do not exceed the vehicle's recommended gross vehicle weight rating (GVWR)

the suspension system. As more air pressure is added to the air springs, they will support more weight. You will be able to compensate for a heavy load by adding air pressure to the air springs, thereby reducing sway and handling problems associated with a heavily loaded vehicle.

| <b>TABLE "A"</b>                                                                      |                |
|---------------------------------------------------------------------------------------|----------------|
| <b>ALL TORQUE SPECIFICATIONS</b>                                                      |                |
| Using a torque wrench, torque the threaded fasteners to the following specifications: |                |
| Fasteners used on studs and blind holes in air springs                                | 15 – 20 ft lbs |
| Hex nuts installed on axle straps                                                     | 10 – 15 ft lbs |
| Hex nuts installed on 3/8" hex bolts                                                  | 28 – 32 ft lbs |
| Hex nuts and bolts used to secure brackets to frame                                   | 28 – 32 ft lbs |
| Hex nuts installed on U-bolts                                                         | 15 – 20 ft lbs |
| Hex bolts securing tapered sleeve style air spring to lower bracket                   | 10 – 12 ft lbs |

### **PREVAILING-TORQUE LOCK NUTS**

In order to assure trouble-free operation, your air spring kit includes a variety of self-locking threaded fasteners. Your kit may include prevailing-torque lock nuts. Prevailing-torque lock nuts may be more difficult to install, but will not come loose under normal suspension operation.

### **THREAD LOCKING COMPOUND**

The hex bolts used to secure the air spring to the brackets may have a locking compound applied to the threads. Lock washers are not required when using a fastener with pre-applied thread locking compound. When installing fasteners with thread locking compound, follow the torque recommendations listed in table.

### **HELICAL LOCK WASHERS**

Your air helper spring kit may include helical lock washers. In order to properly use the lock washer, tighten the nut/bolt fastener just enough to flatten the lock washer. Overtightening the fastener may damage the nut or bolt. When using helical lock washers, follow the torque recommendations listed in Table "A".

### **AIR FITTINGS**

Your kit will include one of two types of push-to-connect air fittings: fittings with a thread locking compound pre-applied to the threads or fittings with a Nylon collar in place of the thread locking compound.

The pre-applied thread sealant, thread the air fitting into the air spring and tighten the fitting securely to engage the pre-applied thread sealant.

The Nylon collar, thread the air fitting into the threaded hole on the air spring so that the Nylon collar makes contact with the top of the air spring and then tighten 1/2 turn. No thread sealant is required.

Both types of air fittings allow easy connection between the air fitting and the air line tubing. To install the air line in the fittings, cut the tubing as square as possible using a sharp utility knife or razor blade. Push the air line into the fitting as far as possible. If the tubing must be removed from the fitting, first release the air pressure from the air spring. Push the collar towards the body of the fitting and then pull the tubing out.

### **PRESSURE DIFFERENTIAL BETWEEN AIR SPRINGS**

It is not uncommon to have different pressures between the air springs after the vehicle has been brought to a level condition. If the vehicle is within the manufacturer's recommended gross vehicle weight and you have not achieved a level condition after inflating the air springs to 100 psi, there may be a problem with your stock suspension. The leaf springs may have become fatigued over time or a leaf spring may be fractured. There may be an obstruction in the air system, not allowing the air pressure to reach the air helper springs.

### **AIR SPRING ALIGNMENT AND HEIGHT**

Upon completion of the installation, the air springs should be inspected for proper alignment. Although the air helper springs can function with some misalignment, it is preferred that the air springs be mounted so that they are aligned with as little top to bottom offset as possible.

Check the distance between the upper bracket and lower bracket (design height). The dimensions shown on **Page 5** are a guide to assist in determining the ideal operating height for your air helper springs.

## INFLATING THE AIR SPRINGS

With the air helper springs installed on your vehicle and the vehicle sitting on a level surface, visually verify that the vehicle is in a level state. If the vehicle is not level (front-to-back or from side-to-side) it can be brought to a level position by inflating the air springs. Each air spring has a separate inflation valve. To level the vehicle from front-to-back, add air pressure to both air springs in equal amounts. To level the vehicle from side-to-side, add more air pressure to the air spring on the lower side of the vehicle. When inflating the air springs, add air pressure in small quantities, checking the pressure frequently. The air spring requires much less air volume than a tire, and therefore, will inflate and deflate quickly.

***WARNING: DO NOT EXCEED THE MAXIMUM PRESSURE AS INDICATED IN THE INSTALLATION MANUAL***

## LEVELING THE VEHICLE

Check the level of your vehicle visually. If it is not level, either from front to back or from side to side, level it by inflating your air springs. (If your vehicle is equipped with a cab control unit or automatic control system refer to the directions for that device.) There is one inflation valve for each air spring. To level from front to back, add air pressure to both air springs equally. For side to side, add air pressure to the air springs on the side of the vehicle that is low. When adding air pressure to the air springs, remember that they have a much smaller volume of air than a tire so they will inflate much quicker. Add air pressure in short bursts until the vehicle is level. (NEVER EXCEED 100psi IN EACH AIR SPRING.)

## MAINTENANCE

It is considered normal for air helper springs to lose some air pressure over time. Normal pressure loss should not exceed 3 – 4 psi per week when the air springs are inflated to 50 psi. If the pressure loss is greater than 3 – 4 psi per week, there may be a leak in the system. Each time you check the pressure in the air springs, you will lose 1 – 3 psi. The air pressure should be checked at regular intervals.

It is recommended that the air pressure be checked according to the following guidelines:

- At least monthly intervals during the continuous operation of the vehicle (see above)

- When the vehicle is removed from long-term storage

- If the air springs are used to assist in leveling an RV or camper on uneven ground, ensure that the vehicle is returned to a level ride height before departing.

The brackets used to secure the air helper spring to the vehicle should be inspected periodically for damage and for loose fasteners. Ensure that the air line tubing is clear of any sharp edges and routed away from the exhaust system. The brackets and air line tubing should be inspected every 6 months. Ensure that the threaded fasteners are torqued to the specifications listed on **Page 3**.

Accumulated sand, gravel, or other road debris on the air springs or brackets should be rinsed away with a garden hose each time the vehicle is washed.


If it is necessary to lift the vehicle by the frame, first release the air pressure from the air springs. This will allow the air springs to extend to their maximum length without being damaged. The uninflated air springs are capable of supporting the weight of the axle when the vehicle is lifted by the frame. After servicing of the vehicle is complete, lower the vehicle to the ground and reinflate the air helper springs to the desired pressure. **NOTE:** On Sport-Rite kits the air helper springs must be aired up to 50 psi and then release the air until the air helper springs are to the desired pressure.

## ONLINE AUCTION PURCHASES

Firestone will not replace missing components from any kit purchased through an online auction.



## AIR SPRING TECHNICAL DATA

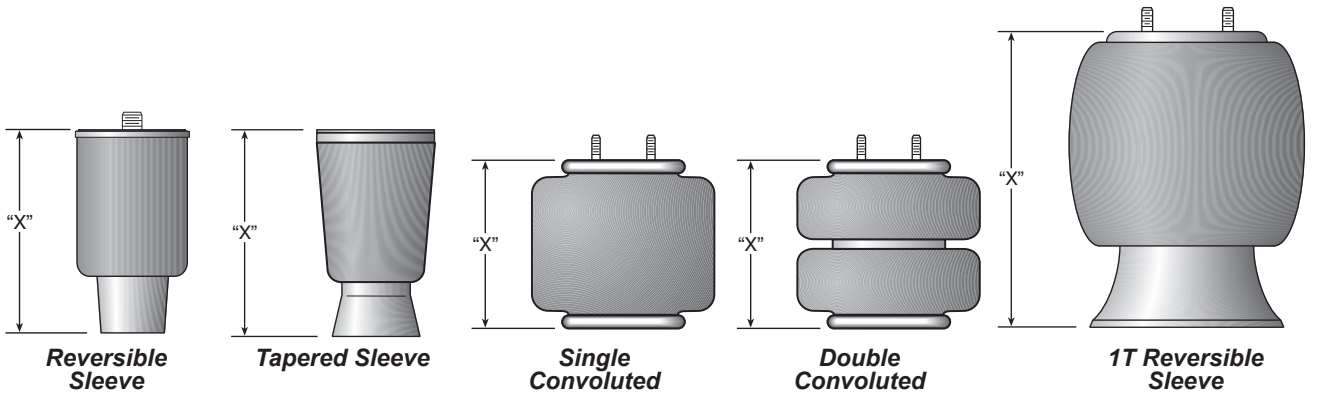

| Part Number          | Description          | Style     | "X" Ride Height | Min/Max Air Pressure | Max Load @100 psi (per pair) |
|----------------------|----------------------|-----------|-----------------|----------------------|------------------------------|
| 6868                 | Single Convoluted    | 160BY     | 5.0" - 6.0"     | 5 / 100 psi          | 3600 lbs                     |
| 6762<br>6764<br>6766 | Double Convoluted    | 268C      | 4.5" - 5.5"     | 5 / 100 psi          | 3200 lbs                     |
| 6397<br>6410<br>6781 | Double Convoluted    | 267C1.5   | 5.5" - 6.5"     | 5 / 100 psi          | 4800 lbs                     |
| 6401<br>6873<br>6859 | Double Convoluted    | 224C      | 5.5" - 7.0"     | 5 / 100 psi          | 5000 lbs                     |
| 7689<br>7701         | Double Convoluted    | 26C       | 7.0" - 8.0"     | 5 / 100 psi          | 5640 lbs                     |
| 7076                 | Reversible Sleeve    | 70mm      | 6.0" x 8.0"     | 10 / 100 psi         | 2000 lbs                     |
| 9000                 | Tapered Sleeve       | 110/70 mm | 7.75" - 8.75"   | 10 / 100 psi         | 3000 lbs                     |
| 9001                 | Tapered Sleeve       | 110/70 mm | 5.88" - 6.88"   | 10 / 100 psi         | 3000 lbs                     |
| 9002                 | Tapered Sleeve       | 110/70 mm | 6.75" - 7.75"   | 10 / 100 psi         | 3000 lbs                     |
| 5405                 | 1T Reversible Sleeve | 1T14C-3   | 8.0" - 12.0"    | 5 / 100 psi          | 6400 lbs                     |

This information is provided for reference purposes only. The bracketry and air springs in the Ride-Rite™ and Sport-Rite™ kits are designed to work with the original suspension and within the manufacture's Gross Vehicle Weight Rating (GVWR) for the intended vehicle. Brackets and air springs should not be interchanged or modified.

## ***TROUBLE SHOOTING GUIDE***

### ***Air spring will not inflate***

Ensure that the air line tubing is inserted into the air fittings as far as possible. The tubing should go in the fitting 3/4 of an inch. You will feel some resistance when the tubing goes past the o-ring.

Clear any dirt or debris from inside the inflation valves.

Inspect the entire length of air line tubing to ensure that it is not kinked, damaged from exhaust heat, or cut due to contact with sharp edges

### ***Air spring will not hold air***

Normal pressure loss is no more than 3 - 4 psi per week when the air spring is inflated to 50 psi.

Using the inflation valve cap as a core tool, ensure that the valve stem core is installed securely.

Apply a solution of soap and water to the air fittings, air line, and air springs to check for leaks. Tighten the air fitting or re-install the tubing in the air fitting to stop the leak. Rinse the soap and water solution from the system when complete.

If a leak can not be detected with the soap and water solution, deflate the air springs and remove them from the vehicle. Re-install the tubing and inflation valve on the air spring and inflate the air spring to a maximum of 20 psi. Submerge the air spring in a bucket of water to check for leaks.

### ***Locations of air leaks***

Leaks occur most often at the threaded connection between the air fittings and the air springs. Tighten the fitting to engage the pre-applied orange thread sealant or until the nylon collar makes contact with the air spring, plus 1/2 turn, depending on which type of fitting is included in your kit. (See air fittings on page 3)

The end of the air line tubing must be cut square and clean to avoid burrs in the connection to the air fittings. The push-to-connect fittings require a square cut to properly seal. The tubing can be removed from the fitting by first releasing the air pressure from the air spring. Push the collar on the fitting toward the body of the fitting. While holding the collar in, pull out the tubing. Cut the tubing squarely and push the tubing into the fitting as far as possible.


### ***The vehicle is not level***

Check for proper inflation of the air springs on each side of the vehicle.

Check for obstructions in the air system or vehicle components that may be restricting suspension travel.

### **IMPORTANT**

**NYLON TUBE CUTTING:**  
FOLLOW THESE INSTRUCTIONS  
TO AVOID LEAKS

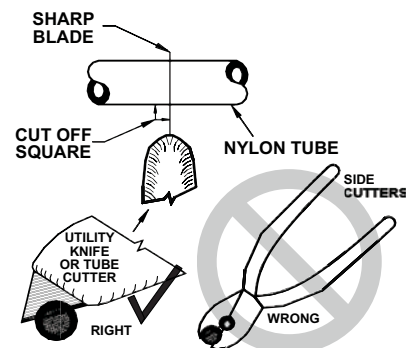

## WARRANTY QUESTIONS

### FIRESTONE LIMITED LIFETIME AIR SPRING WARRANTY

Firestone Industrial Products Company LLC ("Firestone") warrants that its Ride Rite Air Spring Assembly will perform according to the manufacturer's specifications for as long as the vehicle on which the system was originally installed is owned by the original retail purchaser. This limited warranty does not include installation or other service charges for replacement.

#### Warranty Period

The Air Spring is warranted for as long as the original purchaser owns the vehicle on which it was originally installed. The fasteners and upper and lower brackets which accompany the air spring are warranted for a period of twenty-four (24) months or 24,000 miles whichever occurs first. This warranty begins on the original retail delivery date.

#### What is Covered

Any implied warranties are limited in duration to the coverage period of this warranty (some states do not allow limitation on how long an implied warranty lasts so the above limitation may not apply to you). This Warranty runs in favor of the original retail purchaser when the Ride Rite Air Spring Assembly is used under normal operating conditions according to Firestone's specifications and installed on the appropriate application. This warranty does not apply to Ride Rite Air Spring Assemblies that have been improperly applied, improperly installed, used in racing or off road applications or used for commercial purposes. In addition, the warranty will not apply to products which have not been maintained and serviced according to the instructions that accompany the air spring assembly. The consumer will be responsible for any costs incurred in removing the product from the vehicle and the cost to return the air spring assembly to the dealer or installer from which it was purchased. If it is determined that the Ride Rite Air Spring Assembly failed as a result of a manufacturing defect, Firestone will repair or replace, at its option, any product or components subject to this warranty. You should retain a copy of your contract with your installer and your receipt as proof of the date of installation. This warranty is non-transferable and is not assignable in any way.

**Firestone specifically excludes any obligation for consequential damages or incidental expenses including claims for loss of use of the product, loss of time, inconvenience, or commercial loss. This warranty gives you specific legal rights. You may also have other rights that may vary from state-to-state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, express or implied, including implied warranty of merchantability and fitness which extend beyond this warranty.**



### IS A LEAKING AIR SPRING COVERED UNDER WARRANTY?

An air helper spring with a leak does not necessarily indicate that the air spring is defective. Inspect the air spring for obvious punctures or abrasions. A failure caused by a puncture or abrasion to the air spring would not be covered by the material and workmanship warranty. An air helper spring kit that has not been installed according to the published installation manual will not be covered by the warranty. Warranty consideration will only be given if the kit listed in our published application guide is installed on the proper vehicle.

### WHAT DO I DO IF I HAVE A DEFECTIVE PART THAT IS COVERED UNDER WARRANTY?

If you live in the U.S. or Canada, contact Firestone directly at 1-800-888-0650 for warranty assistance. All other customers should contact their purchasing dealer. If the warranty claim is questionable, you may need to purchase a replacement part until the warranty claim can be submitted and reviewed by Firestone. If the warranty claim is determined to be a valid warranty claim, a credit for the purchased part will be issued.

Firestone has made every attempt to assure that your air helper spring kit will properly fit your vehicle. Revised vehicle designs, new model year vehicles, and changes made to the vehicle by the manufacturer can affect proper fit. Any aftermarket chassis or suspension modification made to the vehicle may affect suspension dimensions and may not allow the air helper spring kit to fit the vehicle as intended.

## AIR-RITE™ AIR CONTROL SYSTEMS

Firestone has expanded the offering of Air-Rite Air Control Systems, which provides an instant air source for air suspension products. Adjust the ride for various load and road conditions with a flip of a switch or even a click on a remote. Individual air accessory components are also available, including compressors, air tanks, and mounting solutions, providing a wide variety of air control assist solutions.

Choosing among the Air Command products has now become easier. To select an Air Command Kit from the table below, consider the level of air source and the style of gauge that best fits the application.

### STEP: #1:

Based upon usage, consider the level of air source.

|                            | LIGHT DUTY                                                                                               | STANDARD DUTY                                                                                            | HEAVY DUTY                                                                                               | XTRA                                                                                                      | XTREME                                                                                                     | PRESSURE MONITOR ONLY |
|----------------------------|----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|-----------------------|
| <b>Usage Examples</b>      | Ideal for Coil-Rite, Level-Rite, or consistent loads                                                     | Moderate use Most 1/2 tons                                                                               | Regular use 8-lug or RVs Wide load ranges                                                                | Heavy Use Small Fills (Motorcycle Tires)                                                                  | Heavy Use Large Fills (RV/Truck Tires)                                                                     | No Compressor No Tank |
| <b>Compressor Included</b> | <br>Compressor No. 9377 | <br>Compressor No. 9284 | <br>Compressor No. 9285 | <br>Compressor No. 9285 | <br>Compressor No. 9287 | N/A                   |
| <b>Air Tank Included</b>   | N/A                                                                                                      | N/A                                                                                                      | N/A                                                                                                      | <br>9124 1/2 gal.       | <br>9420 2 gal.         | N/A                   |

### STEP #2:

Select from the assortment of gauge styles.

### STEP #3:

Use the table to choose the Air Command Kit that matches your air source and gauge selection.

|                     |                                                                                                          |               |              |              |              |              |              |              |
|---------------------|----------------------------------------------------------------------------------------------------------|---------------|--------------|--------------|--------------|--------------|--------------|--------------|
| <b>Air Command™</b> | <b>CLASSIC</b><br>    | <b>Single</b> | <b>2538</b>  | <b>2158</b>  | <b>2097</b>  | <b>2266</b>  | <b>2543</b>  | <b>2196</b>  |
|                     |                                                                                                          | <b>Dual</b>   |              | <b>2178</b>  | <b>2219</b>  | <b>2168</b>  | <b>2549</b>  |              |
|                     | <b>ELECTRONIC</b><br> | <b>Single</b> | <b>2490</b>  | <b>2544</b>  |              |              |              |              |
|                     |                                                                                                          | <b>Dual</b>   | <b>2491</b>  | <b>2545</b>  |              |              |              |              |
|                     | <b>REMOTE</b><br>     | <b>Dual</b>   | <b>2489</b>  | <b>2540</b>  | <b>2541</b>  | <b>2546</b>  | <b>2547</b>  |              |
|                     | <b>Warranty Period</b>                                                                                   |               | <b>1 yr.</b> | <b>1 yr.</b> | <b>2 yr.</b> | <b>2 yr.</b> | <b>2 yr.</b> | <b>2 yr.</b> |