

Installation Instructions for 10378 & 10379 Quick Connect

Installation Instructions:

1. Crimp terminals onto wire using JEGS crimp tool #555-80567.
2. Note in Figure 1 the orientation of the housing and the terminal. Also, note the housing has a positive(+) and a negative(-) symbol molded into the housing.
3. With the logo on the housing facing up; and the "bump" at the end of the terminal also facing up slide the wire assembly into the housing until it locks. See Figure 2.

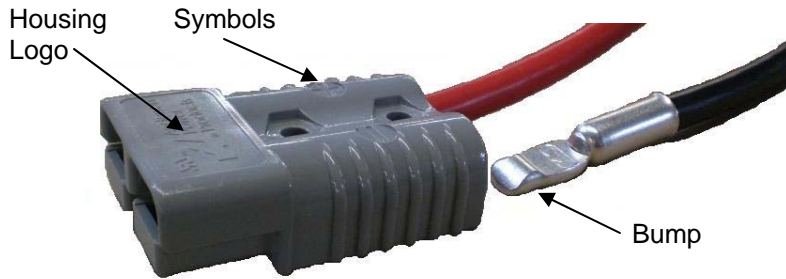


FIGURE 1



FIGURE 2