


70607 DEFROST KIT INSTALLATION for 70603 Heater

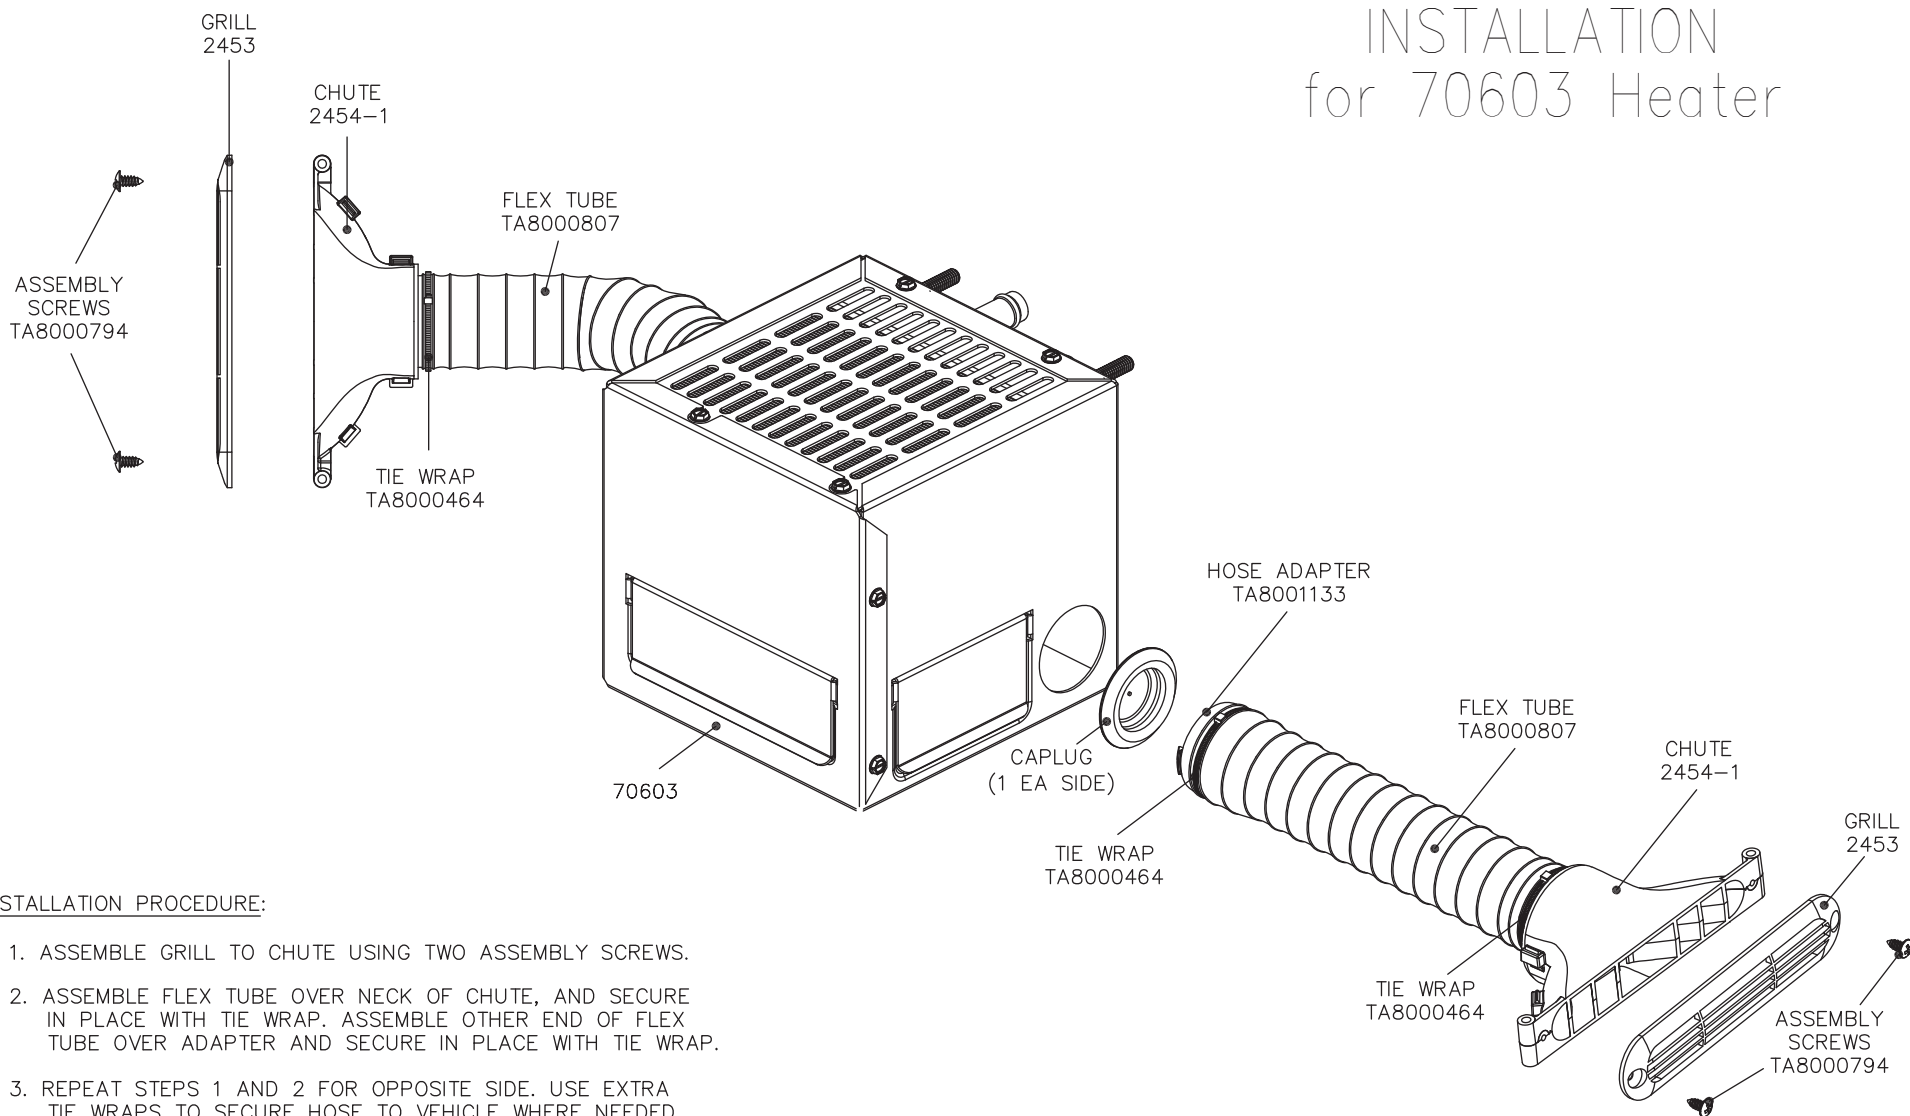

INSTALLATION PROCEDURE:

1. ASSEMBLE GRILL TO CHUTE USING TWO ASSEMBLY SCREWS.
2. ASSEMBLE FLEX TUBE OVER NECK OF CHUTE, AND SECURE IN PLACE WITH TIE WRAP. ASSEMBLE OTHER END OF FLEX TUBE OVER ADAPTER AND SECURE IN PLACE WITH TIE WRAP.
3. REPEAT STEPS 1 AND 2 FOR OPPOSITE SIDE. USE EXTRA TIE WRAPS TO SECURE HOSE TO VEHICLE WHERE NEEDED.
4. REMOVE CAPLUG FROM EACH SIDE OF HEATER HOUSING.
5. SNAP ADAPTER INTO HOLE IN HOUSING.



1-800-345-4545

JEGS.COM