


Installation Instructions for 50601


SB/BB-Chevy Low-Mount Alternator Kit

For Alternators: 555-10170, 358-2025 & 358-2026

Description	QTY	SB-Chevy		BB-Chevy	
		10170	2025/2026	10170	2025/2026
Bracket - Alt Mount - SBC/BBC LH	1	X	X	X	X
Spacer - 2.570" - for 3/8" Bolt	2	A	A		
Spacer - 0.940" - for 3/8" Bolt	1	B	B		
3/8"-16 x 3-3/4" Bolt	2	C	C		
Spacer - 2.570" - for 7/16" Bolt	2			D	D
Spacer - 0.940" - for 7/16" Bolt	1			E	E
7/16"-14 x 3-3/4" Bolt	2			F	F
7/16" Lock Washer	2			G	G
M8 x 50 Bolt	1	X	X	X	X
5/16" Lock Washers	1	X	X	X	X
3/8"-16 x 2" Bolt	1	X	X	X	X
3/8" Lock Washers	3	X	X	X	X
3/8" Flat Washers	2	X	X	X	X
3/8" Nut	1	X	X	X	X

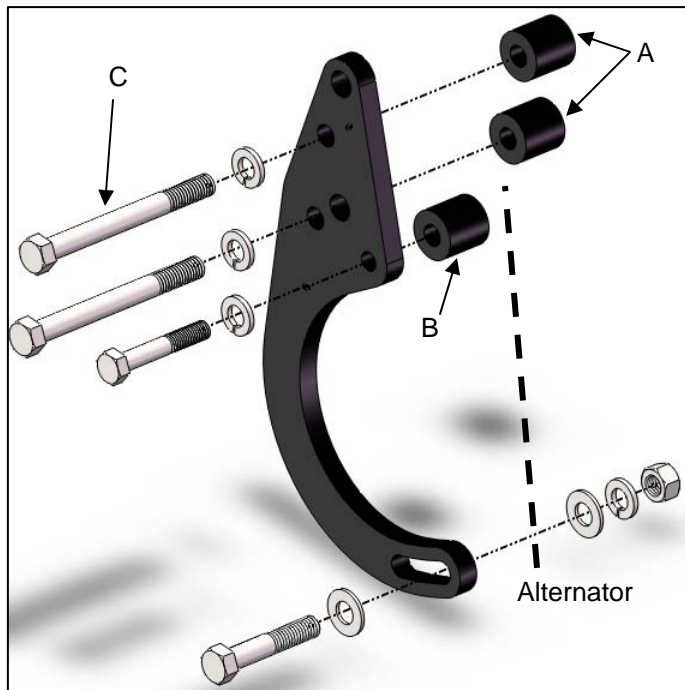

Small Block

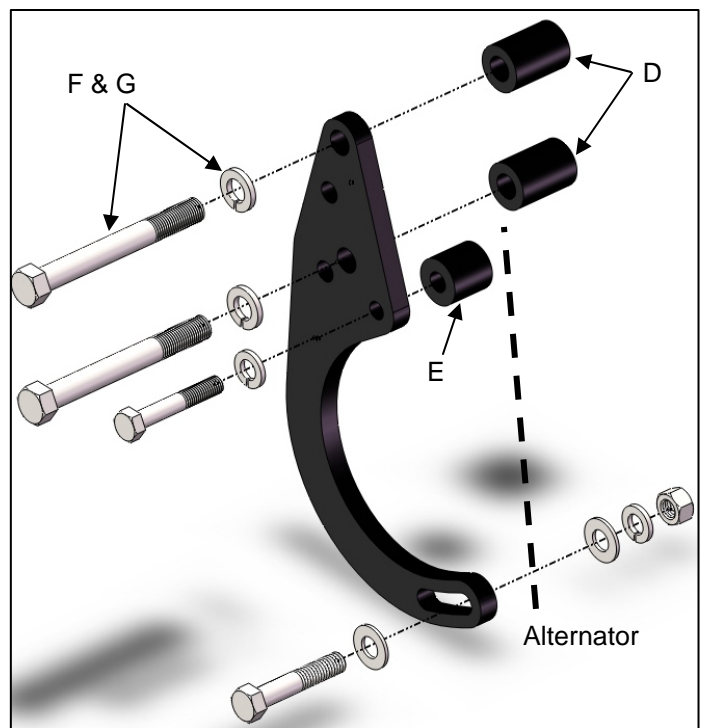

Big Block