



# ***Installation Instructions for 60950 & 60953 Powerglide Transmission Shield***

## **Installation Instructions:**

1. Read instructions before starting.
2. Remove the bolts as shown in Figure 1 & Figure 2.
3. Place rear mounting brackets in position and secure with original bolts as shown. Use the longer of the small brackets on the left side of transmission. (DO NOT TIGHTEN)
4. Position longest bracket at lowest point on converter cover flange left side of transmission as shown in Figure 2. Secure with 1/4" x 3/4" socket head bolt included with shield. (DO NOT TIGHTEN)

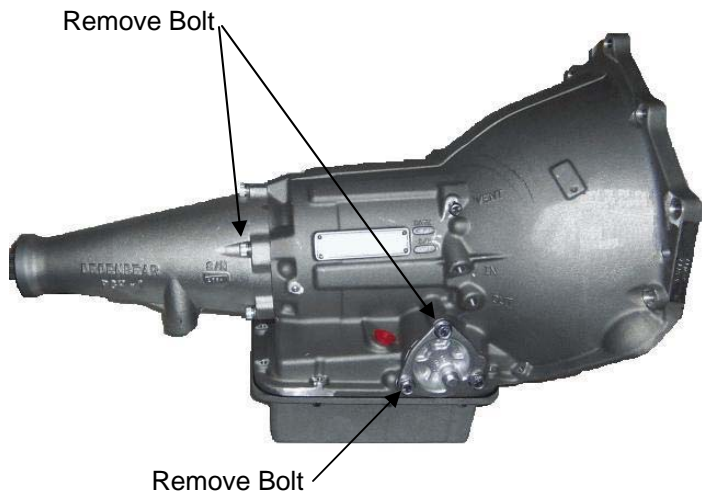

**FIGURE 1**

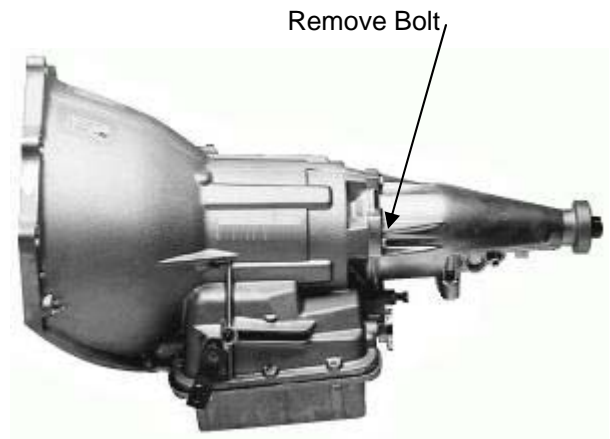

**FIGURE 2**

**THIS SHIELD MEETS SFI 4.1 SPECS. WHEN PROPERLY INSTALLED**

5. Position shield over transmission and secure with 3/8" x 1" flat socket head bolts. (DO NOT TIGHTEN)
6. With the three remaining flat socket head bolts 3/8" x 3/4" fasten shield to brackets. (TIGHTEN ALL BOLTS)
7. If cooler lines interfere with shield. Bend slightly, being careful not to crimp lines.
8. To install gold bottom, position strap over holes in sides of shield, with strap against bottom of transmission pan. Next locate and drill 3/8" hole in strap for attaching shield.
9. This strap is long enough to use with deep aluminum pans. If you have a stock pan you might want to cut off strap an inch above the holes you drilled. Be sure the shield or strap does not touch shift lever or cable.